

[Manuals.plus](#) /

› [Fujifilm](#) /

› Fujifilm FinePix F20 Digital Camera User Manual

Fujifilm 15652157

Fujifilm FinePix F20 Digital Camera User Manual

Model: 15652157

1. INTRODUCTION

The Fujifilm FinePix F20 is a 6.3-megapixel advanced compact digital camera designed for ease of use and high-quality results. It incorporates Fujifilm's Picture Stabilization Technology, which utilizes high sensitivity to minimize camera shake and freeze subject movement, particularly in low-light conditions. The camera features the second generation of Fujifilm's Real Photo Technology, including a 6th generation Super CCD and RP Processor II, which enhances light capture and reduces noise, allowing for ISO 2000 sensitivity. Additional features include a 2.5-inch LCD display with anti-glare viewing, Dual Shooting mode for capturing images with and without flash, and an I-Flash intelligent flash system for optimized exposure. The FinePix F20 is equipped with a Fujinon 3x optical zoom lens and a rechargeable Lithium-Ion battery, offering quick startup and continuous shooting capabilities.

2. WHAT'S IN THE BOX

Upon opening the package, please ensure all the following items are present:

- Fuji Finepix F20 digital camera
- Li-ion battery NP-70
- AC power adapter AC-5VC
- Hand strap
- USB cable for the Finepix F20
- AV cable for the Finepix F20
- CD-ROM: FinepixViewer, ImageMixer VCD2 LE for Finepix
- Owner's manual (this document)

3. SETUP

3.1. Charging the Battery

Before initial use, fully charge the supplied Li-ion battery NP-70. Connect the AC power adapter AC-5VC to the camera and a power outlet. The charging indicator will illuminate during charging and turn off when complete.

3.2. Inserting the Battery and Memory Card

Open the battery/card compartment cover located on the bottom of the camera. Insert the charged NP-70 battery, ensuring correct orientation. Insert a compatible xD-Picture Card (not included) into the memory card slot until it clicks into place. Close the compartment cover securely.



Figure 3.2.1: Front view of the Fujifilm FinePix F20 Digital Camera, showing the lens, flash, and branding.

3.3. Attaching the Hand Strap

Thread the supplied hand strap through the strap eyelet on the side of the camera to prevent accidental drops.

3.4. Initial Settings

Upon first power-on, the camera may prompt you to set the date, time, and language. Follow the on-screen instructions using the directional pad and MENU/OK button.

4. OPERATING THE CAMERA

4.1. Powering On/Off

Press the **POWER** button located on the top of the camera to turn it on or off.

4.2. Taking Pictures

1. Turn on the camera.
2. Frame your shot using the 2.5-inch LCD monitor.
3. Use the zoom lever (W/T) to adjust the 3x optical zoom.
4. Press the shutter button halfway down to focus. The focus indicator will confirm focus.
5. Press the shutter button fully down to take the picture.



Figure 4.2.1: Back view of the Fujifilm FinePix F20 Digital Camera, highlighting the LCD screen and various control buttons including the zoom lever and directional pad.

4.3. Shooting Modes and Settings

The FinePix F20 offers various shooting modes and settings accessible via the **MENU/OK** button and directional pad. Key settings include:

- **Picture Stabilization:** Activated by a dedicated button, this feature automatically adjusts ISO and shutter speed to reduce blur.
- **Flash Modes:** Cycle through Auto, Red-eye Reduction, Forced Flash, Suppressed Flash, and Slow Synchro using the flash button.
- **Dual Shooting Mode:** Captures two images, one with flash and one without, allowing you to choose the best result.
- **Playback Mode:** Press the playback button to view captured images and videos.

5. MAINTENANCE

5.1. Cleaning the Camera

Use a soft, dry cloth to clean the camera body. For the lens and LCD screen, use a specialized lens cleaning cloth and solution. Avoid using abrasive cleaners or solvents.

5.2. Storage

When not in use for extended periods, remove the battery and store the camera in a cool, dry place, away from direct sunlight and extreme temperatures. Use a camera case for protection during transport.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not turn on.	Battery is depleted or incorrectly inserted.	Charge the battery fully. Ensure the battery is inserted with correct polarity.
Cannot take pictures.	Memory card is full, locked, or not inserted.	Delete unnecessary images, unlock the memory card, or insert a new card.
Images are blurry.	Camera shake, subject movement, or out of focus.	Use Picture Stabilization. Ensure proper focus before shooting. Use a tripod if necessary.
Flash does not fire.	Flash mode is set to "Suppressed Flash" or battery is low.	Change flash mode. Recharge battery.

7. SPECIFICATIONS

Feature	Detail
Brand	Fujifilm
Model Number	15652157
Product Dimensions	7 x 5.5 x 4.5 inches
Item Weight	1.8 pounds
Photo Sensor Technology	CCD
Image Stabilization	Optical
Optical Zoom	3x
Maximum Aperture	2.8 Millimeters
Supported File Format	JPEG
Aspect Ratio	4:3
Compatible Mountings	Fujifilm G
Manufacturer	Fuji Film USA
Date First Available	October 2, 2001

8. WARRANTY AND SUPPORT

Please note the following regarding warranty for this product:

NO WARRANTY!!! AS IS ITEM!!!!

For further assistance or inquiries, you may visit the official Fujifilm Store on Amazon:[Fujifilm Store](#).

