

[Manuals.plus](#) /

› [Hasbro](#) /

› Hasbro Optimus Prime - Transformers Cybertron Deluxe Instruction Manual

Hasbro 080286AC

Hasbro Optimus Prime - Transformers Cybertron Deluxe

MODEL: 080286AC

Product Overview

The Hasbro Optimus Prime - Transformers Cybertron Deluxe figure is a collectible action figure designed for ages 5 and up. This figure features the iconic Optimus Prime character, capable of transforming between a robot warrior mode and a menacing beast mode. It incorporates Cyber Planet Key-activated features, enhancing playability with unique accessories in each form.



This image displays the Hasbro Optimus Prime Transformers Cybertron Deluxe figure in its robot form, showcasing its detailed design and articulation.

Initial Setup

Upon unboxing, ensure all components are present. The figure comes pre-assembled. No batteries are required for basic operation, though some features may be activated by the included Cyber Planet Key.

Transformation from Robot to Beast Mode

1. Carefully articulate the robot's legs and arms to begin repositioning.
2. Fold and rotate the torso section as indicated by the figure's design to form the beast's body.

3. Adjust the head and limb panels to complete the beast mode transformation.
4. Ensure all parts are securely locked into place for stability.

To transform back to robot mode, reverse these steps, carefully unfolding and rotating parts until the robot form is achieved.

Operating Features

Cyber Planet Key Activation

The Optimus Prime figure includes a Cyber Planet Key that activates specific features in both modes. Locate the designated slot on the figure (typically on the back or side). Insert the Cyber Planet Key firmly into the slot to activate the following:

- **Beast Mode:** Activates a jet-powered flying board.
- **Robot Mode:** Deploys a snap-on assault blade.

Remove the key to deactivate the feature. Always handle the key and figure with care to prevent damage.

Care and Maintenance

- **Cleaning:** Wipe the figure with a soft, dry cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the paint and plastic.
- **Storage:** Store the figure in a cool, dry place away from direct sunlight and extreme temperatures to prevent discoloration or warping.
- **Handling:** Always handle the figure by its main body parts. Avoid excessive force when transforming or posing to prevent breakage of smaller components or joints.

Troubleshooting

- **Stiff Joints:** If joints are stiff, gently work them back and forth. Do not force movement. A small amount of silicone-based lubricant (*not petroleum-based*) can be applied sparingly if necessary, but consult manufacturer guidelines first.
- **Loose Parts:** If a part feels loose, check if it is designed to be detachable or if it needs to be re-seated. For persistent looseness, contact customer support.
- **Transformation Difficulties:** Refer to the transformation steps provided. Ensure all parts are aligned correctly before attempting to force a connection.

Product Specifications

| | |
|------------------------------|------------------|
| Brand Name | Hasbro |
| Model Number | 080286AC |
| UPC | 653569171775 |
| ASIN | B000GKC976 |
| Age Range Description | Kid (5-11 years) |
| Material Type | Plastic |

| | |
|-----------------------------|---------------------|
| Item Dimensions | 3 x 7.5 x 12 inches |
| Item Weight | 0.01 Ounces |
| Theme | Jungle, Robot |
| Is Assembly Required | No |

Warranty and Support

For information regarding product warranty, replacement parts, or further assistance, please contact Hasbro customer support directly. Details can typically be found on the product packaging or on the official Hasbro website. Keep your purchase receipt as proof of purchase.

Official Product Videos

No official product videos are available for embedding at this time.