

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Winsome](#) /

› [Winsome Mobile Kitchen Cart, Beech \(Model 84920\) - Instruction Manual](#)

Winsome 84920

Winsome Mobile Kitchen Cart, Beech (Model 84920) - Instruction Manual

Brand: Winsome | Model: 84920

1. PRODUCT OVERVIEW

The Winsome Mobile Kitchen Cart (Model 84920) is a versatile and compact solution designed to enhance workspace and storage in kitchens. Constructed from solid beechwood with a natural finish, it features two convenient drop leaves that expand the countertop area, a deep utensil drawer, an open shelf, and a two-door storage cabinet for larger items. Equipped with lockable casters, this cart offers mobility and stability, allowing it to be easily moved and secured as needed.



Figure 1: Front view of the Winsome Mobile Kitchen Cart with drop leaves folded.



Figure 2: Top view of the Winsome Mobile Kitchen Cart with drop leaves extended, ready for use.

2. PRODUCT COMPONENTS

Before assembly, ensure all components listed below are present and undamaged. Refer to the assembly video for visual identification of parts.

Your browser does not support the video tag.

Video 1: Overview of Winsome Kitchen Cart components and hardware.

2.1 Wood Components

- **A:** Cart Top (Pre-assembled with drop-leaf mechanism) - Quantity: 1
- **B1, C1, D1, E1:** Legs (Labeled at bottom) - Quantity: 4 (2 front, 2 rear)
- **F:** Rear Panel (Small) - Quantity: 1
- **G:** Side Panel (with notches) - Quantity: 2
- **I:** Middle Panel (with magnets) - Quantity: 1
- **J:** Bottom Panel - Quantity: 1
- **K:** Side Panel (Short) - Quantity: 2
- **L:** Back Panel (Long) - Quantity: 1
- **M:** Left Door - Quantity: 1
- **N:** Right Door - Quantity: 1

- **Z1:** Front Panel (Drawer) - Quantity: 1
- **Z2:** Side Panel (Drawer) - Quantity: 2
- **Z3:** Back Panel (Drawer) - Quantity: 1
- **Z4:** Bottom Board (Drawer) - Quantity: 1

2.2 Hardware & Accessories

- **H:** Metal Rod (Towel Bar) - Quantity: 1
- **P:** Small Bolt (Phillips) - Quantity: 6
- **R:** Handle - Quantity: 3 (for drawer and doors)
- **S:** Metal Peg (for adjustable shelf) - Quantity: 4
- **T:** Hex Screw (Long) - Quantity: 12
- **U1:** Wheel with Lock - Quantity: 2
- **V1:** Wheel (without lock) - Quantity: 2
- **W:** Wood Plug - Quantity: 12
- **X:** Hex Screw (Short) - Quantity: 4
- **Y:** Screw (Phillips) - Quantity: 8
- Hex Wrench - Quantity: 1

3. ASSEMBLY INSTRUCTIONS

Follow these steps carefully for proper assembly. A Phillips head screwdriver is required and not included.

Step 1: Attach Side Panels to Cart Top

1. Place the Cart Top (A) upside down on a clean, soft surface.
2. Attach the Side Panels (G) to the Cart Top (A) using four short Hex Screws (X). Ensure the notched side of panel G faces outwards.

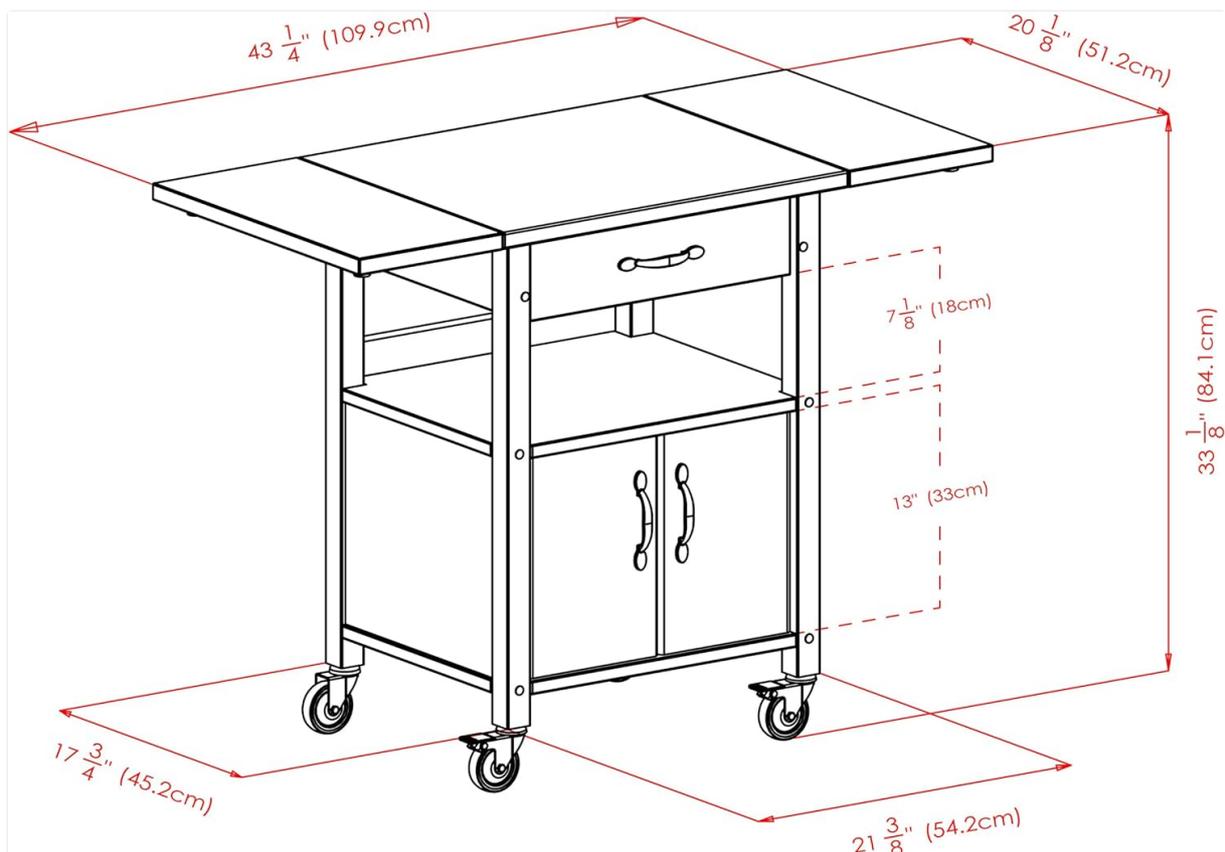


Figure 3: Initial assembly step, attaching side panels to the cart top.

Step 2: Assemble Rear Frame

1. Connect the Rear Panel (Small) (F) between two Legs (D1 and E1) using the dowels. Ensure the short dowel on F aligns with the bottom hole on the legs.
2. Insert the Metal Rod (H) through the designated holes in Legs (D1 and E1).
3. Slide the Back Panel (Long) (L) into the grooves of Legs (D1 and E1).
4. Secure the assembly to the Cart Top (A) using two long Hex Screws (T) on each side, ensuring the drawer stopper is on the opposite side of the back panel.



Figure 4: Rear view of the assembled cart frame.

Step 3: Attach Middle Panel and Doors

1. Attach the Middle Panel (I) to the frame using two long Hex Screws (T). Ensure the magnets on panel I face the front.
2. Install the Handles (R) onto the Left Door (M) and Right Door (N) using Small Bolts (P) and a Phillips head screwdriver.
3. Insert the Metal Pegs (S) into the pre-drilled holes on the top and bottom edges of the doors (M and N).
4. Carefully align the Metal Pegs (S) on the doors with the corresponding holes in the Middle Panel (I) and the Bottom Panel (J) (to be attached in Step 5).



Figure 5: Cabinet doors open, showing interior and handles.

Step 4: Attach Side Panels (K)

1. Slide the two Side Panels (K) into the grooves of the remaining Legs (B1 and C1).
2. Attach the assembled side sections to the main cart body using long Hex Screws (T) at the top and bottom.

Step 5: Attach Bottom Panel (J) and Casters

1. Place the Bottom Panel (J) onto the bottom frame, ensuring it sits securely in the grooves.
2. Insert the two Wheels with Lock (U1) into the front legs and the two Wheels (V1) into the rear legs. Gently tap with a rubber mallet if needed.



Figure 6: Fully assembled kitchen cart with casters.

Step 6: Assemble the Drawer

1. Attach the Handle (R) to the Front Panel (Drawer) (Z1) using Small Bolts (P).
2. Connect the Side Panels (Drawer) (Z2) to the Front Panel (Drawer) (Z1) using Screws (Y).
3. Slide the Bottom Board (Drawer) (Z4) into the grooves of the assembled drawer sides.
4. Attach the Back Panel (Drawer) (Z3) to complete the drawer assembly.
5. Slide the completed drawer into the designated slot beneath the Cart Top.

Your browser does not support the video tag.

Video 2: Detailed assembly process for the Winsome Kitchen Cart.

4. OPERATING INSTRUCTIONS

4.1 Drop Leaves

- To extend the drop leaves: Gently pull the leaf outwards until the support mechanism locks into place.
- To fold the drop leaves: Push the support mechanism inwards to release the lock, then carefully lower the leaf.

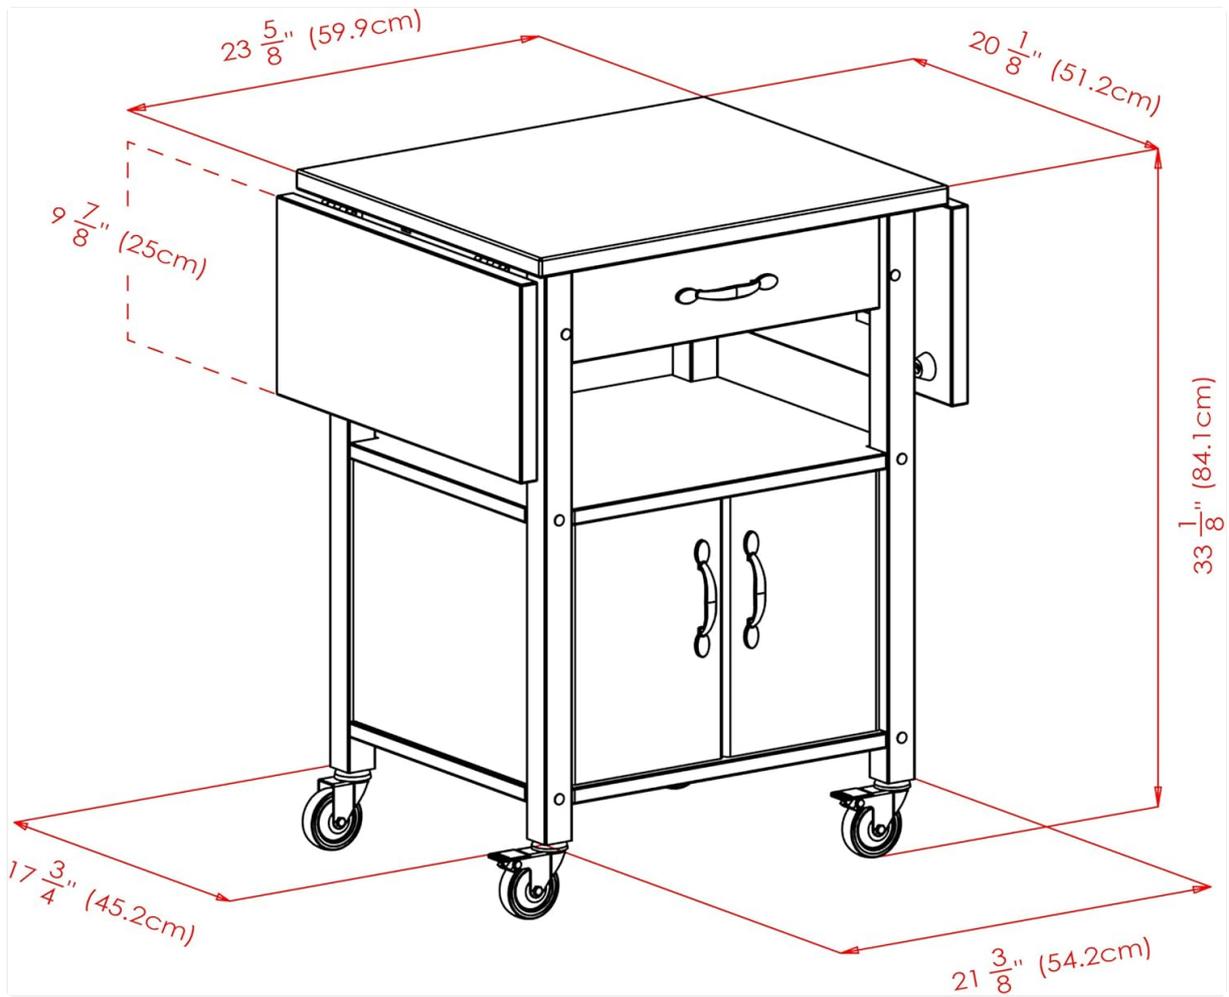


Figure 7: Kitchen cart with drop leaves folded for compact storage.

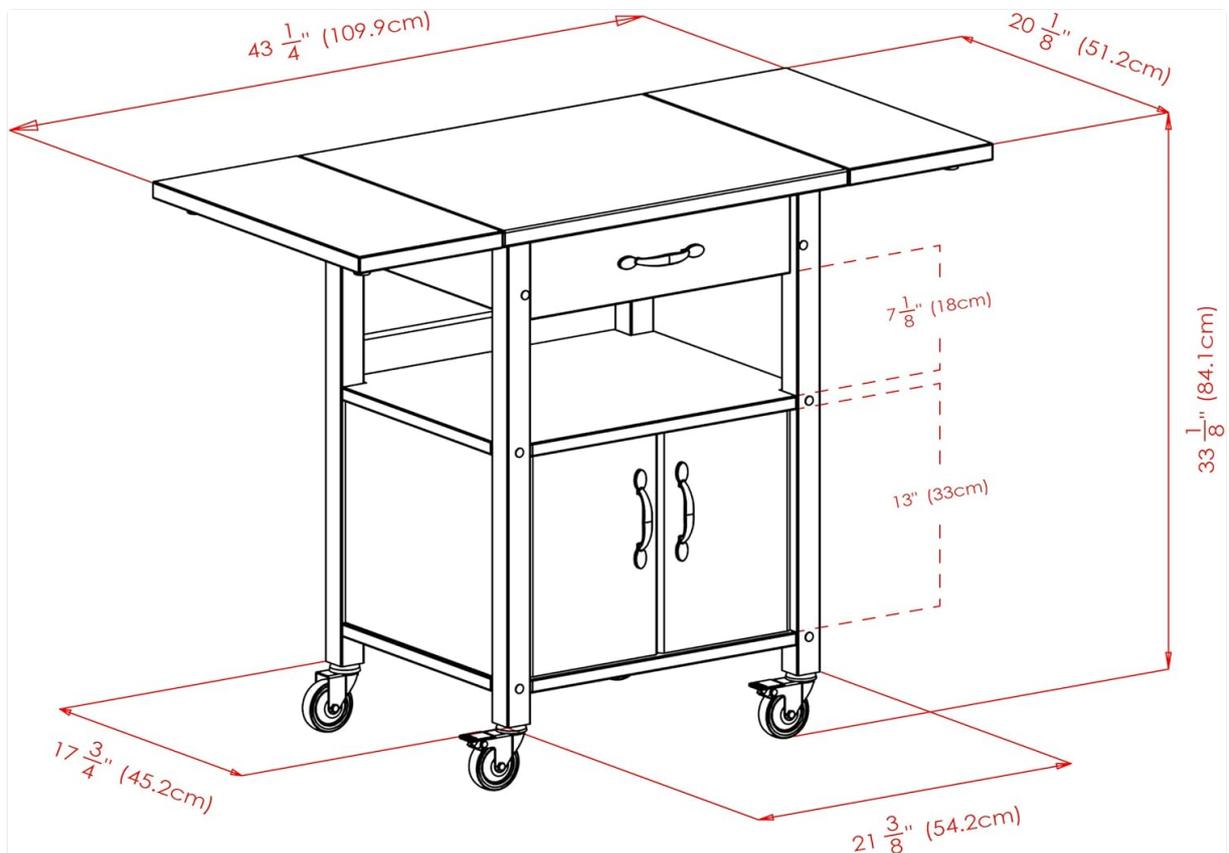


Figure 8: Kitchen cart with drop leaves extended for additional workspace.

4.2 Lockable Casters

- To lock the wheels: Press down on the lever located on the two front casters until it clicks into place. This will prevent the cart from moving.
- To unlock the wheels: Lift the lever on the two front casters until it releases. The cart will then be free to move.

4.3 Drawer and Cabinet Doors

- The drawer slides smoothly on its runners. To remove the drawer completely, locate and disengage the drawer stops (if applicable) or lift the drawer slightly at the front and pull it out.
- The cabinet doors are held closed by magnetic catches. Gently pull the handles to open the doors.

5. MAINTENANCE & CARE

- **Cleaning:** Wipe the cart with a damp cloth. Avoid harsh chemicals or abrasive cleaning products.
- **Wood Care:** As this product is made of wood, avoid prolonged exposure to moisture or direct sunlight to prevent warping or discoloration.
- **Hardware:** Periodically check and tighten any loose screws or bolts to ensure stability.

6. TROUBLESHOOTING

- **Wobbly Cart:** Ensure all screws and bolts are securely tightened. Check that the casters are properly installed and locked when stationary.
- **Drawer Sticking:** Check for any obstructions in the drawer runners. Ensure the drawer is assembled correctly and slides freely.
- **Damaged/Missing Parts:** If you receive damaged or missing parts, please contact Winsome customer support for assistance.

7. SPECIFICATIONS

Product Dimensions (Expanded)	43.27"D x 46.75"W x 33.07"H
Product Dimensions (Compact)	25.25"W x 20"D x 33.25"H
Material	Solid / Composite Wood (Beech)
Color	Beech
Item Weight	66 pounds
Maximum Weight Recommendation (Top)	50 Pounds
Number of Shelves	2 (1 open, 1 inside cabinet)
Assembly Required	Yes

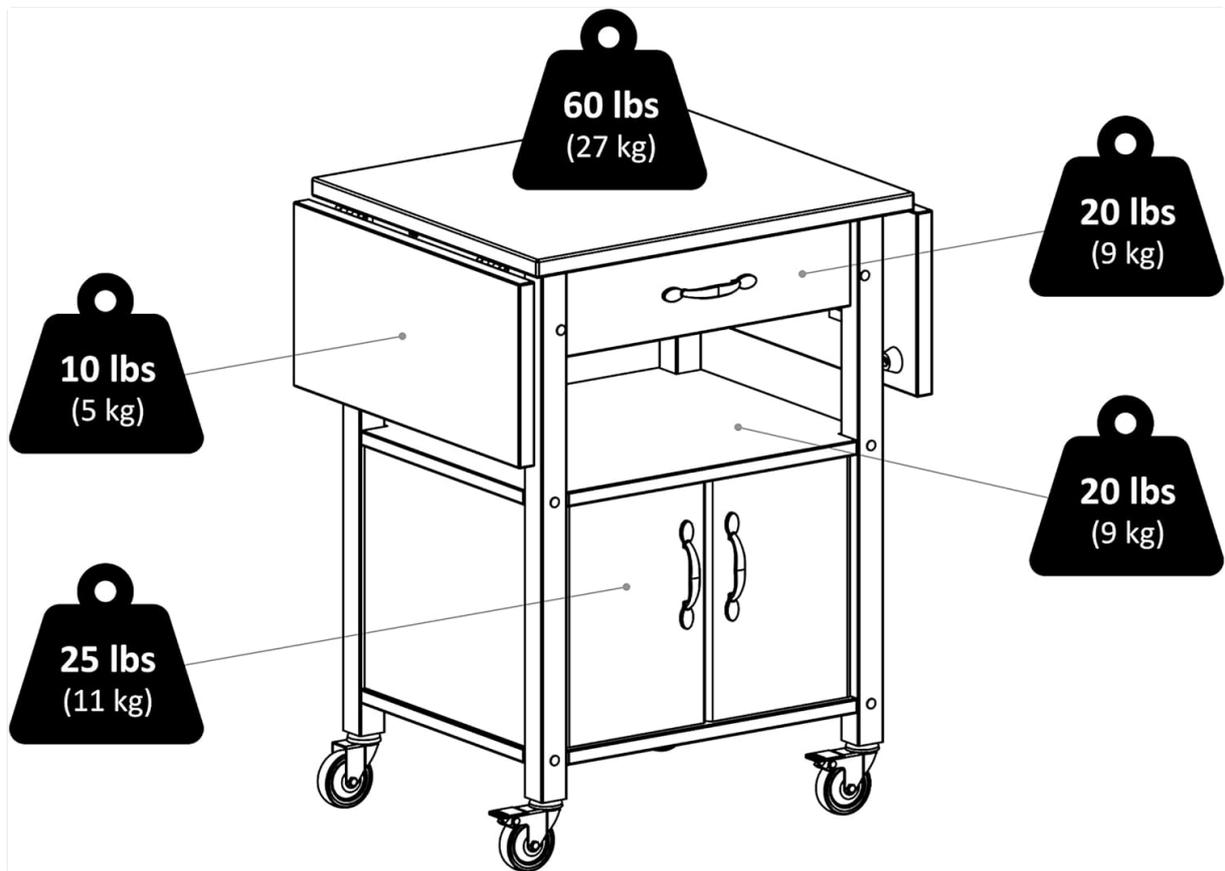


Figure 9: Weight capacities for the Winsome Mobile Kitchen Cart.

8. WARRANTY & SUPPORT

Winsome offers replacement parts for up to 60 days from the date of purchase. For any questions, concerns, or to request replacement parts, please contact Winsome customer support. You can find contact information on the Winsome website or through your retailer.