

KidKraft 63027

KidKraft 27-Piece Pastel Cookware Set (Model 63027)

INSTRUCTION MANUAL

1. Introduction

This manual provides essential information for the KidKraft 27-Piece Pastel Cookware Set, Model 63027. This set is designed to enhance imaginative play in children aged 18 months and older, offering a complete collection of durable plastic dishes and utensils for pretend cooking and serving.



Image 1: The complete KidKraft 27-Piece Pastel Cookware Set, featuring various pastel-colored plates, bowls, cups, utensils, a pot with lid, and a frying pan.

2. Components Included

The KidKraft 27-Piece Pastel Cookware Set includes the following items:

- 4 x Plates (pastel colors)
- 4 x Bowls (pastel colors)
- 4 x Cups (pastel colors)
- 4 x Forks (pastel colors)
- 4 x Knives (pastel colors)
- 4 x Spoons (pastel colors)
- 1 x Pot with Lid (pastel colors)
- 1 x Frying Pan (pastel color)



Image 2: An overhead view showcasing all 27 pieces of the cookware set, including plates, bowls, cups, utensils, a pot, and a frying pan in various pastel shades.

3. Setup and First Use

1. **Unpack:** Carefully remove all components from the packaging.
2. **Inspect:** Check all pieces for any damage or missing parts. Contact customer support if any issues are found.
3. **Clean:** Before first use, wash all dishes and utensils with mild soap and water. Rinse thoroughly and allow to air dry.

4. Operating Instructions (Imaginative Play)

This cookware set is designed to encourage imaginative and role-playing activities. Children can use the various pieces to simulate cooking, serving, and dining experiences.

- Use the pot and pan for pretend cooking.
- Set the table with plates, bowls, cups, and silverware for imaginary meals.
- Encourage interaction and sharing during play.



Image 3: A child engaged in imaginative play, arranging the pastel cups and plates from the set on a table.



Image 4: A child demonstrating how to use the pot and lid from the cookware set during play.

5. Care and Maintenance

To ensure the longevity of your KidKraft 27-Piece Pastel Cookware Set, follow these care instructions:

- **Cleaning:** Wash all plastic pieces with mild soap and water after each play session. Rinse thoroughly to remove all soap residue.
- **Drying:** Allow all pieces to air dry completely before storing to prevent moisture buildup.
- **Storage:** Store the set in a clean, dry place away from direct sunlight and extreme temperatures.



Image 5: Various pieces of the cookware set, including cups, bowls, and plates, are shown neatly organized on the shelves of a play kitchen, demonstrating proper storage.

6. Safety Information

This product is intended for children aged 18 months and up. Adult supervision is recommended during play to ensure safe use.

- Regularly inspect all pieces for signs of wear or damage. Discontinue use if any part is broken or presents a choking hazard.
- Keep small parts away from children under 3 years of age.
- This product is for pretend play only and should not be used with real food or liquids for consumption, nor should it be heated in real ovens or microwaves.

7. Product Specifications

Product Dimensions	9.06 x 3.54 x 5.51 inches
Item Weight	1.5 pounds


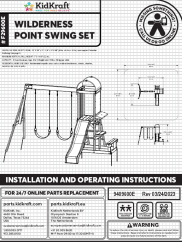


Model Number	63027
Recommended Age	18 months and up
Manufacturer	KidKraft

8. Warranty and Support

For specific warranty information, product support, or to inquire about replacement parts, please visit the official KidKraft website or contact their customer service directly. This manual does not contain detailed warranty terms.

KidKraft Official Website: [Visit the KidKraft Store](#)

Related Documents - 63027

	<p>Ainsley Outdoor Play Set - Installation and Operating Instructions</p> <p>Comprehensive guide for the installation and safe operation of the Ainsley Outdoor Play Set (Model 00400) by KidKraft. Includes safety warnings, assembly steps, maintenance guidelines, and warranty information.</p>
	<p>KidKraft Wilderness Point Swing Set: Installation and Safety Guide</p> <p>This guide provides essential installation, operating, and safety instructions for the KidKraft Wilderness Point Swing Set, ensuring a safe and enjoyable play experience for children. Includes assembly details, maintenance tips, and warranty information.</p>
	<p>KidKraft Boulder Station Play System F23890: Installation and Operating Instructions</p> <p>Comprehensive installation and operating instructions for the KidKraft Boulder Station Play System (Model F23890). Includes safety warnings, maintenance guidelines, parts identification, and assembly steps for this residential outdoor play structure.</p>
	<p>KidKraft First Play Wooden Swing Set Assembly Instructions</p> <p>Detailed assembly instructions for the KidKraft First Play Wooden Swing Set (models 20473, 20504). Includes a comprehensive parts list, hardware guide, and step-by-step visual assembly instructions. Follow these steps carefully to ensure safe and correct installation of your swing set.</p>



Detailed assembly instructions for the KidKraft 10240 2-in-1 Kitchen and Laundry play set. Includes parts list, hardware identification, and step-by-step guidance for building the toy.



Detailed installation and operating instructions for the KidKraft Canyon Ridge F25715 outdoor play set. Includes safety warnings, maintenance guidelines, and assembly steps.