

[Manuals.plus](#) /

> [Nikon](#) /

> Nikon COOLSTATION MV-14 User Manual

Nikon MV-14

Nikon COOLSTATION MV-14 User Manual

Model: MV-14 / VAK16401

INTRODUCTION

Thank you for purchasing the Nikon COOLSTATION MV-14. This multi-functional docking station is designed to enhance the usability of your Nikon Coolpix S5 camera. It provides convenient features for battery charging, data transfer, and media playback. Please read this manual thoroughly before using the COOLSTATION MV-14 to ensure proper operation and to maximize its capabilities.

PRODUCT OVERVIEW

The Nikon COOLSTATION MV-14 serves as a central hub for your compatible Nikon Coolpix camera. It integrates charging, data transfer, and video output functionalities into a compact unit.



Figure 1: Front view of the Nikon COOLSTATION MV-14. This image displays the main docking area for the camera, the USB port for data transfer, and the AV out port for connecting to a television. The "COOLPIX" logo is visible on the front.

Key Features:

- **Battery Charging:** Conveniently charge your camera's battery while docked.

- **USB Data Transfer:** Connect to a computer via USB to transfer photos and videos.
- **AV Output:** Connect to a television or monitor to view images and videos directly from your camera.
- **Compact Design:** Designed for easy placement and portability.

SETUP

Before using your COOLSTATION MV-14, ensure you have all necessary components and follow these steps for initial setup.

Package Contents:

- Nikon COOLSTATION MV-14
- AC Adapter
- USB Cable
- AV Cable
- User Manual (this document)

Connecting the COOLSTATION:

1. **Power Connection:** Connect the supplied AC adapter to the "DC IN" port on the COOLSTATION MV-14. Plug the other end of the AC adapter into a standard electrical outlet.
2. **USB Connection (Optional):** To transfer data to a computer, connect one end of a USB cable to the "USB" port on the COOLSTATION and the other end to an available USB port on your computer.
3. **AV Connection (Optional):** To view images on a TV, connect one end of an AV cable to the "AV OUT" port on the COOLSTATION and the other end to the video input (e.g., RCA yellow, white, red) on your television.

OPERATING INSTRUCTIONS

This section details how to use the various functions of your COOLSTATION MV-14.

1. Charging the Camera Battery:

1. Ensure the COOLSTATION MV-14 is connected to a power source via the AC adapter.
2. Carefully align your Nikon Coolpix S5 camera with the docking connector on the COOLSTATION and gently place it into the dock until it seats firmly.
3. The camera's charging indicator (refer to your camera's manual for specific indicator location and behavior) should illuminate, indicating that charging has begun.
4. Charging time may vary depending on the battery's charge level. The indicator will typically change or turn off when charging is complete.

2. Transferring Images to a Computer:

1. Connect the COOLSTATION MV-14 to your computer using a USB cable as described in the "Setup" section.
2. Place your Nikon Coolpix S5 camera into the COOLSTATION.
3. Turn on your camera.
4. Your computer should recognize the camera as a removable storage device or prompt you to open a photo import application. Follow the on-screen instructions on your computer to transfer files.
5. *Note:* Ensure your computer has the necessary drivers installed for your Nikon Coolpix S5 camera. These are typically installed automatically or can be downloaded from the Nikon support website.

3. Viewing Images on a TV:

1. Connect the COOLSTATION MV-14 to your television using an AV cable as described in the "Setup" section.
2. Place your Nikon Coolpix S5 camera into the COOLSTATION.
3. Turn on your camera and your television.
4. Select the correct video input channel on your television (e.g., AV1, Video 2) that corresponds to where you connected the AV cable.
5. The camera's display should now appear on your television screen, allowing you to browse photos and videos using your camera's controls.

MAINTENANCE

Proper care and maintenance will ensure the longevity and optimal performance of your COOLSTATION MV-14.

- **Cleaning:** Use a soft, dry cloth to wipe the exterior of the COOLSTATION. Do not use liquid cleaners, solvents, or abrasive materials, as these can damage the finish or internal components.
- **Storage:** When not in use for extended periods, disconnect the COOLSTATION from the power outlet. Store it in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Avoid dropping the unit or subjecting it to strong impacts. Do not attempt to disassemble the COOLSTATION; this will void any warranty and may cause damage.
- **Connector Care:** Keep the docking connector free from dust and debris. Use a soft brush or compressed air if necessary, but avoid touching the pins directly.

TROUBLESHOOTING

If you encounter issues with your COOLSTATION MV-14, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Camera not charging.	◦ COOLSTATION not powered. ◦ Camera not properly seated. ◦ Faulty AC adapter or cable.	◦ Ensure AC adapter is securely connected to COOLSTATION and power outlet. ◦ Remove and re-seat the camera firmly in the dock. ◦ Try a different power outlet. Inspect AC adapter and cable for damage.
Computer does not recognize camera.	◦ USB cable not connected or faulty. ◦ Camera not turned on. ◦ Missing camera drivers on computer.	◦ Ensure USB cable is securely connected to both COOLSTATION and computer. Try a different USB port or cable. ◦ Turn on the camera after docking. ◦ Install necessary camera drivers from Nikon's official website.

Problem	Possible Cause	Solution
No image on TV.	◦ AV cable not connected or faulty. ◦ Incorrect TV input selected. ◦ Camera not turned on.	◦ Ensure AV cable is securely connected to both COOLSTATION and TV. Try a different AV cable. ◦ Switch TV input to the correct AV channel (e.g., Video 1, AV2). ◦ Turn on the camera after docking.

If the problem persists after trying these solutions, please contact Nikon customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Product Name	Nikon COOLSTATION MV-14
Model Number	VAK16401
Compatible Devices	Nikon Coolpix S5 Camera
Connectivity Technology	USB, AV Output
Power Source	Battery Powered (via camera) / AC Adapter (for COOLSTATION)
Product Dimensions	3.8 x 1.9 x 1.7 inches
Item Weight	1.76 ounces
Manufacturer	Nikon
UPC	018208257140

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Nikon website or contact Nikon customer service directly. Keep your proof of purchase for warranty claims.

Nikon Official Website: www.nikonusa.com

Customer Support: Refer to the Nikon website for regional contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B000GU4BC2>

More documents and user manuals: **<https://manuals.plus/>**