

Joie 50237

Joie Boiley Microwave Egg Cooker Instruction Manual

Model: 50237

INTRODUCTION

The Joie Boiley Microwave Egg Cooker (Model 50237) provides a convenient and efficient method for preparing soft, medium, or hard-boiled eggs using a microwave oven. This manual outlines the proper procedures for setup, operation, maintenance, and troubleshooting to ensure safe and optimal performance of your egg cooker.

IMPORTANT SAFETY INFORMATION

Please read all safety instructions before using the Joie Boiley Microwave Egg Cooker. Failure to follow these instructions may result in personal injury or damage to the appliance or microwave oven.

- **Microwave Wattage:** This egg cooker is designed for use in microwave ovens up to 1000 watts. Using it in higher wattage microwaves or for extended periods beyond recommended times may cause damage to the cooker or microwave.
- **Egg Piercing:** Always pierce the large, rounded end of the egg with the provided egg piercer before cooking. This prevents pressure buildup inside the egg, which can cause it to crack or explode during cooking.
- **Secure Lid:** Ensure the top and bottom sections of the egg cooker are securely locked together. A gap between the sections can allow steam to escape improperly and expose the internal aluminum component to microwaves, potentially causing sparking and damage to your microwave oven. Refer to the "lock guide" on the cooker for proper alignment.
- **Cooling Time:** The egg cooker and cooked egg will be extremely hot after microwaving. Allow the cooker to cool for at least 2-3 minutes inside the microwave after cooking, and then carefully remove it. For easier handling, let it sit for another 1-2 minutes before opening. Use oven mitts or a cloth to prevent burns.
- **Water Level:** Always fill the base with water to the designated fill line. Operating without sufficient water can lead to overheating and damage.
- **Material Safety:** The cooker is made from aluminum and ABS plastic. Do not use abrasive cleaners or metallic scouring pads, as these can damage the materials.

SETUP

Before first use, and after each use, disassemble the egg cooker and wash all components in warm, soapy water. Rinse thoroughly and dry.

1. Unpack all components: the main body (base), lid, aluminum egg seat, plastic spacer, and egg piercer.
2. Wash all parts with warm, soapy water.
3. Rinse thoroughly and dry completely before assembly.

Figure 1: Disassembled Joie Boiley Microwave Egg Cooker components.

OPERATING INSTRUCTIONS

Follow these steps to cook an egg in your Joie Boiley Microwave Egg Cooker:

1. **Add Water:** Fill the base of the egg cooker with tap water up to the indicated fill line.
2. **Assemble Internal Parts:** Place the plastic spacer into the base, ensuring it sits correctly. Then, place the aluminum egg seat on top of the plastic spacer. If the lid does not close properly later, check if the plastic spacer is upside down.
3. **Prepare Egg:** Using the provided egg piercer, carefully pierce the large, rounded end of a cold egg (straight from the refrigerator). This small hole prevents the egg from cracking or exploding during cooking.
4. **Place Egg:** Place the pierced egg into the aluminum egg seat with the pierced end facing upwards.
5. **Secure Lid:** Place the lid onto the base and twist to securely lock it. Ensure there is no gap between the lid and the base. Refer to the "lock guide" on the cooker for proper alignment.
6. **Microwave:** Place the assembled egg cooker into your microwave oven. Cook according to the desired doneness and your microwave's wattage. The following times are general guidelines and may require adjustment:
 - **Soft-Boiled Egg:** Approximately 3 minutes (for 1000W microwave).
 - **Medium-Boiled Egg:** Approximately 4 minutes (for 900-1000W microwave).
 - **Hard-Boiled Egg:** Approximately 5 minutes (for 1000W microwave). For microwaves below 1000W, cooking times over 4 minutes may increase the risk of the egg cracking or cooker damage. Exercise caution and monitor closely.
7. **Resting Period:** After the microwave cycle finishes, leave the egg cooker inside the microwave for an additional 1-2 minutes. This allows residual heat to complete the cooking process and helps the cooker cool slightly.
8. **Remove and Cool:** Carefully remove the hot egg cooker from the microwave using oven mitts. Place it on a heat-resistant surface and allow it to cool for another 1-2 minutes before attempting to open.
9. **Peel Egg:** For best results and easier peeling, immediately transfer the cooked egg to a bowl of ice-cold water for at least 5 minutes. This stops the cooking process and helps prevent the yolk from turning green.

MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your Joie Boiley Microwave Egg Cooker.

- **Disassembly:** After each use, allow the cooker to cool completely, then disassemble all parts.
- **Washing:** Hand wash all components (base, lid, aluminum egg seat, plastic spacer, egg piercer) with warm, soapy water.
- **Rinsing:** Rinse all parts thoroughly under running water to remove any soap residue.
- **Drying:** Dry all components completely before reassembling or storing.
- **Aluminum Discoloration:** It is normal for the aluminum egg seat to change color or darken slightly after initial use due to heat exposure. This does not affect performance or safety.
- **Storage:** Store the clean, dry egg cooker in a safe place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Egg cracks or explodes during cooking.	Egg not pierced; cooking time too long for microwave wattage; lid not securely fastened.	Always pierce the large end of the egg. Reduce cooking time. Ensure lid is securely locked.
Cooker melts or deforms.	Microwave wattage exceeds 1000W; cooker used without water; lid not securely fastened causing sparking.	Do not use in microwaves over 1000W. Always add water to the fill line. Ensure lid is securely locked to prevent sparking.
Egg not cooked to desired doneness.	Incorrect cooking time for microwave wattage or desired doneness.	Adjust cooking time. Start with shorter times and increase gradually until desired doneness is achieved. Consider your microwave's specific wattage.
Lid does not close or lock properly.	Plastic spacer or aluminum egg seat incorrectly placed.	Ensure the plastic spacer is correctly oriented and the aluminum egg seat is seated properly. Refer to the "lock guide" for lid alignment.
Yolk turns green.	Egg overcooked or not cooled quickly enough.	Reduce cooking time slightly. Immediately transfer cooked egg to an ice bath for at least 5 minutes.

SPECIFICATIONS

- Model Number:** 50237
- Brand:** Joie
- Manufacturer:** MSC International
- Dimensions:** 11.3 x 17.4 x 7 inches (Product dimensions as packaged; actual cooker is smaller)
- Item Weight:** 0.08 Kilograms (approximately 2.82 ounces)
- Material:** Aluminum, ABS (Acrylonitrile Butadiene Styrene)
- Color:** White
- Maximum Microwave Wattage:** 1000 Watts

CUSTOMER SUPPORT

For further assistance or inquiries regarding your Joie Bailey Microwave Egg Cooker, please contact MSC International customer support. Refer to the product packaging or the manufacturer's official website for contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question