

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Honeywell](#) /

› [Honeywell Security 6160 Ademco Alpha Display Keypad User Manual](#)

Honeywell 6160

Honeywell Security 6160 Ademco Alpha Display Keypad User Manual

Model: 6160 | Brand: Honeywell

INTRODUCTION

The Honeywell 6160 Deluxe Keypad is designed for ease of installation and user-friendly operation. Its sleek white design integrates seamlessly with various decors. Key features include a contoured, removable door that hides illuminated soft-touch keys, a large and bright 32-character display for clear plain-English status messages, and easily accessible oversized function keys. These keys can be programmed for various security operations, including fire, burglary, and personal emergencies. Self-adhesive labels are provided for customization.

PRODUCT OVERVIEW

Honeywell Home



6160

Custom Alpha
Keypad



Provides detailed zone and status information for increased life safety

The Honeywell 6160 Custom Alpha Keypad is presented in its packaging, highlighting the product name and key features such as its alpha display and detailed zone information for enhanced life safety.



A close-up view of the Honeywell 6160 Ademco Alpha Display Keypad with its front door open, revealing the full alphanumeric keypad. The display shows '****DISARMED**** READY TO ARM', and the illuminated soft-touch keys are visible, including numerical inputs and function buttons like OFF, AWAY, STAY, MAX, TEST, BYPASS, INSTANT, CODE, and CHIME.

SETUP

Installation

The 6160 Keypad is designed for straightforward installation. It is compatible with Ademco Vista Alarm panels. For detailed wiring and mounting instructions, please refer to the specific installation guide provided

with your alarm panel system.

- Ensure the alarm system is powered down before beginning installation.
- Mount the keypad securely to a wall using appropriate hardware.
- Connect the keypad to the alarm control panel following the wiring diagram in your system's manual.
- Restore power to the alarm system.

Initial Configuration

After physical installation, the keypad must be configured to communicate with your alarm panel. This typically involves setting the keypad's address. Consult your alarm panel's programming manual for specific steps on how to set the keypad address and program user codes.

OPERATING INSTRUCTIONS

Arming the System

To arm your security system using the 6160 Keypad, enter your 4-digit user code followed by the desired arming command:

- **Arm Stay (Stay Mode):** Enter your code, then press the **STAY** key (3). This arms the perimeter and interior sensors, allowing you to move freely within the protected area.
- **Arm Away (Away Mode):** Enter your code, then press the **AWAY** key (2). This arms all protected zones, including interior motion sensors.
- **Instant Arming:** Enter your code, then press the **INSTANT** key (7). This arms the perimeter zones instantly with no entry delay.

Disarming the System

To disarm the system and silence any alarms, enter your 4-digit user code, then press the **OFF** key (1).

Using Function Keys

The oversized function keys can be programmed for quick access to various system operations, such as:

- **Fire Emergency:** Typically activated by pressing the **FIRE** key.
- **Burglary Emergency:** Typically activated by pressing the **POLICE** key.
- **Personal Emergency:** Typically activated by pressing the **PANIC** key.

Refer to your alarm panel's programming guide for specific details on how these keys are configured for your system.

MAINTENANCE

To ensure optimal performance and longevity of your Honeywell 6160 Keypad, follow these maintenance guidelines:

- **Cleaning:** Gently wipe the keypad and display with a soft, dry cloth. Avoid using abrasive cleaners, solvents, or excessive moisture, as these can damage the unit.
- **Regular Checks:** Periodically test your alarm system as recommended by your security provider to ensure all components, including the keypad, are functioning correctly.
- **Environmental Conditions:** Ensure the keypad is installed in a dry environment, away from direct sunlight, extreme temperatures, and high humidity.

TROUBLESHOOTING

This section provides solutions to common issues you might encounter with your Honeywell 6160 Keypad.

Issue	Possible Cause / Solution
Keypad display is blank.	Check power connection to the alarm panel. Ensure backup battery (if installed) is charged and properly connected.
"Not Ready" message displayed.	This indicates an open zone (e.g., a door, window, or motion sensor is open or faulted). Check all protected areas and ensure they are closed or disarmed.
Keypad not responding to key presses.	Verify power supply. Try pressing the "*" key to see if the display refreshes. If unresponsive, a system reset may be required (consult your alarm panel's manual).
Accidental siren activation.	Enter your user code followed by the 'OFF' key (1). This will disarm the system and silence the alarm.

SPECIFICATIONS

Feature	Detail
Brand	Honeywell
Model	6160
Color	White
Dimensions (L x W x H)	5 x 2 x 8 inches
Weight	14.9 ounces
Compatible Devices	Ademco Vista Alarm Panels
Included Components	Keypad
Part Number	6160
UPC	781410342088
Manufacturer	LiveWatch Security
Power Source	Battery Powered
Connectivity Technology	Wireless

Feature	Detail
Installation Type	Self-Adhesive

WARRANTY AND SUPPORT

This Honeywell 6160 Ademco Alpha Display Keypad comes with a **1-year Manufacturer's Warranty**, covering defects in materials and workmanship under normal use.

For technical support, troubleshooting assistance, or to inquire about warranty claims, please contact Honeywell customer service or refer to the official Honeywell Security website. Contact information can typically be found in the product packaging or on the manufacturer's official website.