

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Oster](#) /

› [Oster Electric Can Opener with Knife Sharpener User Manual](#)

### Oster 003147-000-000

## Oster Electric Can Opener with Knife Sharpener

Model: 003147-000-000

Brand: Oster

### INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation, maintenance, and troubleshooting of your Oster Electric Can Opener with Knife Sharpener. Please read all instructions carefully before first use and retain for future reference.

The Oster Electric Can Opener is designed for convenience and versatility, featuring a patented power pierce cutting mechanism and an auto-stop function for effortless can opening. It also includes a built-in knife sharpener for added utility.

- Tall can opener opens cans safely and easily.
- Patented power pierce cutting mechanism for easy opening.
- Contemporary styling with a built-in knife sharpener.
- Auto stop feature shuts the can opener off after the can is opened.
- Magnetic lid lifter allows for safe, easy removal of lids.
- Convenient cord storage for a cleaner appearance.





Image: The Oster Electric Can Opener, showcasing its sleek metallic silver and black design. The can opening mechanism is prominently displayed on the left side, ready for use.

## SETUP

1. **Unpacking:** Carefully remove the can opener from its packaging. Retain packaging for storage or disposal.
2. **Placement:** Place the can opener on a stable, flat, and dry surface, such as a kitchen countertop. Ensure there is sufficient space around the unit for safe operation.

3. **Power Connection:** Unwind the power cord from the convenient cord storage area at the base of the unit. Plug the power cord into a standard 120V AC electrical outlet.
4. **Initial Cleaning:** Before first use, wipe the exterior of the unit with a damp cloth. Do not immerse the unit in water.

## OPERATING INSTRUCTIONS

### Opening Cans

1. **Prepare the Can:** Ensure the can is clean and free of any debris or sticky residue.
2. **Position the Can:** Lift the lever of the can opener. Place the can under the cutting mechanism, aligning the rim of the can with the guide slot. The can opener is designed to accommodate various can sizes, including tall cans.
3. **Engage the Cutter:** Push the lever down firmly until the cutting blade pierces the can lid and the can is securely held in place by the magnetic lid holder. The motor will start automatically.
4. **Automatic Operation:** The can opener will rotate the can automatically, cutting around the lid. Do not attempt to force or guide the can during operation.
5. **Auto-Stop Feature:** Once the can has been fully opened, the motor will automatically stop.
6. **Remove the Can:** Lift the lever to release the can. The magnetic lid lifter will hold the lid, allowing for safe and easy removal. Carefully discard the lid.

### Using the Built-in Knife Sharpener

The Oster Electric Can Opener features a convenient knife sharpener located on the back of the unit.

1. **Locate the Sharpener:** Identify the sharpening slot on the rear of the can opener.
2. **Position the Knife:** Hold the knife with the blade facing away from you. Insert the heel of the knife blade into the sharpening slot at a slight downward angle.
3. **Sharpening:** With light, even pressure, pull the knife blade through the slot towards you, from heel to tip. Repeat this motion several times, alternating sides if necessary, until the desired sharpness is achieved.
4. **Clean the Knife:** Always wipe the sharpened knife blade with a damp cloth to remove any metal shavings before use.

## MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your can opener.

- **Unplug Before Cleaning:** Always unplug the can opener from the electrical outlet before cleaning.
- **Cleaning the Cutting Mechanism:** The front of the can opener lifts up to allow for easy cleaning of the cutting blade and gear. Use a damp cloth or a small brush to remove any food particles or residue. Do not use abrasive cleaners or scouring pads.
- **Exterior Cleaning:** Wipe the exterior surfaces of the can opener with a soft, damp cloth. Dry thoroughly.
- **Do Not Immerse:** Never immerse the can opener, cord, or plug in water or any other liquid.
- **Cord Storage:** When not in use, the power cord can be neatly stored in the cord storage area at the base of the unit.

## TROUBLESHOOTING

If you encounter issues with your Oster Electric Can Opener, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Can opener does not operate.	Unit is not plugged in or power outlet is not active.	Ensure the unit is securely plugged into a working electrical outlet. Test the outlet with another appliance.
Can does not open or motor struggles.	Can is not properly positioned or cutting mechanism is obstructed.	Lift the lever and reposition the can, ensuring the rim is correctly aligned with the guide slot and the blade. Ensure the can is not dented or severely misshapen. Clean any debris from the cutting mechanism.
Lid is not cleanly cut or paper label is chewed.	Improper can alignment or worn blade.	Ensure the can is firmly pressed down and properly aligned before starting. While the unit is designed for clean cuts, some labels may be affected. If issues persist after proper alignment, contact customer support.
Magnetic lid lifter does not hold lid.	Lid is too heavy or not fully separated.	Ensure the can is completely opened. For very heavy lids, manual removal may be necessary after the cut is complete.

SPECIFICATIONS






Feature	Detail
Model Number	003147-000-000
Color	Metallic Silver/Black
Material	Stainless Steel
Product Dimensions	5"W x 6"H (approximate)
Item Weight	2.6 Pounds
Operation Mode	Automatic
Wattage	3000 watts
Blade Material	Stainless Steel
UPC	034264420212
First Available Date	October 22, 2006


WARRANTY AND SUPPORT

Oster products are manufactured to high-quality standards. This product typically comes with a limited warranty covering defects in material and workmanship under normal household use. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details.

For technical assistance, replacement parts, or warranty inquiries, please contact Oster Customer Service. You may also find additional information and support resources on the official Oster website.

Related Documents - 003147-000-000

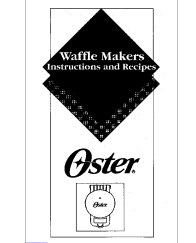	<p><a href="#">Oster Electric Wine Opener User Guide and Warranty Information</a></p> <p>Comprehensive user guide for the Oster Electric Wine Opener (Models 4207, 4208), covering setup, operation, safety, care, and warranty details.</p>
	<p><a href="#">Oster Gentle Paws Premium Nail Trimmer Quick Start Guide and Warranty</a></p> <p>A comprehensive guide for the Oster Gentle Paws Premium Nail Trimmer, covering setup, safe usage, cleaning, and warranty information for pet owners. Learn how to trim your pet's nails effectively and comfortably.</p>
	<p><a href="#">Oster BLSTDG Series Blender User Manual and Recipes</a></p> <p>Comprehensive user manual for the Oster BLSTDG Series Blender, covering important safeguards, features, operating instructions, cleaning, storage, recipes, and warranty information.</p>
	<p><a href="#">Oster Stainless Steel Electric Kettle User Manual   Models 5964/5965 Series</a></p> <p>Comprehensive user manual for the Oster Stainless Steel Electric Kettle, Models 5964/5965 Series. Covers important safety precautions, operating instructions, cleaning procedures, filter maintenance, and warranty information.</p>
	<p><a href="#">Oster Waffle Makers: Instructions and Recipes</a></p> <p>A comprehensive guide to using Oster waffle makers, including important safety information, operating instructions, care and cleaning tips, and a variety of delicious waffle recipes and toppings.</p>

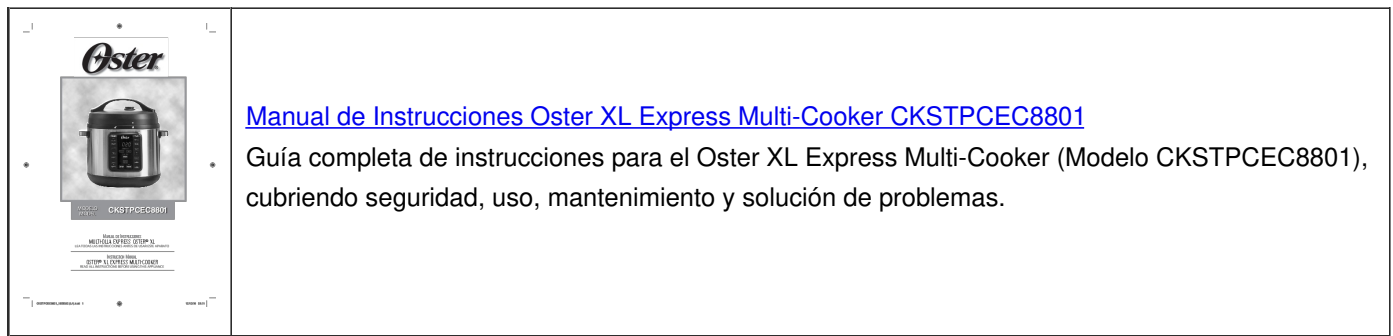

### [Manual de Instrucciones Oster XL Express Multi-Cooker CKSTPCEC8801](#)

Guía completa de instrucciones para el Oster XL Express Multi-Cooker (Modelo CKSTPCEC8801), cubriendo seguridad, uso, mantenimiento y solución de problemas.

Documents - Oster – 003147-000-000

### [\[pdf\] User Manual Catalog](#)

EXPERIENCES Sunbeam Hospitality Exceptional BLSTVB 103 000 006811 C00 NP0 006844 NP1 006642 NPO 006684 006640 022 Speeds Pre programmed Manual 8 888 878 6232 BARK CONTROL FIRST ALERT® HANDHELD DETERRENT FABCU2 001 INDOOR OUTDOOR FABCU1 NEW! A great addition for PET FRIENDLY PROPERTIES DETERS BARKING utilizing a safe and effective ultrasonic sound that only dogs can hear The unit automatically detects barking emits an in response 4 Experiences For You Your Guests big part of your guests experience is the products they use while staying at property SunHosp 2016ProductCatalog loRes sunbeamhospitality on demandware static Sites sunbeam hospitality Library default dw1667a8e2 documents dw813897d2 Exceptional EXPERIENCES 2016 PRODUCT CATALOG Water Safety PAGE 34 Make pool-time safe for your ... I Steaming Basket Measuring Cup/Ladle Warming Option Warranty 1 Year CAN OPENER SKU **003147-000-000** Auto Stop Knife Sharpener Cord Storage Warranty 1 Year SunbeamHospitality... lang:en score:22 filesize: 5.04 M page\_count: 40 document date: 2016-01-20

