

Wahl 9307

Wahl Mini Pro Cord Clipper and Trimmer Model 9307 User Manual

INTRODUCTION

This manual provides essential instructions for the safe and effective use, maintenance, and troubleshooting of your Wahl Mini Pro Cord Clipper and Trimmer, Model 9307. Please read all instructions carefully before operating the device.

IMPORTANT SAFETY INFORMATION

WARNING: To reduce the risk of electric shock or injury:

- Avoid using on wet hair.
- Keep away from water sources, including sinks, bathtubs, and showers.
- Be cautious when trimming near sensitive areas of the body.
- Always follow electrical safety precautions, including ensuring the cord is not damaged and the plug is fully inserted into the outlet.
- Unplug the appliance immediately after use and before cleaning.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Do not use while bathing or in a shower.
- Do not place or store appliance where it can fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Wahl Mini Pro Cord Clipper
- Blade Guard
- Guide Combs: 1/8" (3mm), 1/4" (6mm), 3/8" (10mm), 1/2" (13mm)
- Left Ear Taper Guide Comb
- Right Ear Taper Guide Comb
- Barber Comb
- Mustache Comb
- Blade Oil
- Cleaning Brush
- Instruction Manual (English/Spanish)
- Styling Guide



Image: The complete Wahl Mini Pro Cord Clipper and Trimmer kit, showing the clipper, various guide combs, a barber comb, a mustache comb, blade oil, a cleaning brush, and a storage pouch.

SETUP

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Inspect:** Examine the clipper and all accessories for any signs of damage. Do not use if damaged.
3. **Initial Oiling:** Before first use, apply 2-3 drops of the provided Wahl clipper oil across the top of the blades. Turn the clipper on for a few seconds to allow the oil to distribute. Wipe off any excess oil.
4. **Attach Guide Comb:** Select the desired guide comb for your trimming length. Align the comb with the clipper blade and snap it securely into place. Ensure it is firmly attached before use.
5. **Power Connection:** Plug the clipper's power cord into a standard electrical outlet. Ensure the voltage matches your

local power supply.





Image: The Wahl Mini Pro Cord Clipper, featuring a white body with a blue ergonomic grip, ready for use.

OPERATING INSTRUCTIONS

1. **Preparation:** Ensure hair is clean, dry, and free of tangles. For best results, comb hair in the direction of growth.
2. **Power On:** Locate the ON/OFF switch on the clipper body and slide it to the "ON" position.
3. **Trimming Technique:**
 - Hold the clipper with the blade teeth pointing upwards.
 - Begin trimming from the bottom of the desired area, moving the clipper slowly against the direction of hair growth.
 - Use smooth, overlapping strokes to ensure an even cut.
 - For blending, use a larger guide comb first, then switch to a smaller one as you move up the head.
4. **Using Taper Guide Combs:** The left and right ear taper combs are designed to trim hair around the ears. Attach the appropriate comb and gently guide the clipper around the ear, following the natural curve.
5. **Detailing and Edging:** For precise lines around the neckline, sideburns, or mustache, remove the guide comb. Hold the clipper at an angle and carefully trim the edges.
6. **Power Off:** After use, slide the ON/OFF switch to the "OFF" position and unplug the clipper from the electrical outlet.

MAINTENANCE

Cleaning the Blades

1. **Unplug:** Always ensure the clipper is unplugged before cleaning.
2. **Remove Hair:** Use the provided cleaning brush to remove loose hairs from the blades and the area around the blades. Brush in the direction of the blade teeth.
3. **Deep Cleaning (Optional):** For a more thorough cleaning, the blades can be removed. Refer to the detailed instructions in the included styling guide for blade removal and reattachment.

Oiling the Blades

1. **Frequency:** Apply Wahl clipper oil to the blades after every few uses, or if the clipper starts to pull hair.
2. **Application:** With the clipper unplugged, apply 2-3 drops of oil across the top of the blades. Turn the clipper on for a few seconds to allow the oil to penetrate.
3. **Wipe Excess:** Wipe off any excess oil with a soft cloth to prevent it from running into the motor compartment.

Storage

Store the clipper and its accessories in a cool, dry place, away from moisture and direct sunlight. Use the blade guard to protect the blades when not in use. The included storage pouch can be used for organized storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clipper does not turn on.	Not plugged in; power outlet issue; damaged cord.	Ensure clipper is securely plugged into a working outlet. Check for cord damage. If damaged, do not use.
Clipper pulls or snags hair.	Blades are dull; blades are not oiled; hair is tangled or wet.	Oil the blades. Ensure hair is clean and dry. If problem persists, blades may need replacement or professional sharpening.
Uneven cutting.	Guide comb not properly attached; incorrect technique.	Ensure guide comb is securely snapped into place. Use consistent, overlapping strokes against the direction of hair growth.
Clipper runs loudly or vibrates excessively.	Blades not aligned; internal issue.	Check blade alignment. If the issue persists, contact customer support.

SPECIFICATIONS

- **Model Name:** Mini Pro
- **Item Model Number:** 98134
- **Brand:** Wahl
- **Power Source:** Corded
- **Blade Material:** High-carbon Steel
- **Product Dimensions:** 8.75 x 4.1 x 2.85 inches
- **Item Weight:** 0.27 g (0.01 ounces)
- **Maximum Cutting Length:** 0.5 inches (13mm)
- **Included Components:** MiniPro Clipper, Blade guard, Guide combs (1/8", 1/4", 3/8", 1/2"), Left ear taper, Right ear taper, Barber comb, Mustache comb, Blade oil, Cleaning brush, Instructions (English/Spanish), Styling Guide
- **Target Audience:** General grooming, touch-ups, trimming around ears, necklines, sideburns.

WARRANTY AND SUPPORT

Wahl products are manufactured to high quality standards. For specific warranty information, please refer to the warranty card included in your product packaging or visit the official Wahl website. If you encounter any issues not covered in this manual or require further assistance, please contact Wahl Customer Service.

Wahl Customer Service: [Visit Wahl USA Contact Us Page](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question