

[manuals.plus](#) /› [SANSUI](#) /› [SANSUI VRDVD-4000A VCR/DVD Combo Player Instruction Manual](#)

SANSUI VRDVD-4000A

SANSUI VRDVD-4000A VCR/DVD Combo Player Instruction Manual

Model: VRDVD-4000A

Brand: SANSUI

1. INTRODUCTION

This manual provides comprehensive instructions for the proper installation, operation, and maintenance of your SANSUI VRDVD-4000A VCR/DVD Combo Player. Please read this manual thoroughly before using the unit to ensure safe and efficient operation. Keep this manual for future reference.

The SANSUI VRDVD-4000A is a versatile entertainment device combining a Video Cassette Recorder (VCR) for VHS tapes and a Digital Versatile Disc (DVD) player in a single unit.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of electric shock, fire, etc., please observe the following safety precautions:

- **Power Source:** Connect the unit only to an AC 120V, 60Hz power supply.
- **Ventilation:** Ensure adequate ventilation. Do not block ventilation openings. Do not place the unit on a bed, sofa, rug, or similar surface that may block the openings.
- **Water and Moisture:** Do not expose the unit to rain or moisture. Do not place objects filled with liquids, such as vases, on the unit.
- **Heat:** Do not place the unit near heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel. Opening the cover may expose you to dangerous voltage or other hazards.
- **Object and Liquid Entry:** Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock.
- **Cleaning:** Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

CAUTION: RISK OF ELECTRIC SHOCK. DO NOT OPEN.

3. PRODUCT OVERVIEW

3.1 Front Panel




The front panel features the VCR tape slot on the left and the DVD disc tray on the right. Key controls include the Power button, VCR/DVD selector, Play, Stop, Rewind, Fast Forward, Record, and Eject buttons for both VCR and DVD functions. Additionally, there are front AV input jacks (Video In, L Audio In, R Audio In) for connecting external devices.

3.2 Top Panel



The top panel of the unit provides a smooth, flat surface. A label indicating an installation or operating help line (1-800-259-0040) may be present on this surface.

3.3 Rear Panel and Label

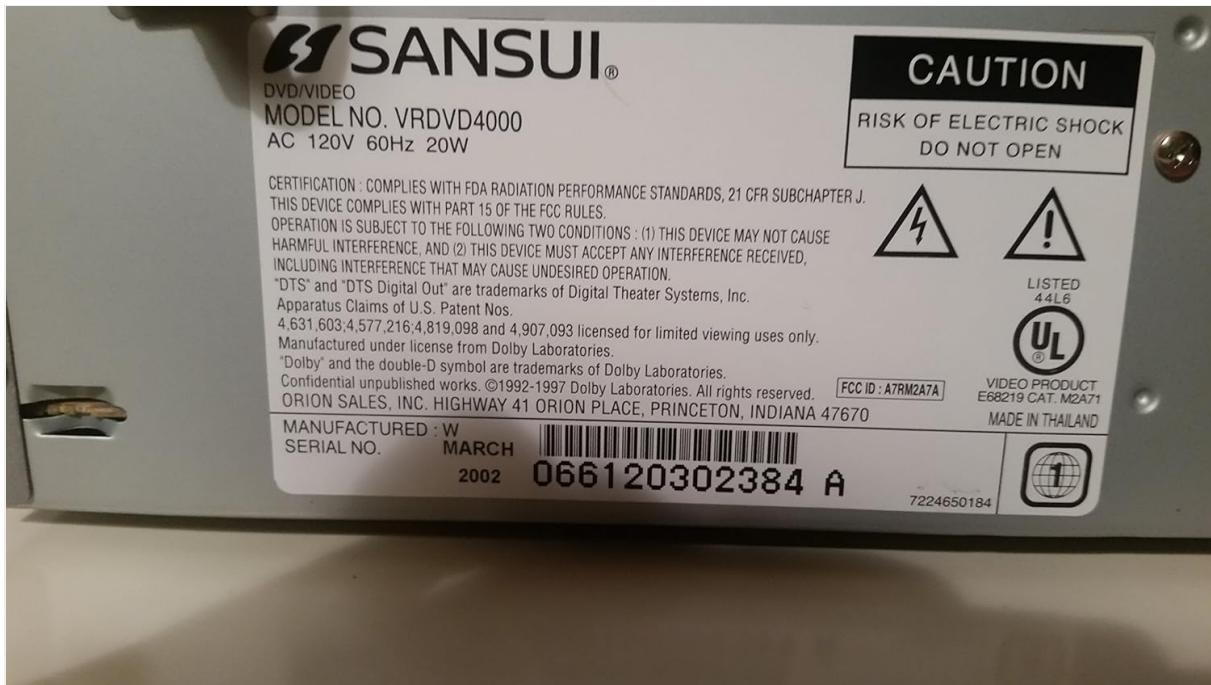

The rear panel contains the main power cord connection and AV output jacks for connecting the unit to your television or audio system. The product label on the rear provides important information including the model number (VRDVD4000), power requirements (AC 120V 60Hz 20W), FCC ID (A7RM2A7A), UL certification (E68219 CAT. M2A71), and manufacturing details (Made in Thailand, Manufactured: March 2002, Serial No.: 066120302384 A).

4. CONNECTIONS AND INITIAL SETUP

4.1 Connecting to a Television

1. Locate the AV output jacks on the rear of the SANSUI VRDVD-4000A (yellow for video, red for right audio, white for left audio).
2. Connect a standard RCA AV cable to these output jacks.
3. Connect the other end of the RCA AV cable to the corresponding AV input jacks on your television. Ensure the colors match (yellow to yellow, red to red, white to white).
4. Set your television's input source to the AV input you connected the unit to (e.g., AV1, Video 1, Input 1).

4.2 Power Connection

Plug the attached power cord from the SANSUI VRDVD-4000A into a standard AC 120V, 60Hz wall outlet.

4.3 Initial Power On

Press the 'POWER' button on the front panel of the unit to turn it on. The display will illuminate.

5. OPERATING THE DVD PLAYER

5.1 Loading a DVD

1. Ensure the unit is powered on.
2. Press the 'DVD/VCR' button to select DVD mode.
3. Press the 'EJECT' button (for DVD) to open the disc tray.
4. Place a DVD disc gently into the tray with the label side facing up.
5. Press the 'EJECT' button again to close the disc tray. The unit will begin reading the disc.

5.2 Playback Controls

- **PLAY (►):** Press to start or resume playback.
- **PAUSE (–):** Press to temporarily stop playback. Press again to resume.
- **STOP (■):** Press to stop playback completely.
- **FAST FORWARD (►►):** Press to fast forward through the disc.
- **REWIND (◀◀):** Press to rewind through the disc.
- **SKIP (►►| or |◀◀):** Use to skip to the next or previous chapter/track.

5.3 Menu Navigation

When a DVD with a menu loads, use the directional buttons (if available on the unit or a compatible remote) to navigate menu options. Press 'PLAY' or 'ENTER' to select an option.

6. OPERATING THE VCR

6.1 Loading a VHS Tape

1. Ensure the unit is powered on.
2. Press the 'DVD/VCR' button to select VCR mode.
3. Insert a VHS tape into the VCR tape slot with the tape window facing up. The unit will automatically load the tape.

6.2 Playback Controls

- **PLAY (►):** Press to start or resume tape playback.
- **PAUSE (–):** Press to temporarily stop playback. Press again to resume.
- **STOP (■):** Press to stop playback completely and eject the tape.
- **FAST FORWARD (►►):** Press to fast forward through the tape.
- **REWIND (◀◀):** Press to rewind the tape.

6.3 Recording

To record, ensure a blank VHS tape is inserted and the unit is in VCR mode.

1. Select the desired input source for recording (e.g., from the front AV jacks).
2. Press the 'RECORD' button (●) to begin recording.
3. Press 'STOP' (■) to end recording.

7. MAINTENANCE AND CARE

Proper care ensures the longevity and optimal performance of your SANSUI VRDVD-4000A.

- **Cleaning the Exterior:** Wipe the unit's exterior with a soft, dry cloth. For stubborn stains, use a slightly damp cloth and then dry thoroughly. Avoid abrasive cleaners or solvents.
- **Dust Prevention:** Keep the unit in a clean, dust-free environment. Dust can accumulate inside and affect performance.
- **Temperature and Humidity:** Avoid exposing the unit to extreme temperatures, direct sunlight, or high humidity.

- **Disc Care:** Handle DVDs by their edges. Keep them clean and free of scratches. Store discs in their cases when not in use.
- **Tape Care:** Store VHS tapes in their cases away from magnetic fields. Avoid exposing tapes to extreme heat or cold.

8. TROUBLESHOOTING GUIDE

If you experience problems with your unit, please refer to the following table before seeking professional service.

Problem	Possible Cause	Solution
No power	Power cord not securely plugged in.	Check power cord connection to the unit and wall outlet.
No picture or sound	Incorrect AV cable connection. TV input source not selected correctly.	Verify AV cable connections are secure and color-matched. Select the correct AV input on your television.
DVD disc not playing	Disc is dirty or scratched. Disc inserted incorrectly. Region code mismatch (less common for older units).	Clean the disc with a soft cloth. Try another disc. Ensure the disc is placed label-side up in the tray. Ensure the disc is compatible with the player.
VHS tape not playing/ejecting	Tape damaged or jammed. Unit in DVD mode.	Do not force the tape. Try ejecting again. If jammed, seek service. Ensure the unit is in VCR mode.
Remote control not working	No remote control included with this specific product.	This product description indicates no remote is included. All operations must be performed via the front panel controls.

9. TECHNICAL SPECIFICATIONS

- **Model Name:** VRDVD-4000A
- **Brand:** SANSUI
- **Power Requirements:** AC 120V, 60Hz, 20W
- **Media Type:** DVD, VHS
- **Audio Output Mode:** Stereo
- **Connector Type:** AV jacks (RCA)
- **Connectivity Technology:** Power cord, AV jacks
- **Item Weight:** Approximately 15 pounds (6.8 kg)
- **Package Dimensions:** Approximately 20 x 18.25 x 7 inches (50.8 x 46.35 x 17.78 cm)
- **Video Encoding:** MPEG-2 (for DVD playback)
- **Manufactured Date:** March 2002
- **Serial Number:** 066120302384 A
- **FCC ID:** A7RM2A7A
- **UL Listed:** E68219 CAT. M2A71

10. WARRANTY AND SUPPORT


For information regarding warranty coverage, please refer to the documentation provided at the time of purchase. Specific warranty terms may vary depending on the retailer and purchase date.

For installation or operating assistance, you may contact the help line:

1-800-259-0040

Please have your model number (VRDVD-4000A) and serial number (066120302384 A) available when contacting support.

Related Documents - VRDVD-4000A

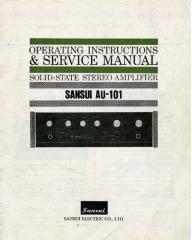	<p><u>Sansui AU-101 Stereo Amplifier Service Manual</u></p> <p>Comprehensive service manual for the Sansui AU-101 stereo amplifier, providing technical specifications, circuit analysis, troubleshooting guides, and maintenance procedures. Includes comparisons to models like the AU-555A.</p>
	<p><u>Sansui Electronics Corporation Service Manual</u></p> <p>This document provides service information for Sansui Electronics Corporation products, including parts lists and technical specifications.</p>
	<p><u>Sansui SD-5000 Service Handbook: Technical Guide for Reel-to-Reel Tape Recorder Maintenance</u></p> <p>Explore the Sansui SD-5000 Service Handbook, a comprehensive technical guide for service engineers detailing the repair, adjustment, and maintenance procedures for the SD-5000 reel-to-reel tape recorder.</p>
	<p><u>SANSUI F55 Language Modification Guide</u></p> <p>Step-by-step instructions for changing the language settings on the SANSUI F55 Bluetooth Speaker Player to English, detailing button presses and menu navigation.</p>
	<p><u>Sansui AU-X1 Super Integrated Amplifier Service Manual</u></p> <p>Comprehensive service manual for the Sansui AU-X1 Super Integrated Amplifier, detailing specifications, technical explanations of high-speed power transistors, block diagrams, parts lists, and adjustment and replacement procedures for audio professionals and technicians.</p>

Comprehensive service manual for the SANSUI G-4700 AM/FM Stereo Receiver, detailing specifications, block diagrams, adjustment procedures, parts lists, and circuit board layouts for repair and maintenance.