

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Logitech](#) /

› [Logitech MX3200 Cordless Desktop Laser Keyboard and Mouse User Manual](#)

Logitech 967688-0403

Logitech MX3200 Cordless Desktop Laser Keyboard and Mouse User Manual

Model: 967688-0403

[Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. SETUP GUIDE

Follow these steps to set up your Logitech MX3200 Cordless Desktop Laser keyboard and mouse.

1.1. Install Batteries

The keyboard requires 2 AA batteries and the mouse requires 2 AA batteries (total 4 AA batteries). Ensure correct polarity when inserting.

- Locate the battery compartments on the underside of the keyboard and mouse.
- Open the compartments and insert the AA batteries according to the polarity indicators (+/-).
- Close the battery compartments securely.

1.2. Connect the Receiver

Plug the USB receiver into an available USB port on your computer. For optimal performance, place the receiver in a location that minimizes interference and is within close proximity to the keyboard and mouse.

Image: Underside of the Logitech MX3200 keyboard, illustrating the steps for connecting the receiver, checking batteries, and pairing the mouse and keyboard. This image provides a visual guide for initial setup.

1.3. Pair Devices

Your keyboard and mouse should automatically connect to the receiver. If they do not, press the 'Connect' button on the USB receiver, then press the 'Connect' button on the underside of the mouse, and finally on the underside of the keyboard. Allow a few moments for the connection to establish.

2. OPERATION

This section details the basic and advanced functionalities of your Logitech MX3200 Cordless Desktop Laser.

2.1. Keyboard Functions

- **Standard Typing:** Use the full-sized QWERTY layout for comfortable typing.
- **Media Controls:** Dedicated keys for volume control, play/pause, stop, and track navigation are located above the function keys.
- **Dynamic Zoom:** Utilize the dynamic zoom feature for quick magnification of screen content.
- **Integrated Clock:** The keyboard features a built-in clock display.

2.2. Mouse Functions

- **Precision Laser Tracking:** The laser sensor provides accurate and responsive cursor control on various surfaces.
- **Scroll Wheel:** Use the scroll wheel for vertical scrolling.
- **Programmable Buttons:** The mouse may include additional buttons that can be customized using Logitech software (if available for your operating system).

2.3. Wireless Range

The MX3200 operates on a 2.4 GHz wireless connection, providing a reliable connection typically up to 10 meters (33 feet) from the receiver. Performance may vary based on environmental factors and obstructions.

3. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your device.

3.1. Cleaning

- **Keyboard:** Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution. Avoid excessive moisture. For debris between keys, use compressed air.
- **Mouse:** Clean the mouse surface and the laser sensor area with a soft, dry cloth. Do not use abrasive cleaners.
- **Wrist Rest:** The integrated wrist rest can be cleaned with a damp cloth.

Image: A close-up view of the integrated wrist rest on the Logitech MX3200 keyboard, highlighting its textured, ergonomic design for user comfort.

3.2. Battery Replacement

Replace batteries when the low battery indicator lights up on the keyboard or mouse, or when performance degrades. Always use fresh AA alkaline batteries.

- Open the battery compartment.
- Remove old batteries and dispose of them responsibly.
- Insert new AA batteries, ensuring correct polarity.
- Close the compartment.

4. TROUBLESHOOTING

If you encounter issues with your MX3200 Cordless Desktop Laser, refer to the following solutions.

4.1. No Connection or Intermittent Connection

- **Check Batteries:** Ensure batteries in both the keyboard and mouse are fresh and correctly installed.
- **Re-pair Devices:** Press the 'Connect' button on the receiver, then on the mouse, then on the keyboard.
- **Receiver Placement:** Move the USB receiver closer to the keyboard and mouse. Avoid placing it near other wireless devices or large metal objects that may cause interference.
- **USB Port:** Try plugging the receiver into a different USB port on your computer.

4.2. Keys Not Responding or Mouse Not Tracking

- **Battery Check:** Replace batteries if they are low.
- **Clean Sensor:** For the mouse, ensure the laser sensor on the underside is clean and free of debris.
- **Surface:** Ensure the mouse is used on a suitable surface. Highly reflective or transparent surfaces may affect tracking.
- **Re-pair:** Attempt to re-pair the devices as described in section 4.1.

4.3. Software Issues

If you are experiencing issues with custom button assignments or advanced features, ensure you have the latest Logitech SetPoint software installed for your operating system. Visit the official Logitech support website for downloads.

5. SPECIFICATIONS

Model Number	967688-0403
Connectivity Technology	Wireless (2.4 GHz)
Batteries	4 AA batteries required (2 for keyboard, 2 for mouse)
Product Dimensions	20.25 x 9.5 x 3 inches
Item Weight	4.7 pounds
Special Feature	Ergonomic design
Compatible Devices	Personal Computer
Color	Black

6. WARRANTY INFORMATION

Logitech products are manufactured to high quality standards and are designed to provide reliable performance. For detailed warranty information, including terms, conditions, and duration, please refer to the official Logitech website or the warranty card included with your product at the time of purchase. Keep your proof of purchase for warranty claims.

7. CUSTOMER SUPPORT

For further assistance, technical support, or to download the latest drivers and software for your Logitech MX3200, please visit the official Logitech support website:

support.logi.com

You may also find helpful FAQs and community forums on the support site.

© 2024 Logitech. All rights reserved. Logitech, the Logitech logo, and other Logitech marks are owned by Logitech and may be registered. All other trademarks are the property of their respective owners.