

## Logitech 967670-0403

# Logitech Cordless Desktop LX 710 Laser User Manual

Model: 967670-0403


## INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Logitech Cordless Desktop LX 710 Laser. This product is designed to enhance your computing experience with its cordless keyboard and laser mouse, offering advanced features for media control and navigation.

## PACKAGE CONTENTS

Verify that all items listed below are present in your product package:

- Logitech LX 710 Cordless Keyboard
- Logitech LX 7 Cordless Laser Mouse
- USB mini-receiver
- 4 AA alkaline batteries
- CD with software, comfort guidelines, and help center
- Quick-start guide

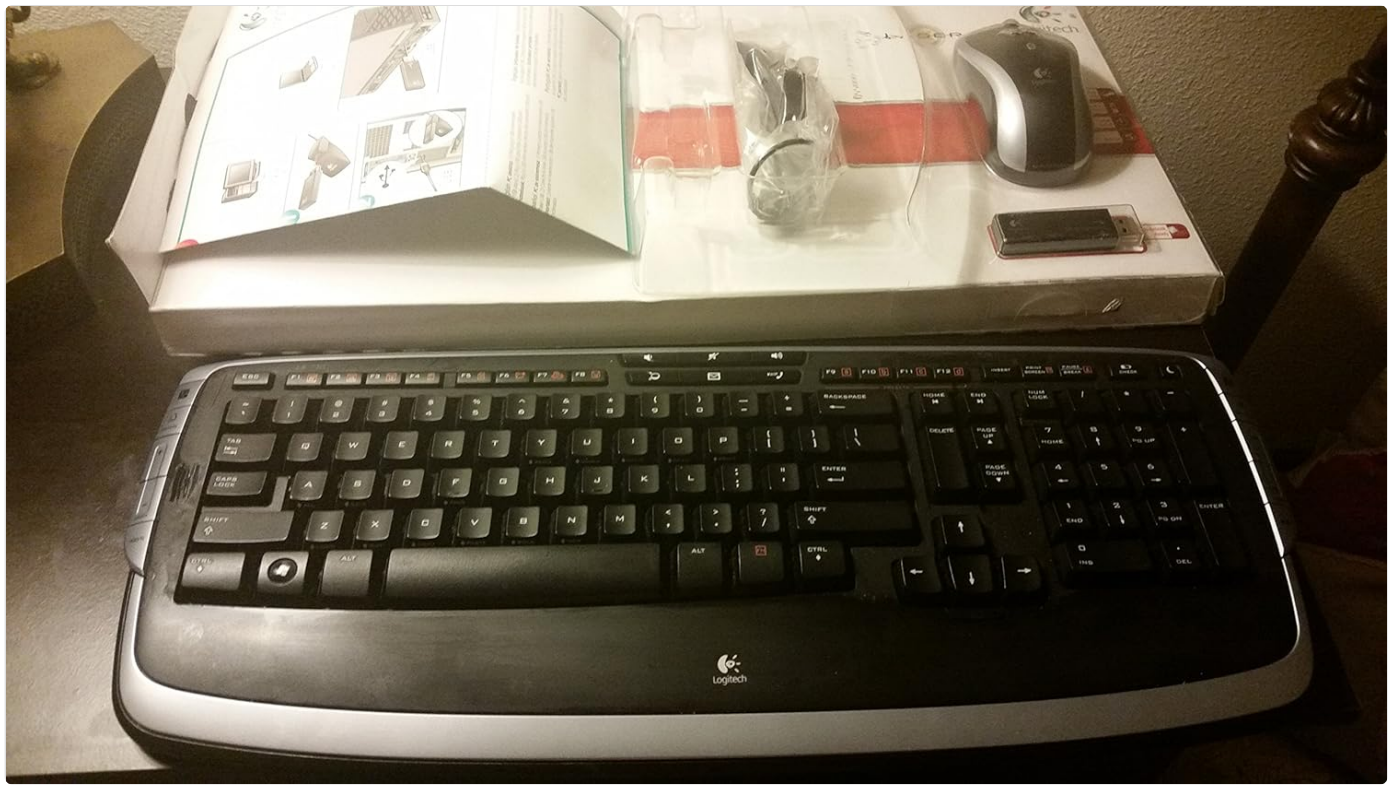

**Figure 1:** Contents of the Logitech Cordless Desktop LX 710 Laser package, including the keyboard, mouse, USB receiver, and documentation.

## SETUP

### System Requirements

- PC with Windows XP or Windows Vista
- 1 available USB port
- CD-ROM drive

#### 1. Install Batteries

Insert the provided AA alkaline batteries into the keyboard and mouse. Ensure correct polarity as indicated inside the battery compartments.

The keyboard typically requires 2 AA batteries, and the mouse typically requires 2 AA batteries.

#### 2. Connect the USB Mini-Receiver

Plug the USB mini-receiver into an available USB port on your computer. The operating system should automatically detect the new hardware.


#### 3. Install Software

Insert the provided CD into your computer's CD-ROM drive. Follow the on-screen instructions to install the Logitech software. This software enables customization of hot-keys and other advanced features.

After installation, restart your computer if prompted.

## OPERATING INSTRUCTIONS

### Keyboard Features

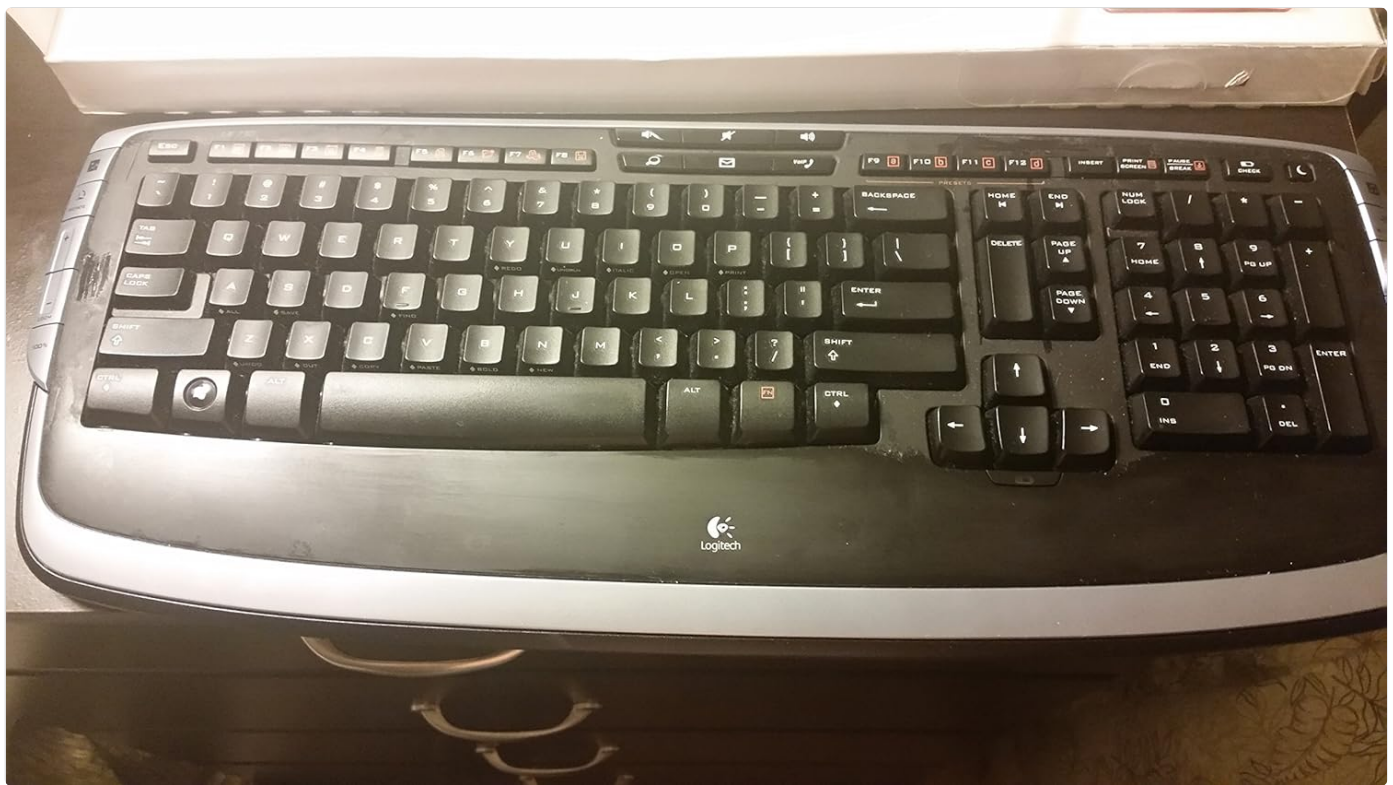

**Figure 2:** Close-up view of the Logitech LX 710 Cordless Keyboard, highlighting its layout and media controls.

- **Adjustable Keyboard Angles:** Utilize the 3-way adjustable tilt legs located on the underside of the keyboard to set your preferred typing angle for maximum comfort.
- **Programmable Hot-Keys:** Convenient hot-keys are available to instantly open applications, games, folders, and web pages. To customize a hot-key, perform a long press on the desired key.
- **Instant Access to Your Music:** Powerful, side-mounted controls provide quick access to your favorite media applications, including Apple iTunes or Windows Media Player.
- **One-Touch Communication:** Manage your Internet communications with dedicated controls for launching email, messaging, or Internet call applications, and for adjusting volume.
- **Windows Vista/XP Compatibility:** Features a Start key and handy DocFlip controls for Windows Vista. These functions are also compatible with Windows XP.
- **Premium Comfort:** The integrated soft-touch palm rest provides comfort and support, designed to reduce fatigue during extended use.

## Mouse Features

The cordless laser mouse offers precise navigation and additional functionalities:

- **Pixel Precision:** The laser tracking technology allows for accurate photo editing and general navigation.
- **Scrolling:** Supports both vertical and horizontal scrolling for enhanced document and web page navigation.
- **One-Touch Zoom:** A dedicated button provides quick zoom functionality.
- **Button Count:** The mouse features 2 primary buttons.
- **Scroll Wheel:** Equipped with a 2-way scroll wheel.



Figure 3: The Logitech Cordless Desktop LX 710 Laser, showcasing both the keyboard and mouse components.

## MAINTENANCE

---

### Cleaning

- To clean the keyboard and mouse, use a soft, damp cloth.
- Avoid using harsh chemicals, abrasive cleaners, or solvents, as these may damage the product's finish.
- Ensure no liquid enters the internal components.

### Battery Replacement

When the keyboard or mouse performance degrades, it may be time to replace the batteries. Open the battery compartment on the underside of each device and replace the old batteries with new AA alkaline batteries, observing correct polarity.

## TROUBLESHOOTING

---

### Device Not Responding

- **Check Batteries:** Ensure batteries are correctly installed and have sufficient charge. Replace if necessary.
- **Check USB Receiver:** Verify that the USB mini-receiver is securely plugged into a working USB port on your computer. Try a different USB port.
- **Re-establish Connection:** Some cordless devices have a "Connect" or "Sync" button on both the receiver and the device. Press these buttons as per the quick-start guide to re-establish the connection.
- **Interference:** Move the keyboard and mouse closer to the USB receiver. Avoid placing the receiver near other electronic devices that might cause interference (e.g., cordless phones, Wi-Fi routers).

### Software Issues

- **Reinstall Software:** If custom functions or hot-keys are not working, try uninstalling and then reinstalling the Logitech software from the provided CD.
- **Check for Updates:** Visit the Logitech support website for the latest software drivers and updates for your model.



# SPECIFICATIONS

Feature	Detail
Product Dimensions	21 x 2 x 10 inches
Item Weight	3.3 pounds
Model Number	967670-0403
Connectivity Technology	Wireless
Special Feature	Cordless
Compatible Devices	Personal Computer
Keyboard Description	Indoor
Mouse Button Count	2
Mouse Scroll Wheel	2-way
Batteries Required	4 AA alkaline batteries (2 for keyboard, 2 for mouse)
Operating System Support	Windows XP, Windows Vista

# WARRANTY AND SUPPORT

## Warranty Information

This Logitech Cordless Desktop LX 710 Laser comes with a**5-Year limited hardware warranty**. This warranty covers defects in materials and workmanship under normal use. For full terms and conditions, please refer to the warranty documentation included with your product or visit the official Logitech website.


## Customer Support

For technical assistance, product inquiries, or warranty claims, please visit the Logitech support website or contact their customer service. Details can be found in the quick-start guide or on the Logitech official website.

**Online Support:** [www.logitech.com/support](http://www.logitech.com/support)






© 2023 Logitech. All rights reserved. Logitech, the Logitech logo, and other Logitech marks are owned by Logitech and may be registered. All other trademarks are the property of their respective owners.

## Related Documents - 967670-0403



[Logitech V200 Cordless Notebook Mouse: Installation and User Guide](#)

A guide to installing and using the Logitech V200 Cordless Notebook Mouse, covering setup, features, troubleshooting, and important safety information.

	<p><a href="#">Logitech M535 Bluetooth Mouse: Features, Setup, and Compatibility Guide</a></p> <p>Discover the Logitech M535 Bluetooth Mouse. This guide covers its features, Bluetooth connection steps, customization with Logitech Options software, and compatibility with Windows, Mac OS, Chrome OS, and Android devices.</p>
	<p><a href="#">Logitech G500s Laser Gaming Mouse Setup Guide</a></p> <p>Get started with your Logitech G500s Laser Gaming Mouse. This guide provides setup instructions, feature explanations, and troubleshooting tips for optimal gaming performance.</p>
	<p><a href="#">Logitech Marathon Mouse M705: Getting Started Guide &amp; Features</a></p> <p>Comprehensive guide to setting up and using the Logitech Marathon Mouse M705, including features, troubleshooting, and Unifying receiver setup.</p>
	<p><a href="#">Logitech Desktop MK120 Quick Start Guide   Setup &amp; Troubleshooting</a></p> <p>Get started with your Logitech Desktop MK120 keyboard and mouse combo. This quick start guide provides essential setup instructions, troubleshooting tips, and support contact information for the Sequoia MK120 model.</p>
	<p><a href="#">Logitech LIFT Vertical Ergonomic Mouse User Guide and Setup</a></p> <p>Comprehensive guide to setting up, connecting, and using the Logitech LIFT Vertical Ergonomic Mouse. Learn about its features like SmartWheel, Easy-Switch, and Logitech Flow.</p>