

[Manuals.plus](#) /

› [Nintendo](#) /

› Nintendo DS Lite Coral Pink Instruction Manual

Nintendo USGSPB

Nintendo DS Lite Coral Pink Instruction Manual

Model: USGSPB

INTRODUCTION

The Nintendo DS Lite is a compact and powerful handheld video game system designed for on-the-go entertainment. Featuring a sleek folding design, dual LCD screens (one with touch-screen technology), and Wi-Fi connectivity, it offers a unique and engaging gaming experience. This manual will guide you through the setup, operation, maintenance, and troubleshooting of your Nintendo DS Lite Coral Pink system.



Image: The Nintendo DS Lite Coral Pink console, showcasing its dual screens and compact design.

PRODUCT OVERVIEW

The Nintendo DS Lite features two bright LCD screens, with the lower screen incorporating touch-screen technology for interactive gameplay. It includes a D-pad, A/B/X/Y buttons, Start and Select buttons, and shoulder buttons (L and R) for comprehensive control. The system also has two slots for game paks: Slot 1 for Nintendo DS games and Slot 2 for Game Boy Advance games, ensuring backward compatibility.

Key Features:

- **Dual Screens:** Two vibrant LCD screens for enhanced gameplay and information display.
- **Touch Screen:** The lower screen offers touch-screen functionality, allowing for intuitive control with the included stylus.
- **Wi-Fi Connectivity:** Built-in wireless mode for multiplayer gaming and online interaction via Nintendo Wi-Fi Connection.
- **Backward Compatibility:** Play both Nintendo DS and Game Boy Advance Game Paks.
- **Long Battery Life:** Up to 19 hours of continuous gameplay on a single charge.

SETUP

1. Charging the System

Before first use, fully charge your Nintendo DS Lite. Connect the AC adapter to the charging port on the back of the system and plug it into a standard wall outlet. The orange charge indicator light will illuminate. Once fully charged, the light will turn off.

Your browser does not support the video tag.

Video: An overview of the Nintendo DS Lite, demonstrating its features and charging process.

2. Inserting Game Paks

- **Nintendo DS Game Paks (Slot 1):** Open the system and locate Slot 1 on the top edge. Insert the Nintendo DS Game Pak firmly until it clicks into place.
- **Game Boy Advance Game Paks (Slot 2):** Locate Slot 2 on the bottom edge of the system. Insert the Game Boy Advance Game Pak until it is fully seated.

3. Powering On/Off

To power on the system, slide the POWER switch located on the right side of the console upwards. To power off, slide the POWER switch downwards and hold it until the screens turn off.

OPERATING THE SYSTEM

Basic Controls

- **D-Pad:** Used for directional movement and menu navigation.
- **A/B/X/Y Buttons:** Primary action buttons for gameplay and menu selections.
- **Start/Select Buttons:** Used for pausing games, confirming selections, or accessing in-game menus.
- **L/R Shoulder Buttons:** Often used for additional actions or camera control in games.

Touch Screen Usage

The lower screen is a touch screen. Use the included stylus to interact with on-screen elements, draw, or input text. Avoid using sharp objects or excessive force to prevent damage to the screen.

Nintendo Wi-Fi Connection

The Nintendo DS Lite supports wireless connectivity. You can connect to a Wi-Fi network to play multiplayer games online with friends or other Nintendo DS owners globally. A compatible router and broadband internet access are required. Refer to your game's manual for specific online play instructions.

MAINTENANCE

Cleaning

To clean the screens, use a soft, dry cloth. For the console's exterior, a slightly damp cloth can be used, ensuring no moisture enters openings. Do not use harsh chemicals or abrasive materials.

Battery Care

To maximize battery life, fully charge the system before use and avoid completely draining the battery frequently. If storing the system for an extended period, charge it periodically to maintain battery health.

Storage

Store your Nintendo DS Lite in a cool, dry place away from direct sunlight, extreme temperatures, and excessive dust. Keep it closed to protect the screens.

TROUBLESHOOTING

- **System Not Powering On:** Ensure the battery is charged. Connect the AC adapter and try again.
- **Game Not Loading:** Check that the Game Pak is inserted correctly and is clean. Try removing and reinserting it.
- **Touch Screen Unresponsive:** Ensure you are using the stylus. If the screen is dirty, clean it gently.
- **No Sound:** Check the volume slider on the left side of the system. Ensure headphones are not plugged in if you expect sound from the speakers.
- **Wi-Fi Connection Issues:** Verify your router is working and within range. Check your network settings.

If you encounter persistent issues, please refer to the official Nintendo support website or contact customer service.

SPECIFICATIONS

Feature	Specification
Platform	Nintendo DS
Color	Coral Pink
Model Number	USGSPB
Memory Storage Capacity	32 GB
Item Weight	250 Grams
UPC	045496717759, 454967177594
Manufacturer	Nintendo

WARRANTY AND SUPPORT

For information regarding product warranty, repairs, or technical assistance, please visit the official Nintendo support website. You can find detailed FAQs, troubleshooting guides, and contact information for customer service there. Keep your proof of purchase for warranty claims.

Official Nintendo Support: www.nintendo.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question