

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Alessi](#) /

› [Alessi SG68RACK W Toaster Rack Tong Instruction Manual](#)

Alessi SG68RACK

Alessi SG68RACK W Toaster Rack Tong Instruction Manual

MODEL: SG68RACK W

Brand: Alessi

INTRODUCTION

This instruction manual provides essential information for the safe and effective use of your Alessi SG68RACK W Toaster Rack Tong. Please read this manual thoroughly before initial use and retain it for future reference. This accessory is designed to be used with compatible Alessi toasters for warming various bread products.

SAFETY INFORMATION

- **Heat Hazard:** The toaster rack tong will become hot during and after use. Always handle with caution and allow it to cool before cleaning or storing.
- **Supervision:** Do not leave the toaster and rack unattended while in operation.
- **Compatibility:** Ensure the toaster rack tong is correctly installed in a compatible Alessi toaster model as specified. Improper installation may lead to instability or damage.
- **Cleaning:** Refer to the "Maintenance and Cleaning" section for proper cleaning procedures. Do not immerse the toaster rack tong in water if it is still hot.
- **Children:** Keep out of reach of children. This product is not a toy.

PRODUCT OVERVIEW

The Alessi SG68RACK W is a specialized rack tong designed to expand the functionality of your Alessi toaster, allowing for the warming of items that do not fit inside the toaster slots, such as croissants, pastries, or buns. It is constructed from 18/10 stainless steel with white PC (Polycarbonate) end pieces.



Image 1: The Alessi SG68RACK W Toaster Rack Tong, showcasing its stainless steel rack and white end supports.

SETUP

- 1. Unpack:** Carefully remove the toaster rack tong from its packaging. Inspect for any signs of damage.
- 2. Position Toaster:** Place your compatible Alessi toaster on a stable, heat-resistant surface, away from flammable materials.
- 3. Attach Rack:** Gently place the Alessi SG68RACK W Toaster Rack Tong onto the top opening of your toaster. Ensure the white PC end pieces securely rest on the toaster's top edges, with the stainless steel rack positioned above the heating elements. The rack should sit firmly and level.



Image 2: The Alessi SG68RACK W Toaster Rack Tong correctly inserted into a compatible Alessi toaster.

OPERATING INSTRUCTIONS

- 1. Place Items:** Once the rack tong is securely in place, carefully position the items you wish to warm (e.g., croissants, buns, pastries) on top of the stainless steel rack. Do not overload the rack.
- 2. Activate Toaster:** Turn on your toaster and select a low heat setting. The specific setting will depend on your toaster model and the type of item being warmed. Start with a shorter duration to prevent burning.

3. **Monitor Warming:** Observe the items closely as they warm. The rack utilizes the heat rising from the toaster slots.
4. **Remove Items:** Once warmed to your preference, turn off the toaster. Using heat-resistant gloves or appropriate utensils, carefully remove the warmed items from the rack.
5. **Cool Down:** Allow the toaster rack tong to cool completely before handling or removing it from the toaster.



Image 3: The Alessi SG68RACK W Toaster Rack Tong in operation, warming a slice of toast with visible steam.

MAINTENANCE AND CLEANING

- **Cool Before Cleaning:** Always ensure the toaster rack tong has cooled down completely before attempting to clean it.
- **Hand Wash:** Wash the rack tong by hand using warm, soapy water and a soft sponge or cloth.
- **Rinse Thoroughly:** Rinse thoroughly under running water to remove all soap residue.
- **Dry Immediately:** Dry the rack tong immediately with a soft, clean cloth to prevent water spots and maintain the mirror-polished finish of the stainless steel.
- **Do Not Use Abrasives:** Avoid using abrasive cleaners, scouring pads, or harsh chemicals, as these can scratch the stainless steel or damage the PC components.
- **Storage:** Store the clean, dry rack tong in a safe place when not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Rack does not sit securely on the toaster.	Incompatible toaster model or incorrect placement.	Ensure your toaster is an Alessi model compatible with the SG68RACK W. Reposition the rack, ensuring the white end pieces are fully seated on the toaster's top edges.
Items are not warming evenly or quickly enough.	Toaster setting is too low or items are too thick/dense.	Increase the toaster's heat setting slightly. Flip items halfway through warming for more even results. Ensure items are not excessively thick.
Rack appears discolored or stained after use.	Food residue or improper cleaning.	Clean the rack immediately after it cools down. Use warm, soapy water and a soft cloth. For stubborn stains, a non-abrasive stainless steel cleaner may be used sparingly, followed by thorough rinsing and drying.

SPECIFICATIONS

Model: SG68RACK W

Brand: Alessi

Color: White

Material: 18/10 Stainless Steel, PC (Polycarbonate)

Product Dimensions: 16.15 x 1.58 x 6.7 inches (41.02 x 4.01 x 17.02 cm)

Item Weight: 12.6 ounces (0.36 kg)

Designer: Stefano Giovannoni


UPC: 735533108809

WARRANTY AND SUPPORT

Alessi products are manufactured to high-quality standards. For specific warranty information regarding your Alessi SG68RACK W Toaster Rack Tong, please refer to the documentation provided with your original Alessi toaster or visit the official Alessi website. For customer support, product inquiries, or assistance with troubleshooting beyond this manual, please contact Alessi customer service through their official channels.

You can find more information and contact details on the [Official Alessi Website](#).

Related Documents - SG68RACK

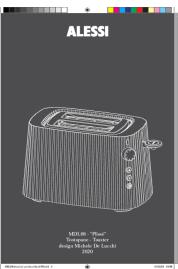


[Alessi Plissé Toaster \(MDL08\) - User Manual and Safety Instructions](#)

Comprehensive guide to the Alessi Plissé Toaster (Model MDL08), including safety information, operating instructions, troubleshooting, and care tips. Learn how to toast bread, bagels, and prepare sandwiches with this stylish kitchen appliance.




[Alessi Plissé Electric Kettle MDL06/1 User Manual and Safety Instructions](#)

User manual and important safety instructions for the Alessi Plissé electric kettle (Model MDL06/1), designed by Michele De Lucchi. Includes product details and usage guidelines.

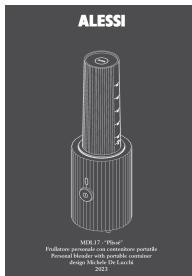

[Alessi Plissé Personal Blender MDL17: User Manual and Safety Guide](#)

Comprehensive user manual and safety guide for the Alessi Plissé Personal Blender (MDL17) by Michele De Lucchi. Learn about operation, cleaning, warranty, and important safety precautions for this portable kitchen appliance.

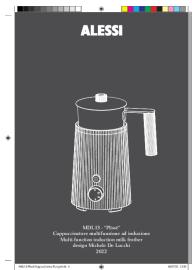

Alessi Plissé MDL13 Cappuccinatore: Guida all'uso e alla sicurezza

Scopri la guida completa per il cappuccinatore multifunzione ad induzione Alessi Plissé MDL13. Informazioni su utilizzo, pulizia, manutenzione e sicurezza per preparare latte caldo, schiumato e cioccolata calda.



Alessi hot.it Wasserkocher WA09/WA09-80 Bedienungsanleitung

Diese Anleitung bietet detaillierte Informationen zur Verwendung, Sicherheit und Pflege des Alessi hot.it Wasserkochers (Modelle WA09 und WA09/80), entworfen von Wiel Arets im Jahr 2009.



Alessi Xmas 2025 E-commerce Gift with Purchase Promotion Terms and Conditions

Official terms and conditions for the Alessi Xmas 2025 e-commerce gift with purchase promotion, detailing eligibility, promotion period, gifts, and participation rules for European customers.