

Bose CD-3000

Bose Acoustic Wave Music System and 5-CD Multi Disc Changer II Instruction Manual

Model: CD-3000

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Bose Acoustic Wave Music System and 5-CD Multi Disc Changer II. Designed for enhanced audio accuracy and versatility, this system delivers lifelike sound performance.

KEY FEATURES

- Acclaimed waveguide technology for lifelike performance at various volumes and in different environments.
- 5-CD Changer II for continuous play of five CDs in normal, random, or repeat modes, allowing disc loading/unloading without interrupting music.
- Compatibility: The Acoustic Wave Music System CD-3000 plays original jeweled case retail CDs. The 5-CD Changer II plays regular, MP3, and CD-R/RW discs.
- Integrated remote control for managing all system and changer functions.
- Enhanced versatility with iPod/MP3 player jack and headphone jack.
- Multi-input audio source selector on the 5-CD changer to connect two additional sources (e.g., TV, DVD player) for Bose quality sound.
- Optional accessories support: TV sized remote, Karaoke Microphone, Travel Case with 12V power cord, Power Pack for portable use.
- Expandable with optional Bose SoundTouch wireless speakers (10, 20, or 30) in enhanced stereo mode or for multi-room audio via a Bose Wireless Audio Adapter (SoundTouch Wireless Link) connected to the headphone jack (Auxiliary Line Out function).

SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Ensure all items listed in the "What's

in the Box" section are present.

2. **Placement:** Place the Acoustic Wave Music System and the 5-CD Multi Disc Changer II on a stable, flat surface. Ensure adequate ventilation around both units. Avoid placing them near heat sources or in direct sunlight.
3. **Power Connection:** Connect the power cord to the main Acoustic Wave Music System and then to a suitable electrical outlet.
4. **Connecting the 5-CD Multi Disc Changer II:**

Connect the audio output from the 5-CD Multi Disc Changer II to the auxiliary input of the Acoustic Wave Music System using appropriate audio cables (not included unless specified). Refer to the diagram below for connection points.

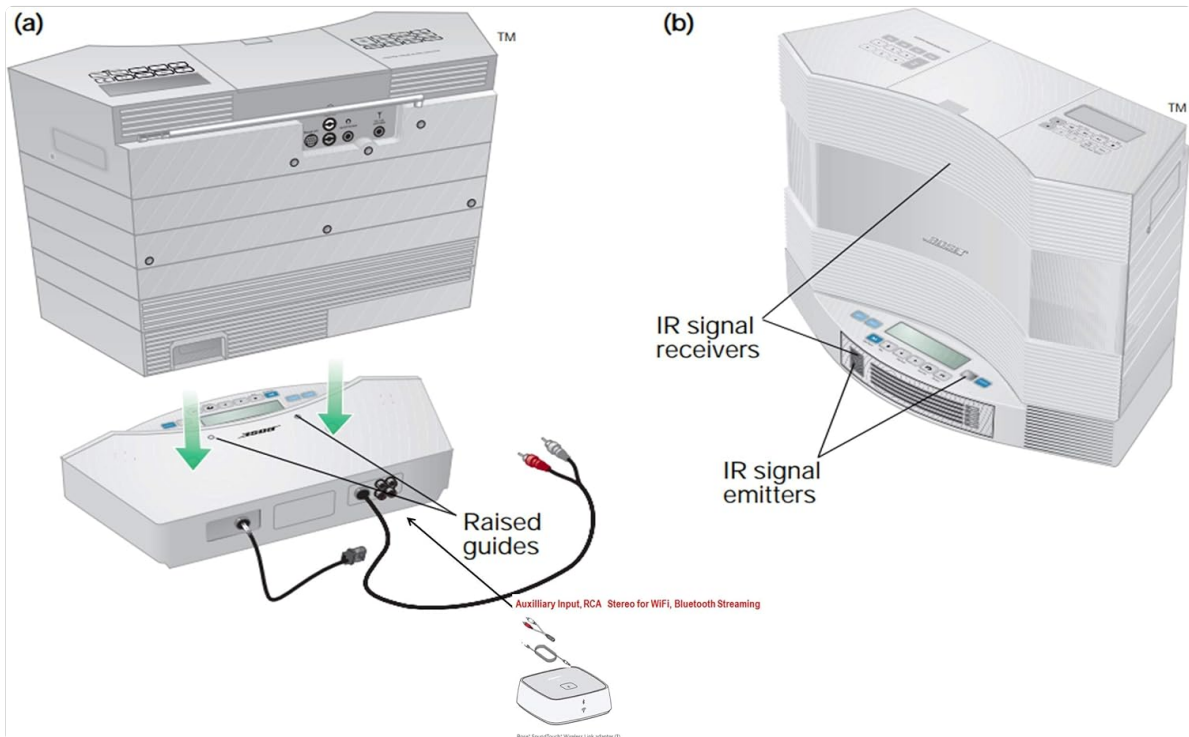


Figure 1: Rear panel connections for the Bose Acoustic Wave Music System and 5-CD Multi Disc Changer II. This image illustrates the auxiliary input, RCA stereo for WiFi/Bluetooth streaming, and IR signal receivers/emitters.

5. **Antenna Connection (if applicable):** Connect the FM/AM antenna for optimal radio reception.

OPERATING INSTRUCTIONS

Power On/Off

Press the "Power" button on the system or the remote control to turn the system on or off.

CD Playback (Using 5-CD Multi Disc Changer II)

1. **Loading Discs:** Open the disc tray on the 5-CD Multi Disc Changer II. Place up to five compatible CDs onto the individual disc slots. Close the tray.



Figure 2: The Bose Acoustic Wave Music System (top) and the 5-CD Multi Disc Changer II (bottom) in Graphite Grey. The changer allows for multiple CD loading.

2. **Selecting Source:** On the Acoustic Wave Music System, select the auxiliary input source to listen to the CD changer.
3. **Playing Discs:** Press the "Play" button on the remote or the changer unit. Use the "Disc Select" buttons to choose a specific CD.
4. **Track Navigation:** Use the "Skip" or "Search" buttons on the remote to navigate between tracks or fast-forward/rewind within a track.
5. **Playback Modes:** Utilize "Repeat" for single track/disc repetition or "Random" for shuffled playback across loaded discs.

Radio (AM/FM)

1. **Selecting Source:** Press the "FM" or "AM" button on the remote or system to switch to radio mode.
2. **Tuning:** Use the "Tune" buttons to manually scan for stations or the "Seek" function to automatically find strong signals.
3. **Presets:** Store your favorite stations using the preset buttons on the remote for quick access.

Auxiliary Input

Connect external audio devices (e.g., smartphone, tablet, TV, DVD player) to the "AUX IN" jack on the Acoustic Wave Music System or the multi-input audio source selector on the 5-CD changer. Select the corresponding auxiliary input source on the system to play audio from the connected device.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior surfaces of the system. Do not use liquid cleaners or solvents.
- **Disc Care:** Handle CDs by their edges. Keep them clean and free of scratches to ensure optimal playback.
- **Ventilation:** Ensure that the ventilation openings on the system are not blocked to prevent overheating.

TROUBLESHOOTING

- **No Power:** Check if the power cord is securely plugged into both the system and the electrical outlet.
- **No Sound:** Verify that the correct audio source is selected. Check volume levels on both the system and any connected external devices. Ensure speakers are properly connected.
- **CD Skipping/Not Playing:** Ensure the CD is clean and free of scratches. Try a different CD. Check if the disc is inserted correctly.
- **Poor Radio Reception:** Adjust the position of the FM/AM antenna. Try tuning to a different station.

SPECIFICATIONS

Feature	Detail
Product Dimensions	18 x 8.38 x 13.88 inches
Item Weight	17.85 pounds
ASIN	B000J01HXU
Model Name	CD-3000
Color	Grey
Connectivity Technology	Wireless, Auxiliary
Special Feature	Portable
Manufacturer	BOSE
Date First Available	September 23, 2006

WHAT'S IN THE BOX

- Power Cord
- Remote Control

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Bose website or contact their customer service directly. Keep your purchase receipt for warranty claims.