

Wahl WL5528

Wahl Ear/Nose/Brow 3-in-1 Trimmer

MODEL: WL5528

Introduction

This manual provides instructions for the safe and effective use of your Wahl Ear/Nose/Brow 3-in-1 Trimmer, Model WL5528. This battery-operated personal trimmer is designed for precision grooming of unwanted hair in the nose, ears, and eyebrows. It features interchangeable trimming heads for versatile use.

Safety Information

Always use with caution. Keep away from water. Avoid use on infants. Do not force the trimmer onto the skin. Keep the trimmer clean and dry. Always use the protective cap when not in use. Always replace the guard before trimming. Always unplug the trimmer from the power source before cleaning or storing. Always store the trimmer in a dry place. Always follow the instructions provided in the user manual.

Package Contents

- Wahl Trimmer Unit
- Rotary Trimming Head
- Reciprocating Trimming Head (Narrow)
- Reciprocating Trimming Head (Wide/Brow)
- Protective Cap
- Instruction Manual





Image: The Wahl 3-in-1 Trimmer unit is shown alongside its three interchangeable trimming heads: one rotary head and two reciprocating heads of different sizes.

Setup

- Battery Installation:** The trimmer requires 1 AAA battery. To install, twist the bottom cap of the trimmer counter-clockwise and remove it. Insert one fresh AAA battery, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the battery compartment. Replace the bottom cap by twisting it clockwise until secure.
- Attaching Trimming Heads:** To attach a trimming head, align the head with the top of the trimmer unit and gently push down until it clicks into place. To remove, twist the head slightly and pull upwards. Ensure the trimmer is turned off before changing heads.

Operating Instructions

General Operation

- Ensure a trimming head is securely attached.
- Slide the power switch to the 'ON' position to activate the trimmer.
- After use, slide the power switch to the 'OFF' position.

Nose and Ear Trimming (Rotary Head)

Gently insert the rotary trimming head into the nostril or ear canal. Move the trimmer in a circular motion to trim unwanted hair. Do not insert the trimmer too deeply into the nose or ear. Use caution to avoid irritation.



Image: A person is shown holding the Wahl trimmer to their ear, demonstrating its use for ear hair removal.

Eyebrow Trimming (Reciprocating Head)

For eyebrow trimming, use one of the reciprocating heads. Gently comb your eyebrows into place. Carefully guide the trimmer along the desired line to remove stray hairs. For shaping, use the narrower reciprocating head. For general trimming, the wider head may be used. Always trim against the direction of hair growth for best results.

Maintenance and Cleaning

- Cleaning Trimming Heads:** The trimming heads are designed to be rinse clean. After each use, remove the trimming head from the trimmer unit. Rinse the head under running water to remove hair clippings. Allow the head to air dry completely before reattaching or storing. Do not rinse the main trimmer body.
- Storage:** Store the trimmer and its accessories in a dry place, away from moisture and extreme temperatures. Always place the protective cap over the trimming head when not in use.
- Battery Replacement:** When the trimmer's performance diminishes, it is time to replace the AAA battery. Follow the battery installation steps outlined in the Setup section. Dispose of used batteries responsibly.

Troubleshooting

- Trimmer does not turn on:**
 - Check if the battery is inserted correctly with the correct polarity.
 - Replace the battery with a fresh AAA battery.
 - Ensure the power switch is fully in the 'ON' position.
- Trimmer pulls hair or performs poorly:**
 - The battery may be low; replace it with a fresh one.
 - The trimming head may be clogged with hair. Clean the head thoroughly as per the Maintenance section.
 - Ensure the trimming head is securely attached.

Specifications

Model Number	WL5528
Power Source	1 x AAA Battery (required)
Material	Stainless Steel (Blades)
Item Weight	132 Grams
Product Dimensions	9.5 x 5 x 20.5 cm
Special Features	Cordless, Rinse Clean Heads

Warranty and Support

Wahl products are manufactured to the highest quality standards. For information regarding your product's

warranty, please refer to the warranty card included in your product packaging or visit the official Wahl website. For technical support, replacement parts, or any other inquiries, please contact Wahl customer service directly.