

Lemax 54353-UK

Lemax Santa Claus is Coming to Town Animated Display Manual

Model: 54353-UK

INTRODUCTION

Thank you for purchasing the Lemax Santa Claus is Coming to Town animated display. This festive piece features three children building a snowman, while Santa Claus in his sleigh with reindeers rotates above the base, delivering toys. This manual provides essential information for the setup, operation, maintenance, and troubleshooting of your display.



Figure 1: Lemax Santa Claus is Coming to Town Animated Display. This image shows the complete animated display, featuring a snowy base with three children building a snowman and a frosted Christmas tree. Above them, Santa Claus is depicted in his red sleigh, pulled by two reindeer, suspended by a black arched support structure, giving the illusion of flight.

SETUP INSTRUCTIONS

Follow these steps to set up your Lemax animated display:

- 1. Unpacking:** Carefully remove all components from the packaging. Ensure all parts are present: the main animated display unit and the 4.5V power adaptor.
- 2. Placement:** Place the display on a stable, flat surface, such as a table, away from direct sunlight, heat sources, and moisture. Ensure there is enough clearance above the unit for the rotating Santa and sleigh.

- Power Connection:** Locate the power input jack on the display unit. Insert the small plug from the 4.5V adaptor into this jack.
- Power On:** Plug the 4.5V adaptor into a standard electrical outlet. The unit is designed to operate with the included adaptor only.

Note: This product does not require batteries and is designed for indoor use only.

OPERATING INSTRUCTIONS

Your Lemax Santa Claus is Coming to Town display features animated effects and motion. Operation is straightforward:

- Power Switch:** Locate the power switch on the unit. This switch controls all functions of the display.
- Turning On:** Flip the power switch to the "ON" position. The display will illuminate, and Santa Claus in his sleigh with reindeers will begin to rotate above the base.
- Volume Control:** If your unit includes sound, locate the volume control dial. Adjust the dial to your desired sound level.
- Turning Off:** To turn off the display, flip the power switch to the "OFF" position. Unplug the adaptor from the electrical outlet when not in use for extended periods.

The animated motion of Santa and the reindeers is continuous when the unit is powered on.

MAINTENANCE AND CARE

Proper care will ensure the longevity of your Lemax animated display:

- Cleaning:** To clean the display, gently wipe the surface with a soft, dry cloth. Do not use abrasive cleaners, solvents, or excessive moisture, as this may damage the finish or electronic components.
- Storage:** When not in use, store the display in its original packaging or a protective container in a cool, dry place. Avoid storing in areas with extreme temperatures or high humidity.
- Handling:** Handle the display with care, especially the delicate animated parts. Avoid dropping or subjecting the unit to strong impacts.
- Power Adaptor:** Always use the original 4.5V adaptor provided with the unit. Do not use any other power source. Inspect the adaptor cord periodically for any signs of damage.

TROUBLESHOOTING

If you encounter issues with your Lemax display, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Display does not power on.	Adaptor not properly connected. Power outlet not functioning. Power switch is OFF.	Ensure the adaptor is securely plugged into both the unit and the electrical outlet. Test the outlet with another device. Flip the power switch to the "ON" position.

Problem	Possible Cause	Solution
Animated parts are not moving.	Obstruction in the mechanism. Unit not receiving power.	Check for any foreign objects or debris obstructing the movement of Santa's sleigh or reindeers. Gently remove any obstructions. Refer to "Display does not power on" solutions.
Sound is not working or is distorted.	Volume is too low. Speaker obstruction.	Adjust the volume control dial. Ensure the speaker area is clear of any obstructions.

If the problem persists after trying these solutions, please contact Lemax customer support for further assistance.

PRODUCT SPECIFICATIONS

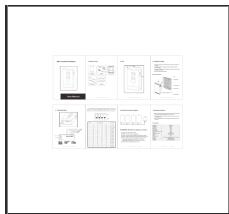
Model Number	54353-UK
Brand	Lemax
Theme	Christmas
Material	Electronic Component
Color	Multicolor
Product Dimensions (D x W x H)	6.38" x 9.84" x 12.6" (16.2 cm x 24.9 cm x 32 cm)
Item Weight	1.32 pounds (0.6 kg)
Included Components	4.5V Adaptor
Power Source	4.5V Adaptor (included)
Assembly Required	No
Batteries Required	No
Year Released	2005
UPC	728162543530

WARRANTY AND SUPPORT

Lemax products are manufactured with high-quality standards. For information regarding product warranty, returns, or technical support, please refer to the official Lemax website or contact their customer service directly. Keep your purchase receipt as proof of purchase.

You can visit the official Lemax store for more information:[Lemax Store on Amazon](#)

Related Documents

	<p><u>Wall-mounted LFP Battery User Manual</u></p> <p>User manual for the Wall-mounted LFP Battery, detailing product parts, size, installation steps, product details, parallel connection diagram, warnings, storage conditions, and technical data.</p>
--	--