

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [Multi-Code](#) /
- > [Multi-Code FBA_3089 Visor Remote Opener User Manual](#)

Multi-Code FBA_3089

Multi-Code FBA_3089 Visor Remote Opener User Manual

Model: FBA_3089 | Brand: Multi-Code

PRODUCT OVERVIEW

This Multi-Code FBA_3089 Visor Remote Opener is designed for use with Linear Multi-Code garage door and gate opener systems. It is important to note that this remote is **not a universal remote** and is specifically compatible only with Multi-Code 300 MHz products. It is not compatible with LiftMaster, Sears, Genie, Wayne Dalton, or Chamberlain openers.

Key features include 10 binary dip switches for programming, a convenient visor clip for vehicle attachment, and operation using a 9-Volt battery.



Image: Front view of the Multi-Code FBA_3089 Visor Remote Opener, showing the single white button, red indicator light, and "MULTI-CODE" branding. A metal visor clip is visible at the top.

SETUP AND PROGRAMMING

1. Battery Installation

The Multi-Code FBA_3089 remote requires one 9-Volt battery for operation. To install or replace the battery:

1. Locate the battery compartment cover on the back of the remote.
2. Carefully slide or unclip the cover to open the compartment.
3. Insert a new 9-Volt battery, ensuring correct polarity (+ and - terminals).
4. Replace the battery compartment cover, ensuring it clicks securely into place.

2. Programming the Remote

This remote is designed for easy programming with compatible Multi-Code 300 MHz receivers. The programming typically involves matching the 10 binary dip switches inside the remote to the corresponding dip switches on your garage door or gate opener receiver.

1. Open the remote's casing to access the dip switches. This may involve removing a small screw or gently prying open the case.
2. Locate the 10 dip switches inside the remote.
3. Access your Multi-Code garage door or gate opener receiver and locate its 10 dip switches.
4. Carefully match the ON/OFF positions of the dip switches on your new remote to the exact ON/OFF positions of the dip switches on your receiver.
5. Once the switches are matched, close the remote's casing.
6. Test the remote by pressing the button to ensure it operates your garage door or gate.

Note: For detailed instructions on accessing your receiver's dip switches, please refer to your specific garage door or gate opener's manual.

OPERATING THE REMOTE

Once programmed, operating the Multi-Code FBA_3089 remote is straightforward:

- Point the remote towards your garage door or gate opener.
- Press and hold the large white button on the front of the remote.
- The red indicator light on the remote will blink, signaling that a signal is being transmitted.
- Release the button once your garage door or gate begins to move.

The included visor clip allows for convenient storage and access within your vehicle.

MAINTENANCE

Battery Replacement

If the remote's range decreases or the indicator light does not illuminate when the button is pressed, it may be time to replace the 9-Volt battery. Follow the battery installation steps outlined in the "Setup and Programming" section.

Cleaning

Wipe the remote with a soft, dry cloth. Avoid using abrasive cleaners or solvents.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote does not operate the opener.	Incorrect dip switch settings.	Verify that the 10 dip switches on the remote exactly match those on your Multi-Code receiver.
Remote indicator light does not illuminate.	Dead or improperly installed 9-Volt battery.	Replace the 9-Volt battery, ensuring correct polarity.

Problem	Possible Cause	Solution
Limited range or intermittent operation.	Weak battery or interference.	Replace the battery. Ensure no large metal objects are obstructing the signal path.
Remote is not compatible with my opener.	This remote is ONLY for Linear Multi-Code 300 MHz openers.	Confirm your garage door or gate opener is a Linear Multi-Code 300 MHz model. This remote is NOT compatible with LiftMaster, Sears, Genie, Wayne Dalton, or Chamberlain openers.

SPECIFICATIONS

- **Brand:** Multi-Code
- **Model Number:** FBA_3089
- **Part Number:** FBA_3089
- **Item Weight:** 0.16 ounces
- **Product Dimensions:** 3.75 x 1.5 x 2.5 inches
- **Power Source:** Battery Powered
- **Battery Type:** 9-Volt Alkaline (1 required, not included)
- **Color:** Gray
- **Shape:** Linear
- **Special Feature:** Ergonomic
- **Max Number of Supported Devices:** 1
- **Compatible Devices:** Linear model 109950 and 302850 receivers (Multi-Code 300 MHz products)

WARRANTY AND SUPPORT

Specific warranty information for the Multi-Code FBA_3089 Visor Remote Opener is not provided in the available product data. Please refer to the retailer or manufacturer's website for warranty details.

For technical support or further assistance, please contact the Multi-Code customer service or refer to their official website. Contact information is typically found on the product packaging or the manufacturer's official online resources.