

Manuals.plus /

› Grundig /

› Grundig Lenaro 40 LXW 102-8620 Dolby HD TV User Manual

Grundig Lenaro 40 LXW 102-8620 Dolby

Grundig Lenaro 40 LXW 102-8620 Dolby HD TV User Manual

Model: Lenaro 40 LXW 102-8620 Dolby

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Grundig Lenaro 40 LXW 102-8620 Dolby HD Television. Please read these instructions thoroughly before using the product and retain them for future reference. This television features a 40-inch LCD screen, offering high-definition viewing and integrated Dolby audio technology.

2. SAFETY INFORMATION

To ensure safe operation and prevent damage, observe the following safety precautions:

- Do not expose the television to rain or moisture to prevent fire or electric shock.
- Ensure proper ventilation. Do not block ventilation openings.
- Place the television on a stable, level surface to prevent it from falling.
- Do not place heavy objects on the power cord.
- Disconnect the power plug from the wall outlet during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Grundig Lenaro 40 LXW 102-8620 Dolby HD Television

- Remote Control
- Power Cable
- Table Stand (components for assembly)
- User Manual (this document)

4. SETUP

4.1 Unpacking

Carefully remove the television and all accessories from the packaging. Retain the packaging materials for future transport or storage.

4.2 Attaching the Table Stand

The Grundig Lenaro 40 LXW 102-8620 Dolby is designed for table mounting. Follow these steps to attach the stand:

1. Place the television face down on a soft, clean cloth to prevent screen damage.
2. Align the stand base with the mounting holes on the bottom of the television.
3. Secure the stand using the provided screws. Ensure all screws are tightened firmly.
4. Carefully lift the television and place it on a stable, level surface.

4.3 Connecting Power

Connect the power cable to the power input on the back of the television, then plug the other end into a wall outlet.

4.4 Connecting External Devices

Your television supports various connections:

- **HDMI:** For high-definition video and audio from devices like Blu-ray players, game consoles, or set-top boxes. Use an HDMI cable to connect the device to an HDMI port on the TV.
- **Ethernet:** For wired network connectivity. Connect an Ethernet cable from your router to the LAN port on the TV.



Figure 1: Front view of the Grundig Lenaro 40 LXW 102-8620 Dolby HD TV, showing the screen and bezel.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

Press the **POWER** button on the remote control or on the television to turn the TV on or off.

5.2 Remote Control Functions

The remote control allows you to access all television functions. Key buttons include:

- **POWER:** Turns the TV on or off.
- **SOURCE/INPUT:** Selects the input source (HDMI, TV, etc.).
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes channels.
- **MENU:** Accesses the main menu for settings adjustments.
- **NAVIGATION BUTTONS (Up/Down/Left/Right):** Navigates through menus.
- **OK/ENTER:** Confirms selections.
- **EXIT/BACK:** Returns to the previous screen or exits the menu.

5.3 Initial Setup Wizard

Upon first power-on, the television will guide you through an initial setup wizard to configure language, country, time zone, and scan for available channels.

5.4 Network Connectivity

If connected via Ethernet, the TV can access network features. Navigate to the network settings in the main menu to configure or verify the connection.

6. MAINTENANCE

6.1 Cleaning the Screen

Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, slightly dampen the cloth with water or a specialized screen cleaner. Do not spray cleaner directly onto the screen.

6.2 Cleaning the Cabinet

Wipe the television cabinet with a soft, dry cloth. Avoid using abrasive cleaners or solvents.

6.3 General Care

Ensure the television is placed in a well-ventilated area, away from direct sunlight and heat sources. Avoid placing objects on top of the television.

7. TROUBLESHOOTING

If you encounter issues with your television, refer to the following common problems and solutions:

Problem	Possible Solution
No power	Check if the power cable is securely connected to both the TV and the wall outlet. Try a different outlet.
No picture, but sound is present	Ensure the correct input source is selected. Check cable connections to external devices.
No sound, but picture is present	Check the volume level and ensure the TV is not muted. Verify audio settings in the menu.
Remote control not working	Replace the batteries in the remote control. Ensure there are no obstructions between the remote and the TV's IR sensor.
Poor picture quality	Check antenna/cable connections. Adjust picture settings (brightness, contrast, sharpness) in the TV menu.

8. SPECIFICATIONS

Feature	Detail
Model Number	Lenaro 40 LXW 102-8620 Dolby
Brand	Grundig
Screen Size	40 Inches
Display Technology	LCD
Special Feature	Flat Screen
Connectivity Technology	Ethernet
Hardware Interface	HDMI
Mounting Type	Table Stand
Product Weight	68.56 Pounds (approx. 31.1 kg)
Model Year	2018
Wattage	20 Watts
Response Time	8 Milliseconds
Control Method	Remote Control
Package Dimensions	108.2 x 80.7 x 34.5 cm

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit

the official Grundig website. You may also contact Grundig customer service for assistance with product registration, troubleshooting, or service requests.

Official Grundig Website: www.grundig.com