

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Sebo](#) /
- › [Sebo Automatic X4 Upright Vacuum Cleaner Instruction Manual](#)

Sebo Automatic X4

Sebo Automatic X4 Upright Vacuum Cleaner Instruction Manual

1. PRODUCT OVERVIEW

The Sebo Automatic X4 is a high-performance upright vacuum cleaner designed for effective cleaning across various floor types. It features automatic brush height adjustment and advanced filtration for optimal dust and allergen retention.



Figure 1: Sebo Automatic X4 Upright Vacuum Cleaner. This image displays the full upright vacuum cleaner in its standard operating position.

2. SETUP AND ASSEMBLY

Your Sebo Automatic X4 vacuum cleaner is designed for straightforward assembly. Please follow these steps to prepare your unit for first use:

1. **Unpacking:** Carefully remove all components from the packaging. Ensure all parts listed in the

packing contents are present.

2. **Handle Assembly:** Attach the handle to the main body of the vacuum cleaner. Ensure it clicks securely into place.
3. **Dust Bag Installation:** Open the dust bag compartment and insert a new Sebo filter bag. Ensure the bag collar is properly seated in the holder.
4. **Tool Attachment:** Secure the on-board tools (crevice tool, upholstery nozzle, dusting brush) into their designated storage slots on the vacuum body.



Figure 2: Dust Bag Compartment. This image shows the dust bag compartment open, with a new filter bag being inserted. Proper installation ensures optimal filtration and suction.

3. OPERATING INSTRUCTIONS

The Sebo Automatic X4 is designed for ease of use with intelligent features to optimize your cleaning experience.

3.1 Powering On and Off

- Plug the 40-foot power cord into a suitable electrical outlet.
- Press the power button located on the vacuum's body to turn the unit on.

- To turn off, press the power button again.

3.2 Automatic Height Adjustment

The Automatic X4 features an electronic controller that automatically adjusts the brush height to suit any floor surface, from hard floors to thick carpets. This ensures optimal cleaning performance without manual intervention.



Figure 3: Automatic Brush Height Adjustment. The vacuum head is shown transitioning between carpet and hard flooring, demonstrating its automatic adjustment capability.

3.3 Using On-Board Tools

For detailed cleaning, the integrated hose and on-board tools can be easily accessed:

- To use the hose, simply pull it out from its storage position. The suction will automatically divert to the hose.
- Attach the desired tool (e.g., crevice tool for tight spaces, upholstery nozzle for furniture) to the end of the hose.
- When finished, return the hose and tools to their storage positions.



Figure 4: Integrated Hose and Wand. A user is shown utilizing the vacuum's flexible hose and wand attachment for above-floor cleaning.

4. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your Sebo Automatic X4.

4.1 Dust Bag Replacement

- The vacuum features an indicator light that illuminates red when the dust bag is full and requires replacement.
- To replace, open the dust bag compartment, remove the full bag, and insert a new Sebo filter bag, ensuring a secure fit.

4.2 Filter Replacement

The Automatic X4 utilizes multiple filters for superior air filtration. These filters should be checked periodically and replaced as indicated by the vacuum's warning lights or manufacturer recommendations.

4.3 Brush Roll Cleaning and Removal

The brush roll can be easily detached for cleaning, which is particularly useful for removing tangled hair or

debris.



Figure 5: Brush Roll Removal. A hand is shown easily detaching the brush roll from the vacuum head for maintenance.

5. TROUBLESHOOTING

The Sebo Automatic X4 is equipped with features to assist in troubleshooting common issues.

5.1 Brush Obstruction Light and Automatic Shut-Off

If the brush roll encounters an obstruction, an indicator light will illuminate, and the motor will automatically shut off to prevent damage. To resolve this:

1. Turn off and unplug the vacuum cleaner.
2. Remove the brush roll (refer to Section 4.3).
3. Clear any tangled hair or debris from the brush roll and the brush housing.
4. Reinstall the brush roll and resume operation.



Figure 6: Brush Obstruction. The vacuum head is shown with a cloth caught in the brush roll, illustrating the obstruction detection feature.

6. SPECIFICATIONS

- **Brand:** Sebo
- **Model Name:** 9570AM Automatic X4
- **Form Factor:** Upright
- **Special Feature:** Bagged
- **Filter Type:** Cloth
- **Included Components:** Brush
- **Is Cordless?:** No
- **Capacity:** 1.5 Gallons
- **Wattage:** 1300 watts
- **Maximum Suction:** 100 Inches
- **Hose Length:** 8 Feet
- **Recommended Uses For Product:** Carpet
- **Color:** White/Gray
- **Product Dimensions:** 14"L x 10"W x 31"H

- **Noise Level:** 70 Decibels
- **Amperage:** 10.83 Amps
- **Controller Type:** Push Button
- **Motor Horsepower:** 0.84 Horsepower
- **Control Method:** Touch
- **Number of Speeds:** 1
- **Portable:** No
- **Number of Power Levels:** 2
- **Indoor/Outdoor Usage:** Indoor
- **Finish Type:** Matte
- **Item Weight:** 20 pounds
- **Batteries required:** Yes

7. WARRANTY AND SUPPORT

The Sebo Automatic X4 comes with a comprehensive warranty to ensure your peace of mind.

- **Warranty Description:** 5 year for parts & labor.



Figure 7: Sebo Warranty Badge. This badge indicates a 10-year warranty on parts and motor, and 5 years on labor.

7.1 Official Product Video

Your browser does not support the video tag.

Video 1: SEBO Automatic X-Series Upright Vacuum Cleaner Features. This video provides an overview of the key features and benefits of the Sebo Automatic X-Series vacuum cleaner.

