

Euro-Pro EP366

Euro-Pro Ultra Shark 700 Watt Turbo Hand Vacuum

Model: EP366

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic precautions should always be followed, including the following:

- Read all instructions before using this hand vacuum.
- To reduce the risk of electric shock, do not use outdoors or on wet surfaces.
- Do not allow the appliance to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material, such as chlorine bleach, ammonia, or drain cleaner.
- Do not use without dust cup and filter in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Store your appliance indoors in a cool, dry area.

PRODUCT OVERVIEW AND COMPONENTS

The Euro-Pro Ultra Shark Hand Vacuum is a powerful, lightweight, and bagless cleaning solution designed for various indoor tasks. It features a 700-watt motor for strong suction.

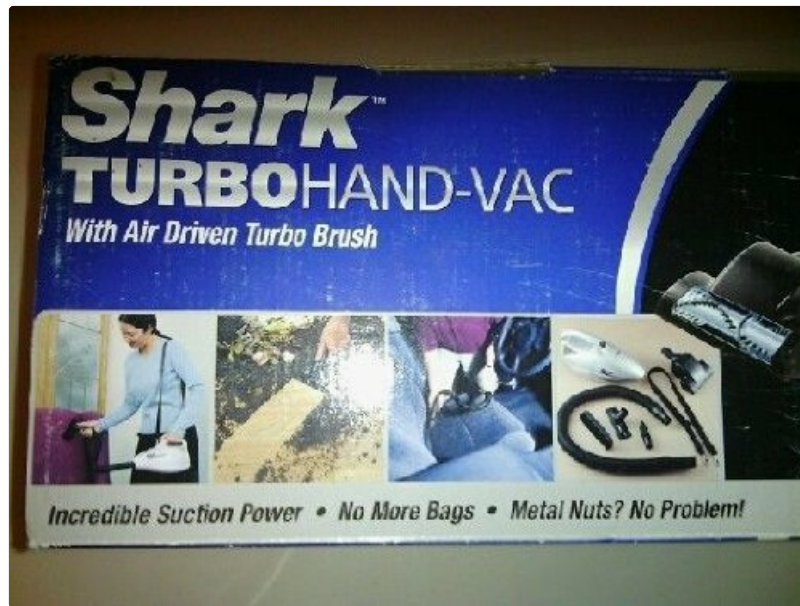


Image: The Euro-Pro Ultra Shark 700 Watt Turbo Hand Vacuum, showing the main unit, flexible hose, and various cleaning attachments.

Included Components:



Image: A close-up view of the product packaging, detailing the list of included accessories.

- 1 x Air Driven Turbo Brush
- 1 x Deluxe Hose
- 1 x Crevice Tool
- 1 x Dusting Brush with Removable Bristles

- 1 x Extra Dust Cup Filter
- 1 x Shoulder Strap

SETUP

Before first use, ensure all components are present and undamaged. The Euro-Pro Ultra Shark is designed for quick assembly.

1. **Unpack Components:** Carefully remove the vacuum unit, hose, and all accessories from the packaging.
2. **Attach Hose:** Connect the deluxe hose to the suction inlet on the main vacuum unit. Ensure it clicks securely into place.
3. **Select Attachment:** Choose the appropriate cleaning attachment (e.g., Air Driven Turbo Brush, Crevice Tool, Dusting Brush) for your cleaning task and firmly attach it to the end of the hose.
4. **Check Dust Cup and Filter:** Ensure the dust cup is properly seated and the cartridge filter is correctly installed before operation.

OPERATING INSTRUCTIONS

The Euro-Pro Ultra Shark Hand Vacuum is a corded electric appliance with simple controls for efficient cleaning.

1. **Power Connection:** Plug the power cord into a standard electrical outlet. The vacuum operates on a corded electric power source.
2. **Power On/Off:** Locate the power switch (hand control/touch control) on the main unit. Press the switch to turn the vacuum ON. Press it again to turn the vacuum OFF.
3. **Cleaning Surfaces:** Use the selected attachment to clean desired surfaces. The vacuum is recommended for carpet and general everyday indoor clean-up.
4. **Using Attachments:**
 - **Air Driven Turbo Brush:** Ideal for deeper cleaning on carpets and upholstery.
 - **Crevice Tool:** Perfect for reaching tight spaces, corners, and edges.
 - **Dusting Brush:** Suitable for delicate surfaces, vents, and general dusting. Bristles can be removed for specific tasks.
5. **Portability:** Utilize the included shoulder strap for comfortable carrying during extended cleaning sessions or when moving between areas.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your Euro-Pro Ultra Shark Hand Vacuum. This model is bagless, simplifying dust disposal.

1. **Emptying the Dust Cup:**
 - When the dust cup appears full or suction power decreases, turn off and unplug the vacuum.
 - Detach the dust cup from the main unit according to the instructions in your product guide (typically a release button or latch).
 - Empty the contents into a waste bin.
2. **Cleaning the Cartridge Filter:**
 - After emptying the dust cup, remove the cartridge filter.

- Tap the filter gently over a waste bin to remove loose dust and debris.
 - For a more thorough cleaning, rinse the filter under cool running water. Ensure the filter is completely dry before reinserting it into the vacuum. Do not use the vacuum with a wet filter.
 - Replace the filter if it is damaged or excessively worn. An extra dust cup filter is included.
3. **Cleaning Attachments:** Periodically clean the hose and attachments to remove any blockages or accumulated debris.
4. **Exterior Cleaning:** Wipe the exterior of the vacuum with a soft, damp cloth. Do not use harsh cleaners or solvents.

TROUBLESHOOTING

If you encounter issues with your Euro-Pro Ultra Shark Hand Vacuum, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on	No power supply; Power cord not plugged in; Faulty outlet	Check power cord connection; Try a different outlet; Ensure power switch is ON
Loss of suction	Dust cup full; Filter clogged; Hose or attachment blocked	Empty dust cup; Clean or replace filter; Check hose and attachments for blockages
Unusual noise	Blockage in hose or brush; Damaged motor (rare)	Turn off and unplug, then check for and remove blockages; If noise persists, contact customer support
Attachments not staying on	Attachments not fully seated; Damaged attachment or hose connection	Ensure attachments are pushed firmly into place; Inspect for damage and replace if necessary

SPECIFICATIONS

Technical details for the Euro-Pro Ultra Shark 700 Watt Turbo Hand Vacuum, Model EP366.

- **Model Number:** EP366
- **Brand:** Euro-Pro
- **Manufacturer:** Euro Pro Corp
- **Wattage:** 700 watts
- **Item Weight:** 2.2 Pounds
- **Power Source:** Corded Electric
- **Special Feature:** Bagless
- **Filter Type:** Cartridge
- **Form Factor:** Handheld
- **Surface Recommendation:** Carpet
- **Recommended Uses:** Everyday indoor clean up
- **Indoor/Outdoor Usage:** Indoor
- **Portable:** Yes

- **Control Method:** Touch
- **UPC:** 622356512350

WARRANTY AND SUPPORT

For warranty information or customer support regarding your Euro-Pro Ultra Shark 700 Watt Turbo Hand Vacuum, please refer to the warranty card included with your purchase or contact Euro-Pro customer service directly. Keep your purchase receipt as proof of purchase.

© 2024 Euro-Pro. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question