

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Andis](#) /

› [Andis UltraEdge Detachable Clipper Blade Instruction Manual - Size 3.5 \(9.5mm\), Model 64089](#)

Andis 64089

Andis UltraEdge Detachable Clipper Blade Instruction Manual - Size 3.5 (9.5mm), Model 64089

For professional and personal grooming use

1. INTRODUCTION

This manual provides essential instructions for the proper use, maintenance, and safety of your Andis UltraEdge Detachable Clipper Blade, Size 3.5 (9.5mm), Model 64089. Please read this manual thoroughly before initial use and retain it for future reference.

The Andis UltraEdge Size 3.5 detachable blade is a chrome, carbon-edged blade designed for Andis detachable clippers. Its durable and precise engineering ensures optimal performance for professional and personal grooming. This blade is ideal for achieving traditional tapered looks and for efficient bulk hair removal. It is also compatible with other brands of detachable blade clippers that accept Andis-style blades.

This high-quality Andis blade is designed to leave hair 3/8 inch (9.5 mm) long.



Figure 1: Andis UltraEdge Detachable Clipper Blade, Size 3.5 (9.5mm). This image shows the chrome-finished blade with "3 1/2" and "9.5 mm" markings, along with the Andis logo and mounting screws.

2. SETUP AND INSTALLATION

This section outlines the general procedure for attaching the detachable blade to your compatible clipper. Always refer to your clipper's specific instruction manual for detailed installation steps.

- 1. Ensure Clipper is Off:** Before attaching or detaching any blade, always ensure your clipper is turned off and unplugged from the power source for safety.
- 2. Clean Clipper Drive Lever:** Inspect the clipper's drive lever for any hair or debris. Clean if necessary.
- 3. Align Blade:** Hold the blade with the teeth facing away from you. Align the blade's hinge with the hinge slots on the clipper.
- 4. Snap into Place:** Gently push the blade down until it snaps securely into place. You should hear a click. Ensure the blade is firmly seated and does not wobble.
- 5. Test Attachment:** Briefly turn the clipper on and off to ensure the blade is properly attached and operating

smoothly.

3. OPERATING INSTRUCTIONS

The Andis UltraEdge Size 3.5 blade is designed for general hair clipping, creating tapered styles, and efficient bulk hair removal. It cuts hair to a length of 3/8 inch (9.5 mm).

- **Preparation:** Ensure hair is clean, dry, and free of tangles before clipping.
- **Oiling:** Before each use, apply a few drops of clipper oil to the teeth and bearing surfaces of the blade. This reduces friction, heat, and wear, ensuring optimal performance.
- **Clipping Technique:** Use smooth, even strokes. For best results, always cut against the direction of hair growth.
- **Blade Heat:** Blades can become warm during extended use. If the blade becomes too hot, turn off the clipper, allow the blade to cool, or switch to a different blade.

4. CARE AND MAINTENANCE

Proper care and maintenance will extend the life and performance of your Andis UltraEdge blade.

1. Cleaning After Each Use:

- Turn off and unplug the clipper.
- Detach the blade from the clipper.
- Use a small brush (often included with clippers) to remove loose hair from between the blade teeth.
- Apply blade cleaner or disinfectant spray (specifically designed for clipper blades) to clean and sanitize the blade. Follow product instructions.

2. Oiling:

After cleaning and before each use, apply 2-3 drops of clipper oil across the teeth of the blade and 1-2 drops on the back rails where the cutter blade rides on the comb blade. Run the clipper for a few seconds to distribute the oil. Wipe off any excess oil.

3. Storage:

Store the blade in a clean, dry place, preferably in a blade case or protective pouch, to prevent damage and corrosion. Keep away from water sources.

4. Sharpening:

Over time, blades may become dull. For optimal performance, professional blade sharpening services are recommended when the blade no longer cuts effectively.

5. SAFETY INFORMATION

Adhere to the following safety guidelines to prevent injury and ensure safe operation:

- **Avoid Contact:** Avoid direct contact of the blade with skin and eyes, especially when the clipper is operating.
- **Keep Dry:** Keep the blade away from water sources and do not immerse it in water.
- **Handle with Care:** Blades are sharp. Handle with care to prevent cuts.
- **Children and Pets:** Keep blades and clippers out of reach of children and pets.
- **Damaged Blades:** Do not use bent, dull, or damaged blades. Replace them immediately to prevent injury or poor performance.
- **Clipper Safety:** Always refer to your clipper's instruction manual for additional safety warnings and operating

procedures.

6. COMPATIBLE CLIPPER MODELS

This Andis UltraEdge Size 3.5 blade is designed to fit a wide range of detachable blade clippers. It is compatible with the following Andis and Oster models:

Andis Models:

- AG Series
- AGC Series
- AGR Series
- BG Series (including BG, BGC, BGC-2, BGR, BGR+, MBG)
- SMC Series

Note: Some older or discontinued models may still be compatible. Always verify blade fitment with your specific clipper model.

Oster Models:

- Oster 71
- Oster 111
- Oster A-5

7. PRODUCT SPECIFICATIONS

Brand	Andis
Model Number	64089
Blade Size	3.5
Hair Length Left	3/8 inch (9.5 mm)
Blade Material	Alloy Steel
Special Feature	Detachable Blade
Color	Chrome
Product Dimensions (LxWxH)	11.13 x 8.64 x 3.81 cm
Item Weight	113.4 grams
Country of Origin	USA
Recommended Use	Clipping

8. TROUBLESHOOTING

If you experience issues with your Andis UltraEdge blade, consider the following common troubleshooting steps:

- **Blade Not Cutting Effectively:**

- Ensure the blade is clean and free of hair and debris.
- Apply clipper oil to the blade as instructed in the maintenance section.
- Check if the blade is dull. If so, it may require professional sharpening or replacement.
- Verify the blade is correctly attached to the clipper.

- **Blade Getting Hot:**

- Ensure the blade is properly oiled. Lack of lubrication causes friction and heat.
- Clean the blade thoroughly to remove any trapped hair that could increase friction.
- Allow the blade to cool down or switch to a fresh blade if using for extended periods.

- **Blade Pulling Hair:**

- This often indicates a dull blade. Consider sharpening or replacing.
- Ensure hair is clean, dry, and detangled before clipping.
- Verify the blade is correctly seated on the clipper.

For further assistance, please refer to your clipper's instruction manual or contact Andis customer support.

9. WARRANTY AND CUSTOMER SUPPORT

Andis products are manufactured to high-quality standards. While specific warranty details for this accessory blade may vary, general product warranties typically cover manufacturing defects.

For warranty claims, technical support, or any questions regarding your Andis UltraEdge blade, please contact Andis customer service directly through their official website or the contact information provided with your original clipper purchase.

Andis Official Website: www.andis.com