

RadioShack 15-2147**RadioShack 3-in-1 Universal Remote Control User Manual**

Model: 15-2147

INTRODUCTION

This user manual provides comprehensive instructions for the setup, operation, and maintenance of your RadioShack 3-in-1 Universal Remote Control, Model 15-2147. This remote is designed to consolidate the control of up to three different audio/video devices, such as a television (TV), VCR/DVD player, and cable/satellite box (CBL/SAT), into a single convenient unit.

PRODUCT OVERVIEW



Figure 1: RadioShack 3-in-1 Universal Remote Control, Model 15-2147

The RadioShack 3-in-1 Universal Remote features a logical button layout for intuitive control of your devices. Below is a description of the key buttons and their functions:

- **Device Select Buttons (P, VCR/DVD, CBL/SAT, TV):** Located at the top, these buttons allow you to select which device the remote will control. Press the corresponding button (e.g., TV for television, VCR/DVD for VCR or DVD player, CBL/SAT for cable or satellite box) before operating that device.
- **Power Button (Red):** Turns the selected device on or off.
- **CH+ / CH- (Channel Up/Down):** Changes channels on the selected device.
- **VOL+ / VOL- (Volume Up/Down):** Adjusts the volume on the selected device.
- **Mute/OK:** Mutes the audio or confirms a selection in a menu.

- **Navigation Buttons (Up, Down, Left, Right Arrows):** Used to navigate menus and guides.
- **Menu:** Accesses the menu of the selected device.
- **Guide:** Displays the program guide (if supported by the device).
- **Display:** Shows on-screen information (e.g., current channel, time).
- **Exit:** Exits menus or on-screen displays.
- **A/B:** Functionality may vary by device, often used for input selection or special features.
- **Fav (Favorite):** Accesses favorite channels.
- **Scan:** Initiates channel scanning.
- **Numeric Keypad (0-9):** Used for direct channel entry or inputting numbers.
- **+100:** For entering three-digit channel numbers (e.g., press 100 then 1 for channel 101).
- **Enter:** Confirms channel selection or menu options.
- **Playback Controls (Rew, Play, Fwd, Rec, Pause, Stop):** Standard controls for VCRs, DVD players, or DVRs.

SETUP

1. Battery Installation

1. Open the battery compartment cover on the back of the remote control.
2. Insert two (2) fresh AAA batteries, ensuring the positive (+) and negative (-) terminals align with the markings inside the compartment.
3. Close the battery compartment cover securely.

2. Programming the Remote

To control your devices, the universal remote must be programmed with the correct codes for your specific brands and models. Refer to the code list provided with your remote (not included in this manual) or visit the RadioShack support website for programming instructions and codes.

General Programming Steps (may vary):

1. Turn on the device you wish to program (e.g., TV).
2. Press and hold the device button you want to program (e.g., TV) until the indicator light stays on.
3. Enter the 3 or 4-digit code for your device's brand.
4. If the device turns off, the code is correct. If not, try the next code for your brand.
5. Release the device button.
6. Repeat for other devices (VCR/DVD, CBL/SAT).

OPERATING INSTRUCTIONS

Selecting a Device

Before operating a device, you must select it on the remote. Press the corresponding device button (TV, VCR/DVD, or CBL/SAT) once. The indicator light will briefly flash to confirm your selection.

Basic Functions

- **Power:** Press the **Power** button to turn the selected device on or off.
- **Channel Control:** Use **CH+** to go to the next channel and **CH-** to go to the previous channel.

- **Volume Control:** Use **VOL+** to increase volume and **VOL-** to decrease volume.
- **Mute:** Press **Mute/OK** to silence the audio. Press again to restore.
- **Numeric Entry:** Use the **0-9** buttons for direct channel entry. Press **Enter** after entering a channel number.

Playback Functions (for VCR/DVD/DVR)

- **Play:** Starts playback.
- **Pause:** Pauses playback. Press again to resume.
- **Stop:** Stops playback.
- **Rew (Rewind):** Rewinds the media.
- **Fwd (Fast Forward):** Fast forwards the media.
- **Rec (Record):** Initiates recording (if supported by the selected device).

MAINTENANCE

- **Cleaning:** Wipe the remote with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the remote's performance degrades or the indicator light does not illuminate. Always replace both batteries at the same time with new ones of the same type.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote does not operate device.	<ul style="list-style-type: none">◦ Incorrect device selected.◦ Batteries are weak or incorrectly installed.◦ Remote not programmed correctly.◦ Obstruction between remote and device.	<ul style="list-style-type: none">◦ Press the correct device button (TV, VCR/DVD, CBL/SAT).◦ Replace batteries and ensure correct polarity.◦ Reprogram the remote using the correct code for your device.◦ Ensure a clear line of sight to the device's infrared sensor.
Some buttons do not work.	<ul style="list-style-type: none">◦ Remote not fully programmed.◦ Button function not supported by device.	<ul style="list-style-type: none">◦ Try a different code for your device.◦ Verify if the specific function is available on your device's original remote.
Indicator light does not flash.	<ul style="list-style-type: none">◦ Dead batteries.◦ Batteries incorrectly installed.	<ul style="list-style-type: none">◦ Replace batteries.◦ Check battery polarity.

SPECIFICATIONS

Model: 15-2147

Brand: RadioShack

Product Dimensions: 8 x 7.8 x 1.3 inches

Item Weight: 3.2 ounces

Connectivity Technology: Infrared

Max Number of Supported Devices: 3 (TV, VCR/DVD, CBL/SAT)

Power Source: 2 x AAA Batteries (not included)

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official RadioShack support website. Keep your purchase receipt as proof of purchase for any warranty claims.

Documents - RadioShack – 15-2147



[RadioShack Low-Cost 3-in-1 Remote Control User Guide and Codes](#)

Comprehensive user guide for the RadioShack Low-Cost 3-in-1 Remote (Cat. No. 15-2147), including setup instructions, programming guides, troubleshooting tips, and extensive device code lists for TVs, VCRs, DVD players, and satellite receivers.

lang:en score:22 filesize: 298.44 K page_count: 2 document date: 2006-02-15

Related Documents

	<u>RadioShack Low-Cost 3-in-1 Remote Control User Guide and Codes</u> Comprehensive user guide for the RadioShack Low-Cost 3-in-1 Remote (Cat. No. 15-2147), including setup instructions, programming guides, troubleshooting tips, and extensive device code lists for TVs, VCRs, DVD players, and satellite receivers.
	<u>RadioShack 4-1 Family Favorites Remote User Guide</u> User guide for the RadioShack 4-1 Family Favorites Remote, detailing setup, programming, favorite channel features, macros, volume control, troubleshooting, and specifications. Includes manufacturer codes for various home entertainment devices.
	<u>RadioShack 15-1924 7-in-1 Remote Control Owner's Manual</u> User manual for the RadioShack 15-1924 7-in-1 Remote Control with Lighted Keypad. Learn how to set up, operate, and troubleshoot this versatile universal remote.
	<u>RadioShack 2.1 Sound Bar Model 4001949 User Manual</u> User manual for the RadioShack 2.1 Sound Bar (Model 4001949), detailing specifications, features, operation, remote control functions, panel descriptions, connection diagram, placement advice, and troubleshooting.

