

[Manuals.plus](#) /

› [Axion](#) /

› Axion AXN-9900 9-Inch Digital Photo Frame Instruction Manual

Axion AXN-9900

Axion 9-Inch 16:9 Widescreen LCD Digital Photo Frame

MODEL: AXN-9900

Introduction

This manual provides detailed instructions for the setup, operation, and maintenance of your Axion AXN-9900 9-Inch Digital Photo Frame. This device is designed to display your digital photos and play MP3 music, offering a versatile multimedia experience. It features a 9-inch widescreen LCD, a remote control for easy navigation, and compatibility with various memory card formats.

Package Contents

Please verify that all items listed below are included in your package:

- Axion AXN-9900 Digital Photo Frame
- Card-Style Remote Control
- USB Input Cable
- AC/DC Power Adapter

Product Features

The Axion AXN-9900 Digital Photo Frame offers the following key features:

- 9-inch screen with adjustable brightness
- Supports SD, MMC, and Memory Stick memory cards
- Internal memory to store up to 20 pictures
- A/V output jack
- Built-in E-port for connecting a TV tuner or Gamepad

Setup

1. **Power Connection:** Connect the AC/DC power adapter to the frame's power input port, then plug the adapter into a standard wall outlet.
2. **Stand Adjustment:** Locate the integrated stand on the back of the frame. Pull to extend it for stable placement on a flat surface.
3. **Memory Card Insertion:** Insert a compatible SD, MMC, or Memory Stick flash media card into the corresponding slot on the frame. Ensure the card is inserted in the correct orientation until it clicks into place.
4. **USB Device Connection:** If using a USB flash drive or other compatible USB device, connect it to the USB input jack using the provided USB cable.
5. **E-Port Connection (Optional):** For additional multimedia options, connect a TV tuner or Gamepad to the built-in E-port.



Figure 1: Front view of the Axion AXN-9900 Digital Photo Frame.



Figure 2: Rear view of the Axion AXN-9900 Digital Photo Frame with stand extended, showing controls and ports.

Operating Instructions

1. **Power On/Off:** Press the **Power** button located on the frame's rear panel or on the remote control to turn the device on or off.
2. **Navigation:** Use the directional buttons (Up, Down, Left, Right) and the **Menu/Enter** button on the remote control or the frame's rear panel to navigate through the on-screen menus and select options.
3. **Photo Playback:**
 - Ensure a memory card or USB device containing JPEG images is inserted.
 - Select the "Photo" mode from the main menu.
 - Browse your photos and select an image to display, or initiate a slideshow.
 - Adjust slideshow settings, such as interval and transition effects, through the menu options.
4. **Music Playback:**
 - Ensure a memory card or USB device containing MP3 audio files is inserted.
 - Select the "Music" mode from the main menu.
 - Browse your music files and select a track to play.
 - Use the remote control to adjust volume, skip tracks, or pause playback.
5. **Internal Memory Usage:** The frame includes built-in memory capable of storing up to 20 pictures. You can transfer photos from a connected memory card or USB device to the internal memory using the frame's menu options.
6. **Downloading Media:** Connect the frame to a computer using the provided USB cable to directly download media files.

7. **Aspect Ratio Considerations:** The frame features a 16:9 widescreen aspect ratio. Images originally in a 4:3 aspect ratio may display with black bars on the sides. For a full-screen display, consider cropping your images to a 16:9 aspect ratio before loading them onto the frame.

Maintenance

Proper care and maintenance will ensure the longevity of your digital photo frame.

- **Cleaning the Screen:** Gently wipe the screen with a soft, lint-free cloth. Avoid using abrasive cleaners, solvents, or chemical sprays, as these can damage the display.
- **Cleaning the Frame:** Clean the exterior of the frame with a slightly damp cloth.
- **General Care:** Avoid exposing the frame to direct sunlight, extreme temperatures, or high humidity. Do not drop the frame or subject it to strong impacts. Keep the frame away from water and other liquids.

Troubleshooting

If you encounter issues with your Axion AXN-9900, refer to the following common problems and solutions:

- **No Power:**
 - Ensure the AC/DC power adapter is securely connected to both the frame and a functional wall outlet.
 - Verify that the power outlet is active by testing it with another device.
- **No Image Display:**
 - Check that a memory card or USB device is properly inserted and contains compatible image files (JPEG format).
 - Confirm that the correct input source (e.g., SD card, USB) is selected in the frame's menu.
- **Images Appear Stretched or with Black Bars:**
 - The frame has a 16:9 widescreen aspect ratio. Images with a 4:3 aspect ratio will display with black bars on the sides. For optimal display, adjust the aspect ratio or crop your images to 16:9 on a computer before loading them onto the frame.
- **Limited Internal Memory:**
 - The internal memory is designed to store a maximum of 20 pictures. For larger photo collections, utilize compatible SD, MMC, or Memory Stick cards.
- **Remote Control Not Working:**
 - Ensure there are no obstructions between the remote control and the frame's infrared (IR) receiver.
 - Check the remote control battery and replace it if necessary.

Specifications

Feature	Detail
Brand	Axion
Model Number	AXN9900M
Screen Size	9 Inches
Display Size	9 Inches

Aspect Ratio	16:9
Resolution	720p
Color	Black
Connectivity Technology	Wired
Power Source	Corded Electric
Control Method	Remote
Compatible Devices	Personal Computer (for media transfer)
Supported Media	SD, MMC, Memory Stick flash media, USB devices
Internal Memory	Stores up to 20 pictures
Manufacturer	Axion
Item Weight	3.2 Pounds
UPC	090482099005, 840356907000
ASIN	B000KNP62Y

Warranty and Support

Your Axion AXN-9900 Digital Photo Frame is covered by a **1-year limited warranty on parts**, and **90 days on parts and labor** from the date of purchase.

For technical assistance, warranty claims, or further inquiries, please contact Axion customer support. Refer to your product packaging or the official Axion website for specific contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B000KNP62Y>

More documents and user manuals: <https://manuals.plus/>