

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Energizer](#) /

› Energizer Max C Alkaline Batteries User Manual

Energizer Max C

Energizer Max C Alkaline Batteries User Manual

Model: Max C (B000KWWVB4)

1. INTRODUCTION

Energizer Max C alkaline batteries are designed to provide reliable power for a variety of everyday devices. These batteries feature POWERSEAL Technology, which helps to lock in power for extended periods. They are engineered to hold power for up to 10 years when stored properly, ensuring availability when needed.



Image: Energizer Max C 2-Pack C Cell Batteries. This image displays the product packaging for the Energizer Max C batteries.

2. IMPORTANT SAFETY INFORMATION

To ensure safe operation and prevent battery leakage, rupture, or explosion, please observe the following precautions:

- **Do not recharge:** These batteries are not designed for recharging. Attempting to recharge may cause leakage or rupture.
- **Observe polarity:** Always insert batteries correctly with the positive (+) and negative (-) terminals aligned as indicated by the device.
- **Do not mix battery types:** Avoid mixing new and used batteries, or different brands or types of batteries (e.g., alkaline with carbon-zinc).
- **Dispose properly:** Follow local regulations for battery disposal. Do not dispose of batteries in fire, as they may explode.

- **Keep away from children:** Store batteries out of reach of small children. If ingested, seek immediate medical attention.
- **Avoid short-circuiting:** Do not short-circuit batteries, as this can cause heat generation and potential hazards.
- **Do not expose to extreme conditions:** Avoid exposing batteries to excessive heat, direct sunlight, or water.
- **Remove exhausted batteries:** Promptly remove depleted batteries from devices to prevent potential leakage.

3. INSTALLATION AND SETUP

To install Energizer Max C batteries in your device:

1. Identify the battery compartment on your device.
2. Open the battery compartment cover.
3. Observe the polarity markings (+ and -) inside the compartment.
4. Insert the Energizer Max C batteries, ensuring that the positive (+) end of the battery aligns with the positive (+) marking in the compartment, and the negative (-) end aligns with the negative (-) marking.
5. Close the battery compartment cover securely.



Image: Energizer Max C Battery. This image shows a single Energizer Max C battery, illustrating its form factor for proper installation.

4. OPERATING INSTRUCTIONS

Energizer Max C batteries are suitable for powering a wide range of everyday devices, including:

- Toys
- Flashlights
- Clocks
- Remote controls
- Portable radios

For optimal performance, it is recommended to replace all batteries in a device at the same time. If a device is not going to be used for an extended period, remove the batteries to prevent potential leakage and damage.

5. MAINTENANCE AND STORAGE

Proper storage and maintenance can extend the life and safety of your batteries:

- **Storage:** Store unused Energizer Max C batteries in a cool, dry place at room temperature. Avoid extreme temperatures and high humidity. Batteries can hold power for up to 10 years in storage.
- **Disposal:** Do not dispose of batteries with household waste. Consult your local waste management authority for proper recycling or disposal options for alkaline batteries. Never incinerate batteries.

6. TROUBLESHOOTING

If your device is not functioning correctly after installing new batteries, consider the following:

- **Device not powering on:**
 - Verify that batteries are inserted with correct polarity (+ and -).
 - Ensure battery contacts in the device are clean and free of corrosion. Gently clean contacts with a pencil eraser or cotton swab if necessary.
 - Replace all batteries with a fresh set to rule out a faulty battery.
- **Weak or intermittent performance:**
 - Batteries may be nearing depletion. Replace with new batteries.
 - Check for loose battery compartment connections.

7. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Energizer
Model Name	Max C
Model Number	B000KWWVB4
Battery Cell Composition	Alkaline
Reusability	Single Use
Number of Batteries	2 C batteries (per pack)
Item Dimensions (L x W x H)	1 x 4 x 5 inches
Item Weight	0.1 Grams
UPC	777787433207

8. WARRANTY AND CUSTOMER SUPPORT

The product warranty does not cover misuse of the product. For specific warranty details or to inquire about product support, please refer to the official Energizer website or contact Energizer customer service directly. Contact information can typically be found on the product packaging or the manufacturer's official website.

