

Dodge FBA_4686481

Dodge Keyless Entry Remote Fob Clicker User Manual

Model: FBA_4686481

PRODUCT OVERVIEW

This manual provides instructions for the Dodge Keyless Entry Remote Fob Clicker, designed for specific Dodge, Chrysler, and Plymouth vehicles. This remote allows for convenient locking and unlocking of your vehicle and includes a panic function. It is self-programmable, provided you have one existing working remote.



Image: Front view of the keyless entry remote, showing unlock, lock, and panic buttons.

COMPATIBILITY AND VERIFICATION

Before attempting to program or use the remote, it is essential to verify its compatibility with your vehicle. This remote is

compatible with vehicles that match the FCC ID number **GQ43VT17T** and part numbers **04686481AC** or **04686481AF**.
Compatible vehicles include:

- Plymouth Prowler (2000-2001)
- Grand Voyager (1999-2000)
- Voyager (1999-2000)
- Dodge Dakota (2001-2004)
- Dodge Caravan (2001-2003)
- Dodge Durango (2001-2003)
- Dodge Ram (2002-2005)
- Chrysler Town & Country (2001-2003)
- Chrysler Voyager (2001-2003)
- Chrysler Caravan (1999-2000)
- Chrysler Prowler (2001-2002)

Ensure that your original remote has the same button configuration as this replacement. If you do not have an existing remote, programming may require assistance from a dealership or locksmith professional.



Image: A graphic emphasizing the importance of matching FCC and Part Numbers for compatibility.

SETUP: Do-It-Yourself PROGRAMMING

This remote can be self-programmed if you possess at least one working keyless entry remote for your vehicle. Follow these steps carefully:

1. **Prepare the Vehicle:** Insert your vehicle key into the ignition switch. Turn the ignition to the **RUN** position (as far as it will go without cranking the engine). Wait for the ignition chimes to stop.
2. **Initiate Programming Mode (Using Working Remote):** Using your existing, working remote, press and hold the **UNLOCK** button for 4 to 10 seconds.
3. **Activate Panic and Release:** While still holding the **UNLOCK** button (within the 4 to 10 second window), press the **PANIC** button on the programmed remote for 1 second. Release both buttons simultaneously. A chime will sound within 3 seconds, indicating that the remote programming mode has been entered.

4. **Program New Remote:** Within 30 seconds of the chime, take your new remote. Press and release the **LOCK** and **UNLOCK** buttons simultaneously. Immediately after, press and release only the **UNLOCK** button on the new remote. A chime will sound, confirming the new remote has been programmed.
5. **Program Additional Remotes (Optional):** If you have more new remotes to program, repeat step 4 for each additional remote. The vehicle's locks will cycle after each successful programming.
6. **Exit Programming Mode:** Turn the ignition **OFF** and remove the key.
7. **Test Remotes:** Test all programmed remotes to ensure full functionality. There may be a brief delay (e.g., 10 seconds) before all remotes become fully active.

If you encounter difficulties, refer to the Troubleshooting section or seek professional assistance.

OPERATING THE REMOTE

Once programmed, your keyless entry remote provides convenient control over your vehicle's locking system:

- **Unlock Button:** Press the **UNLOCK** button once to unlock the driver's door. Press it a second time within five seconds to unlock all other doors.
- **Lock Button:** Press the **LOCK** button once to lock all doors.
- **Panic Button:** Press the **PANIC** button (red oval button) to activate the vehicle's alarm system and horn. Press it again to deactivate.



Image: Angled and side views of the keyless entry remote, showing its ergonomic design.

MAINTENANCE

Battery Replacement

Your remote comes equipped with a new Duracell battery for extended life. When the remote's range decreases or it stops responding, the battery may need replacement. The remote typically uses a standard coin cell battery.

To replace the battery:

1. Carefully open the remote casing. This usually involves prying it open along the seam with a small flat-head screwdriver or a plastic prying tool.
2. Note the orientation of the existing battery.
3. Remove the old battery.
4. Insert the new battery, ensuring correct polarity.
5. Snap the remote casing back together securely.

After battery replacement, the remote should not require re-programming.



Image: Back view of the keyless entry remote, showing the smooth, unadorned surface.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote does not program successfully.	Incorrect timing during programming steps; no working remote available; incompatible remote.	Review the "Setup: Do-It-Yourself Programming" section carefully and repeat the steps, paying close attention to timing. Ensure you have a working remote if attempting self-programming. Verify FCC ID and part numbers for compatibility. If issues persist, consult a professional locksmith or dealership.
Remote range is poor or intermittent.	Low battery; signal interference.	Replace the battery (refer to Maintenance section). Ensure no large metal objects or strong electronic signals are interfering with the remote's operation.

Problem	Possible Cause	Solution
Remote buttons do not respond.	Dead battery; internal damage.	Replace the battery. If the issue persists, the remote may be damaged and require replacement.

SPECIFICATIONS

Brand: Dodge

Model: FBA_4686481

Item Weight: 0.353 ounces

Product Dimensions: 5 x 3.7 x 1.6 inches

Manufacturer Part Number: FBA_4686481

Special Features: Ergonomic design

FCC ID: GQ43VT17T

Part Numbers: 04686481AC, 04686481AF

SUPPORT AND FURTHER ASSISTANCE

For additional support or if you require professional programming services, please consider the following options:

- Included Information Card:** The product package includes an information card with details on programming instruction websites.
- Dealership or Locksmith:** If you do not have a working remote for self-programming, a local dealership or automotive locksmith can program the new remote for you.
- Manufacturer Information:** For general inquiries about Dodge products, you may visit the official Dodge store online.

Note: Warranty information is not explicitly provided in the product details. Please refer to the seller's return policy or contact the seller directly for warranty inquiries.