

Memorex 35323351

Memorex TravelCard 512 MB SD Flash Memory Card User Manual

MODEL: 35323351

PRODUCT OVERVIEW

The Memorex TravelCard 512 MB SD Flash Memory Card is designed for reliable data storage and transfer across a variety of compatible devices. This compact memory solution offers a fast transfer rate for efficient downloading and saving of files. It includes a convenient SD adapter for broader compatibility and features a write/protect switch to safeguard your data from unintentional deletion. Additionally, this memory card boasts a waterproof design, enhancing its durability.



This image displays the compact Memorex 512 MB miniSD card alongside its larger SD adapter, illustrating how the miniSD card fits into the adapter for compatibility with standard SD card slots.

SETUP

- Identify Card Slot:** Locate the memory card slot on your device (digital camera, MP3 player, cell phone, PDA, or camcorder).
- Use SD Adapter (if needed):** If your device uses a standard SD card slot, insert the Memorex 512 MB miniSD card firmly into the provided SD adapter until it clicks into place.
- Insert Card:** Carefully insert the miniSD card (or the miniSD card within the SD adapter) into your device's memory card slot. Ensure the card is oriented correctly according to the slot's markings. Do not force the card.
- Power On Device:** Turn on your device. It should automatically detect the memory card. If prompted, format the card through your device's settings (this will erase all data on the card).

OPERATING INSTRUCTIONS

- Saving Files:** When taking photos, recording videos, or saving other data, your device will typically save directly to the inserted memory card. Refer to your device's manual for specific saving procedures.
- Transferring Files:** To transfer files to or from the card, connect your device to a computer, or insert the card into a compatible card reader connected to your computer. The card will appear as a removable drive, allowing you to drag and drop files.
- Using the Write/Protect Switch:** The small switch on the side of the SD adapter (or directly on the miniSD card if applicable) is the write/protect switch. Slide it to the 'Lock' position to prevent new data from being written to the card and to protect existing data from being deleted or modified. Slide it to the 'Unlock' position to enable writing and deleting.
- Ejecting the Card:** Always safely eject the memory card from your computer or device before physically removing it to prevent data corruption.

MAINTENANCE

- Cleaning:** If necessary, gently wipe the metal contacts of the memory card with a clean, dry, lint-free cloth. Avoid touching the contacts with your fingers.
- Storage:** Store the memory card in its protective case or a suitable storage container when not in use to prevent dust, dirt, and physical damage.
- Temperature:** Avoid exposing the card to extreme temperatures, direct sunlight, or high humidity.
- Water Resistance:** While the card is waterproof, it is recommended to dry it thoroughly if it comes into contact with water before inserting it into any electronic device.

TROUBLESHOOTING

- Card Not Recognized:**
 - Ensure the card is fully and correctly inserted into the device or adapter.
 - Check if the write/protect switch is in the 'Unlock' position if you are trying to write data.
 - Try the card in another compatible device or card reader to determine if the issue is with the card or the device.
 - Restart your device.
- Cannot Write/Delete Files:**
 - Verify the write/protect switch is in the 'Unlock' position.
 - Check if the card is full. Delete unnecessary files or transfer them to another storage location.
 - The card may be corrupted. Back up any accessible data and then try formatting the card (this will erase all data).
- Slow Transfer Speeds:**
 - Ensure your card reader or device supports high-speed data transfer.
 - Close other applications running on your computer during transfer.
 - Defragment the card if your operating system supports it (for FAT32 file systems).

SPECIFICATIONS

Brand: Memorex

Model Number: 35323351

Flash Memory Type: SD (miniSD with SD adapter)

Memory Storage Capacity: 512 MB

Compatible Devices: Digital cameras, MP3 players, cell phones, PDAs, camcorders

Special Feature: Water Proof

Product Dimensions: 1.13 x 5 x 6.9 inches

Item Weight: 0.16 ounces

UPC: 034707033511

ASIN: B000L4H2MY

Date First Available: November 26, 2006

WARRANTY AND SUPPORT

For information regarding product warranty, please refer to the documentation included with your purchase or visit the official Memorex website for detailed warranty terms and conditions. Memorex may offer various support resources, including FAQs and customer service contact information.

Consider additional protection plans for your data. Options such as 2-year or 3-year Photo and Data Recovery Plans may be available to provide extended coverage for data loss scenarios.

© 2024 Memorex. All rights reserved.