

Coby DP772

Coby DP772 7-Inch Widescreen Digital Photo Frame with MP3 Player User Manual

Model: DP772

1. INTRODUCTION

The Coby DP772 is a versatile 7-inch widescreen digital photo frame designed to display your digital memories and play audio files. It features an LED-backlit TFT LCD display, ensuring bright and clear image viewing. This device supports various memory card formats, including SD, MMC, xD, and CompactFlash, and includes a USB port for connecting to digital media drives. With integrated stereo speakers, it can play MP3 and WMA audio files, and even combine them with photo slideshows. The DP772 also offers A/V output for connection to home theater systems and comes with interchangeable black and white faceplates to match your decor. It can be used with its included stand or mounted on a wall.



Image 1.1: The Coby DP772 Digital Photo Frame, showcasing its display with a family photo.

2. SETUP

2.1 Unpacking and Contents

Carefully remove all components from the packaging. Ensure the following items are present:

- Coby DP772 Digital Photo Frame
- AC Power Adapter
- Remote Control
- Interchangeable Faceplates (Black and White)
- Table Stand
- User Manual (this document)

2.2 Power Connection

1. Connect the AC power adapter to the DC IN port on the back of the photo frame.
2. Plug the other end of the adapter into a standard electrical outlet.
3. The frame should power on automatically or can be turned on using the power button.



Image 2.1: The AC Power Adapter, essential for powering the device.

2.3 Inserting Memory Cards or USB Devices

The DP772 supports SD, MMC, xD, and CompactFlash memory cards, as well as USB flash drives.

1. Locate the memory card slots or USB port on the side or back of the frame.
2. Insert your memory card into the appropriate slot, ensuring it is oriented correctly. Do not force the card.
3. For USB devices, insert the USB flash drive into the USB port.
4. The frame should automatically detect the media and begin displaying content or prompt you to select a mode.

2.4 Attaching the Stand or Wall Mounting

The frame can be displayed on a flat surface using the included stand or mounted on a wall.

- **For Tabletop Use:** Attach the provided stand to the designated slot on the back of the frame. Ensure it is securely fastened to provide stable support. The stand allows for both landscape and portrait orientation.
- **For Wall Mounting:** Detach the stand if it is already attached. Use appropriate wall mounting hardware (not included) with the mounting holes on the back of the frame. Ensure the wall can support the weight of the frame.



Image 2.2: The detachable stand, used for tabletop display.

2.5 Changing Faceplates

The DP772 comes with interchangeable black and white faceplates.

1. Gently remove the currently attached faceplate by prying it off from the edges.
2. Align the desired faceplate (black or white) with the frame and press it firmly into place until it clicks securely.

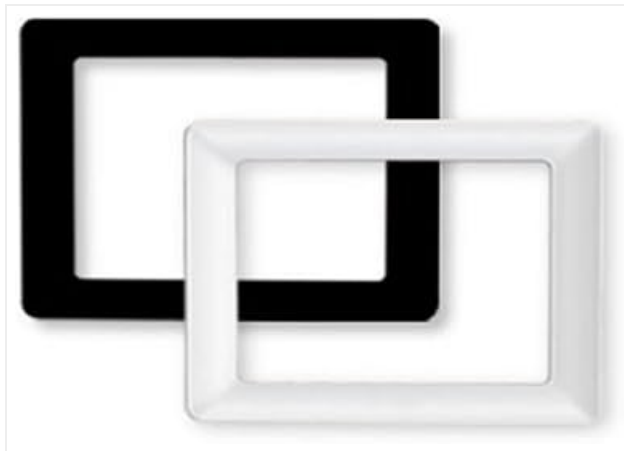


Image 2.3: The interchangeable black and white faceplates, allowing customization of the frame's appearance.

2.6 Remote Control Battery Installation

The remote control requires batteries (not included) for operation.

1. Locate the battery compartment on the back of the remote control.
2. Open the compartment cover.
3. Insert the required batteries, observing the correct polarity (+/-).
4. Close the battery compartment cover securely.



Image 2.4: The compact remote control for convenient operation of the photo frame.

3. OPERATING INSTRUCTIONS

3.1 Basic Navigation

The frame can be operated using the buttons on the unit or the included remote control.

- **Power Button:** Turns the unit on or off.
- **Menu Button:** Accesses the main menu for settings and options.
- **Arrow Buttons (Up/Down/Left/Right):** Navigate through menus and select files.
- **Enter/Play/Pause Button:** Confirms selections, plays media, or pauses playback.
- **Exit/Stop Button:** Returns to the previous screen or stops media playback.

3.2 Photo Playback

1. Insert a memory card or USB device containing JPEG or BMP image files.
2. If the frame does not automatically enter photo mode, navigate to the 'Photo' option in the main menu and press Enter.
3. Use the arrow buttons to browse through your photos.
4. Press the Play button to start a slideshow. You can adjust slideshow intervals and transition effects in the settings menu.

3.3 Music Playback

1. Ensure your memory card or USB device contains MP3 or WMA audio files.
2. Navigate to the 'Music' option in the main menu and press Enter.
3. Use the arrow buttons to select an audio file or folder.
4. Press the Play button to begin playback. Use the remote or frame buttons to control volume, skip tracks, or pause.

3.4 Video Playback

The DP772 supports most MP4 and AVI video files.

1. Insert a memory card or USB device with compatible video files.
2. Navigate to the 'Video' option in the main menu and press Enter.
3. Select the desired video file using the arrow buttons.
4. Press the Play button to start the video.

3.5 Slideshow with Music

To enhance your photo slideshows, you can play background music simultaneously.

1. Ensure both photo and music files are present on the inserted media.
2. Start a photo slideshow as described in section 3.2.
3. Access the settings menu (usually via the Menu button) and look for 'Slideshow Music' or a similar option.
4. Select the desired music file or playlist to accompany your photos.

3.6 Connecting to a TV (A/V Output)

The DP772 features an A/V output for displaying content on a larger screen, such as a television. **Note:** **The A/V cable is not included with the product.**

1. Obtain a compatible A/V cable (typically a 3.5mm jack to RCA composite video and stereo audio).
2. Connect one end of the A/V cable to the A/V OUT port on the photo frame.
3. Connect the RCA plugs (yellow for video, red/white for audio) to the corresponding input ports on your television.
4. Switch your television's input source to the correct A/V input.
5. The content displayed on the photo frame will now be mirrored on your television.



Image 3.1: An example of the A/V cable required to connect the photo frame to a television.

4. MAINTENANCE

4.1 Cleaning the Frame and Screen

To maintain the appearance and functionality of your Coby DP772, follow these cleaning guidelines:

- **Screen:** Use a soft, lint-free cloth specifically designed for electronics screens. Gently wipe the screen to remove dust and fingerprints. For stubborn marks, slightly dampen the cloth with water or a screen-cleaning solution (avoid harsh chemicals).
- **Frame:** Wipe the frame and casing with a soft, dry cloth. Do not use abrasive cleaners or solvents, as these can damage the finish.
- Always ensure the device is powered off and unplugged before cleaning.

4.2 Storage

If you plan to store the photo frame for an extended period:

- Power off the device and unplug it from the power source.
- Remove any memory cards or USB devices.
- Store the frame in a cool, dry place, away from direct sunlight and extreme temperatures.
- Consider storing it in its original packaging or a protective bag to prevent dust accumulation and damage.

5. TROUBLESHOOTING

This section addresses common issues you might encounter with your Coby DP772.

Problem	Possible Cause	Solution
Frame does not power on.	Power adapter not connected or faulty.	Ensure the AC adapter is securely plugged into the frame and a working electrical outlet. Try a different outlet.
No image or sound.	Incorrect file format; media not inserted correctly; volume too low.	Verify that image files are JPEG/BMP and audio files are MP3/WMA. Ensure the memory card/USB is fully inserted. Check volume settings.
Memory card/USB not recognized.	Card/USB not inserted correctly; incompatible format; corrupted media.	Re-insert the card/USB. Ensure it is a supported type (SD, MMC, xD, CF). Try formatting the card on a computer (this will erase all data).
Remote control not working.	Dead batteries; obstruction; out of range.	Replace batteries in the remote. Ensure there is a clear line of sight between the remote and the frame's IR sensor. Operate within close range.
Poor picture quality.	Low resolution of original photos; incorrect aspect ratio.	Use higher resolution photos. For optimal display, consider resizing photos to match the frame's native resolution (e.g., 480x234 pixels) and aspect ratio (16:9 for widescreen).

6. SPECIFICATIONS

Key technical specifications for the Coby DP772 Digital Photo Frame:

- **Model Number:** DP772
- **Screen Size:** 7 Inches
- **Display Type:** TFT LCD with LED Backlighting
- **Resolution:** WXGA (480x234 pixels, 16:9 aspect ratio)
- **Supported Image Formats:** JPEG, BMP
- **Supported Audio Formats:** MP3, WMA
- **Supported Video Formats:** Most MP4 and AVI files
- **Memory Card Support:** SD, MMC, xD, CompactFlash (CF)
- **Connectivity:** USB port, A/V output

 



- **Integrated Speakers:** Yes
- **Product Dimensions:** 9 x 7 x 2 inches
- **Item Weight:** 2 pounds
- **Color:** White/Black (interchangeable faceplates)


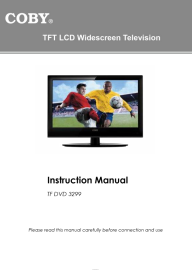 
7. WARRANTY AND SUPPORT

Coby products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your product or visit the official Coby website. Keep your purchase receipt as proof of purchase for any warranty claims.

For technical assistance or customer support, please visit the Coby support section on their official website or contact their customer service department. Contact details are typically provided in the product packaging or on the manufacturer's website.

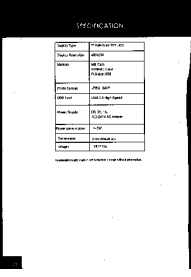Related Documents - DP772

	<p>Coby DP730 7-Inch Widescreen Digital Photo Frame Instruction Manual</p> <p>Detailed instruction manual for the Coby DP730 digital photo frame, covering its features, specifications, setup, operation, and troubleshooting for the 7-inch widescreen display.</p>
	<p>Coby MP201 USB MP3 Player Instruction Manual</p> <p>Comprehensive instruction manual for the Coby MP201 USB MP3 Player, covering setup, features, controls, music playback, software installation, and troubleshooting.</p>
	<p>Coby MP-610 MP3 & Video Player Quick Setup Guide</p> <p>Quick setup guide for the Coby MP-610 MP3 & Video Player with FM Radio, covering music, video, and photo file transfer using Windows Media Player and conversion software.</p>
	<p>Coby Digital Photo Frame Alarm Clock Teardown Guide</p> <p>A detailed teardown guide of the Coby Digital Photo Frame Alarm Clock (Model DP356) by iFixit, exploring its internal components and reparability.</p>

 <p>IFIXIT Coby DVD209 The bottom portion of the DVD player Replacement</p>	<p>Coby DVD209 DVD Player Bottom Portion Replacement Guide</p> <p>A step-by-step repair guide from iFixit for replacing the bottom portion of a Coby DVD209 DVD player. Learn how to safely remove screws, disconnect cables, and access internal components.</p>
 <p>COBY TFT LCD Widescreen Television</p> <p>Instruction Manual TF DVD 3299</p>	<p>COBY TF DVD 3299 TFT LCD Widescreen Television Instruction Manual</p> <p>Comprehensive instruction manual for the COBY TF DVD 3299 TFT LCD Widescreen Television. Learn about setup, operation, safety, and troubleshooting for your COBY television with integrated DVD player.</p>

Documents - Coby – DP772



[\[pdf\] User Manual Specifications Dimension Guide Accessories](#)

Provided by ManualsAndMore Download User Manual Coby DP 772 Specifications DP772 manualsandmore |||

DP772 7 WIDESCREEN DIGITAL PHOTO FRAME with MP3 PLAYER 7 Widescreen TFT LCD Color Display Displays JPEG and BMP Image Files Plays MP3 and WMA Audio Files Plays Most MP4 and AVI Video Files from Digital Cameras Photo Slideshow with Music AV Output for use with Home Theater Systems SD, MMC,...

lang:en score:46 filesize: 190.74 K page_count: 1 document date: 2019-07-23