



[Manuals.plus](#) /

› [Trim](#) /

› Trim Easy Hold Nail Clipper (Model CX) User Manual

Trim CX

Trim Easy Hold Nail Clipper (Model CX) User Manual

For Fingernail and Toenail Care

INTRODUCTION

The Trim Easy Hold Nail Clipper (Model CX) is engineered for comfortable and precise nail trimming. Its ergonomic design includes a unique non-slip grip and precision-ground alloy steel blades, ensuring clean and even cuts for both fingernails and toenails. This manual provides essential information on how to use and maintain your nail clipper for optimal performance and longevity.

SETUP

1. **Unpacking:** Carefully remove the nail clipper from its packaging. Inspect the product for any visible damage or defects.
2. **Initial Cleaning:** Before first use, wipe the blades with an alcohol wipe or a clean cloth to ensure hygiene.



Image: Trim Easy Hold Nail Clipper, showing the product in its original packaging.

OPERATING INSTRUCTIONS

Follow these steps for effective and safe nail trimming:

1. **Prepare Nails:** For best results, trim nails after a shower or bath when they are softer.
2. **Positioning:** Lift the lever of the clipper. Place the nail between the cutting blades, ensuring only the desired portion of the nail is positioned for trimming. The unique non-slip grip provides enhanced control during use.
3. **Trimming:** Press down firmly on the lever to cut the nail. The precision-ground blades are designed for clean, even cuts.
4. **Nail Clipping Catcher:** This clipper features a built-in casing designed to catch nail clippings, preventing them from scattering. After trimming, gently slide open the casing to dispose of the clippings.
5. **Filing:** Utilize the integrated nail file to smooth any rough edges after trimming.

Your browser does not support the video tag.

Video: Trim Brand Overview. This video provides a general overview of the Trim brand's commitment to quality personal care tools, including nail

MAINTENANCE

- **Cleaning:** After each use, remove any trapped nail clippings from the catcher. Wipe the blades with a clean, dry cloth. For thorough cleaning, use an alcohol wipe.
- **Storage:** Store the nail clipper in a dry place to prevent rust. Keep the clipper in its closed position when not in use to protect the blades.
- **Safety:** Always keep the nail clipper out of reach of children.

TROUBLESHOOTING

Issue	Possible Cause	Solution
Blades feel dull or snag nails.	Accumulated debris or natural wear over time.	Clean blades thoroughly. If dullness persists after extensive use, consider replacing the clipper for optimal performance.
Difficulty gripping the clipper.	Hands may be wet or oily.	Ensure hands are clean and dry before use. The non-slip grip is designed to provide maximum control even with slight moisture.
Nail clippings are not caught by the casing.	Improper positioning or excessive force.	Ensure the nail is fully within the cutting area and the casing is properly aligned. Apply steady, controlled pressure.

SPECIFICATIONS

- **Brand:** Trim
- **Model Number:** CX
- **Product Dimensions:** 2.38 x 0.63 x 5.63 inches
- **Item Weight:** 1.17 ounces (0.07 Pounds)
- **UPC:** 071603032880
- **Manufacturer:** Pacific World Corporation
- **Unit Count:** 1 Count
- **Material Type:** Acrylic (handle/casing)
- **Blade Material:** Alloy Steel
- **Blade Edge:** Precision-ground
- **Color:** Green

WARRANTY AND SUPPORT

Specific product warranty information is not provided in the available data. Please refer to the product packaging or the official Trim website for detailed warranty terms and conditions. For customer support, contact Pacific World Corporation, the manufacturer, through their official channels.

Important Safety Information: Keep out of reach of children. Use only as directed on the packaging.

