

[Manuals.plus](#) /

› [Kichler](#) /

› Kichler 8108NI 11.5" 2-Light Flush Mount Light User Manual

Kichler 8108NI

Kichler 8108NI 11.5" 2-Light Flush Mount Light User Manual

Model: 8108NI | Brand: Kichler

1. INTRODUCTION

This manual provides detailed instructions for the safe installation, operation, and maintenance of your Kichler 8108NI 11.5" 2-Light Flush Mount Light. Please read all instructions carefully before beginning installation and retain this manual for future reference. This flush mount ceiling fixture features an Alabaster swirl glass and Brushed Nickel finish, designed to provide functional illumination in various rooms.



Figure 1: Kichler 8108NI Flush Mount Light installed.

2. SAFETY INFORMATION

- **WARNING:** Risk of electric shock. Disconnect power at the circuit breaker or fuse box before installation or servicing.

- All electrical connections must be in accordance with local codes, ordinances, or the National Electric Code (NEC). Consult a qualified electrician if you are unfamiliar with proper electrical wiring connections.
- Use only the recommended bulb type and wattage. This fixture requires two medium base A19 LED bulbs up to 15 Watts each (bulbs not included).
- Do not install this fixture in wet locations. It is designed for indoor use only.
- Ensure the mounting surface can support the weight of the fixture.
- Do not attempt to modify the fixture. Any modifications may void the warranty and create a safety hazard.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged before beginning installation.

- Flush Mount Light Fixture (Brushed Nickel finish)
- Alabaster Swirl Glass Shade
- Mounting Hardware (screws, wire nuts, mounting strap)
- Instruction Manual (this document)



Figure 2: Key features of the Kichler Flush Mount Light.

4. SETUP AND INSTALLATION

Follow these steps to install your Kichler flush mount light fixture. It is recommended to have a second person assist during installation.

1. **Turn Off Power:** Before starting, ensure the power to the junction box is turned off at the circuit breaker or fuse box.
2. **Prepare Mounting Surface:** Secure the mounting strap to the junction box using the provided screws. Ensure the strap is firmly attached.
3. **Make Electrical Connections:** Connect the fixture's wires to the corresponding house wires using the provided wire nuts. Connect the black wire from the fixture to the black (hot) wire from the junction box, the white wire from the fixture to the white (neutral) wire from the junction box, and the ground wire from the fixture to the bare copper or green ground wire from the junction box. Ensure all connections are secure.
4. **Mount the Fixture:** Carefully push the wired fixture up to the ceiling, aligning the mounting holes on the fixture with the screws on the mounting strap. Secure the fixture in place with the decorative nuts or screws.
5. **Install Bulbs:** Screw two medium base (E26) A19 LED bulbs (up to 15 Watts each, not included) into the sockets.
6. **Attach Glass Shade:** Carefully place the Alabaster swirl glass shade onto the fixture and secure it with the finial or retaining ring. Do not overtighten.
7. **Restore Power:** Turn the power back on at the circuit breaker or fuse box.

Installation Videos:

Your browser does not support the video tag.

Video 1: Official Kichler video providing tips for installing flush mount lighting fixtures.


Your browser does not support the video tag.

Video 2: Installation guide video for Kichler semi-flush and flush mount lights.

E26 / A19


BULBS & SPECIFICATIONS

 BULB BASE

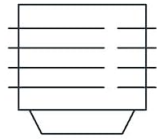


E26
Medium Base

 BULB SHAPE

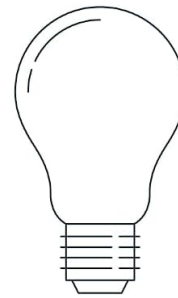

A19
White

 DIMMING INFORMATION

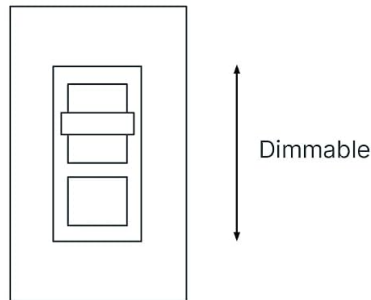

When used with compatible wall dimmer and dimmable light bulbs

Figure 3: Bulb base and dimming compatibility.

5. OPERATING INSTRUCTIONS

Once installed, operate the Kichler 8108NI flush mount light using a standard wall switch. If a compatible wall dimmer and dimmable light bulbs are used, the light output can be adjusted accordingly.

- **Turning On/Off:** Flip the wall switch connected to the fixture to turn the light on or off.
- **Dimming (Optional):** If a compatible dimmer switch is installed and dimmable bulbs are used, adjust the dimmer switch to control the brightness level.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your light fixture.

- **Cleaning:** Wipe the fixture clean with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these may damage the finish or glass. Do not put removable parts in the dishwasher.
- **Bulb Replacement:** Before replacing bulbs, ensure the power is turned off at the circuit breaker. Allow bulbs to cool completely before touching. Unscrew the finial or retaining ring, remove the glass shade, unscrew the old bulbs, and replace with new E26 A19 LED bulbs (max 15W each). Reattach the glass shade and finial.

7. TROUBLESHOOTING

If your light fixture is not functioning correctly, refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Light does not turn on	No power to the fixture Loose wire connections Faulty bulb	Check circuit breaker/fuse. Verify all wire connections are secure (power off first). Replace bulb with a known working one.
Light flickers	Loose bulb Incompatible dimmer switch Loose wire connections	Tighten bulb. Ensure dimmer is compatible with LED bulbs. Check wire connections (power off first).
Glass shade is difficult to attach	Misalignment Overtightened components	Ensure the shade is properly aligned with the fixture's threads. Do not overtighten the finial or retaining ring.

8. SPECIFICATIONS

Detailed technical specifications for the Kichler 8108NI Flush Mount Light.

Feature	Detail
Model Number	8108NI
Brand	Kichler
Color	Brushed Nickel
Material	Alloy Steel, Glass
Style	Transitional
Light Fixture Form	Ceiling (Flush Mount)
Room Type	Bedroom, Dining Room, Entryway, Kitchen, Living Room
Indoor/Outdoor Usage	Indoor
Power Source	Hardwire
Dimmable	Yes (with compatible wall dimmer and dimmable bulbs)
Light Source	LED (bulbs not included)
Number of Light Sources	2
Voltage	120 volts AC
Max Wattage per Bulb	15 Watts (A19 LED)
Bulb Base	E26 Medium
Item Dimensions (L x W x H)	11.25"L x 11.25"W x 5"H
Item Weight	2.8 pounds
Shade Material	Glass (Alabaster Swirl)
Certification	UL Listed



Figure 4: Product dimensions.

9. WARRANTY INFORMATION

This Kichler product is covered by a **1-year limited manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. For warranty claims or further details, please contact Kichler customer support.

10. SUPPORT

For technical assistance, replacement parts, or any questions regarding your Kichler 8108NI Flush Mount Light, please visit the official Kichler website or contact their customer service department. Refer to your purchase documentation for specific contact details.

Online Resources: www.kichler.com