

[manuals.plus](#) /

› [Moen](#) /

› [Moen 7560W Extensa One-Handle Low Arc Pullout Kitchen Faucet User Manual](#)

## **Moen 7560W**

# **Moen 7560W Extensa One-Handle Low Arc Pullout Kitchen Faucet User Manual**

Model: 7560W | Brand: Moen

## **1. INTRODUCTION**

This manual provides detailed instructions for the installation, operation, and maintenance of your Moen 7560W Extensa One-Handle Low Arc Pullout Kitchen Faucet. The Extensa faucet features a convenient pullout spout for enhanced maneuverability and a single lever handle for precise temperature control. This faucet is designed for single-hole mounting but includes an optional escutcheon for three-hole installations. Please read this manual thoroughly before beginning installation or operation to ensure proper function and longevity of your product.



Image 1.1: Moen Extensa One-Handle Low Arc Pullout Kitchen Faucet in a kitchen setting.

## 2. SAFETY INFORMATION

Always observe basic safety precautions when installing or servicing plumbing fixtures. Failure to follow these instructions could result in property damage or personal injury.

- Wear safety glasses during installation to protect your eyes.
- Turn off the main water supply before beginning any work on the faucet.
- Ensure all connections are secure to prevent leaks.
- If you are unsure about any step, consult a qualified plumber.

## 3. PACKAGE CONTENTS

Verify that all components are present before beginning installation.

- Moen Extensa Faucet Assembly
- Pullout Spray Wand
- Hose Weight
- Optional Escutcheon (for 3-hole installations)

- Mounting Hardware
- Installation Instructions
- Hose Corral (if included with your model or purchased separately)

## 4. TOOLS REQUIRED

---

The following tools are recommended for installation:

- Safety Glasses
- Adjustable Wrench
- Phillips Screwdriver
- Pliers
- Basin Wrench (for tight spaces)
- Scissors (if adjusting hose corral sleeve length)

## 5. INSTALLATION

---

### 5.1 General Faucet Installation

Refer to the detailed installation guide included with your faucet for complete instructions. Key steps typically include:

1. Turn off water supply.
2. Remove old faucet (if applicable).
3. Install the new faucet body through the sink hole(s). Use the escutcheon if installing on a 3-hole sink.
4. Secure the faucet from underneath the sink using the provided mounting hardware.
5. Connect hot and cold water supply lines to the faucet.
6. Connect the pullout hose to the quick connect system.
7. Attach the hose weight to the pullout hose at the specified location (refer to your faucet's specific instructions for weight placement).
8. Turn on water supply and check for leaks.

### 5.2 Installing the Hose Corral

A hose corral is used to prevent the pullout hose weight from getting caught on the sink drain or other obstructions, ensuring smooth retraction of the spray wand. This video demonstrates the installation process.



Video 5.1: Installation guide for the Moen Hose Corral, demonstrating how to prevent the pullout hose from snagging under the sink.

1. **Preparation:** Ensure you have safety glasses and scissors (if needed for trimming the sleeve).
2. **Attach Clip:** Snap the blue clip onto the stationary portion of the pullout hose, just above the quick connect system. This clip will hold the top of the hose corral sleeve.
3. **Install Sleeve:** Slide the clear plastic sleeve over the pullout hose and its weight, guiding it upwards until it reaches the blue clip. Position the hole in the sleeve over the clip and pull down gently to secure the sleeve in place.
4. **Adjust Sleeve Length (Optional):** If the sleeve is too long and interferes with other components under the sink, you can shorten its length using scissors along the marked lines.

## 6. OPERATION

---

Your Moen Extensa faucet is designed for ease of use and versatility.



Image 6.1: Close-up of the Moen Extensa faucet's pullout spray wand.

- **Handle Control:** The single lever handle controls both water flow and temperature. Move the handle left for hot water, right for cold water, and up/down to adjust flow. The handle has a 100-degree arc of travel for precise control.
- **Pullout Spout:** Grasp the spray wand and pull it out from the main faucet body. The flexible hose allows for extended reach for cleaning or rinsing.
- **Spray Modes:** The spray wand operates in either stream or spray mode. Press the button on the spray wand to switch between these two modes. This can be done whether the wand is pulled out or retracted.
- **Retraction:** When finished, guide the spray wand back into the faucet body. The hose weight under the sink assists in smooth retraction.

## 7. MAINTENANCE

Proper care and maintenance will ensure the long-lasting beauty and performance of your Moen faucet.

- **Cleaning:** Clean your faucet regularly with a soft cloth and warm, soapy water. Avoid abrasive cleaners, harsh chemicals, or scouring pads, as these can damage the finish.
- **Aerator Maintenance:** If water flow decreases, the aerator may be clogged. Unscrew the aerator from the tip of the spout, clean any debris, and reattach.
- **Hose Inspection:** Periodically inspect the pullout hose and connections under the sink for any signs of wear or leaks.

## 8. TROUBLESHOOTING

If you encounter issues with your faucet, refer to the following common solutions:

Problem	Possible Cause	Solution
<b>Spray wand does not retract smoothly.</b>	Hose weight is obstructed or caught on plumbing under the sink.	Check under the sink to ensure the hose and weight have a clear path. Consider installing a hose corral (refer to Section 5.2) to guide the hose and prevent snagging.

Problem	Possible Cause	Solution
<b>Low water flow.</b>	Clogged aerator or partially closed water supply valves.	Clean the aerator (refer to Section 7). Ensure hot and cold water supply valves under the sink are fully open.
<b>Leaks from connections.</b>	Loose connections or damaged O-rings.	Tighten all connections. If leaks persist, inspect O-rings and replace if damaged.

## 9. SPECIFICATIONS

Feature	Detail
<b>Brand</b>	Moen
<b>Model Number</b>	7560W
<b>Recommended Uses</b>	Kitchen
<b>Mounting Type</b>	Deck Mount
<b>Finish Type</b>	Brushed
<b>Material</b>	Brass
<b>Color</b>	Glacier
<b>Number of Handles</b>	1
<b>Included Components</b>	Deck Plate
<b>Hole Count</b>	1 (or 3 with escutcheon)
<b>Special Feature</b>	Pull Down Sprayer
<b>Maximum Flow Rate</b>	1.5 Gallons Per Minute
<b>Spout Height</b>	8 Inches
<b>Spout Reach</b>	10.25 Inches
<b>Product Dimensions</b>	20.88 x 9.44 x 3 inches
<b>Item Weight</b>	6.05 pounds

## 10. WARRANTY INFORMATION

This Moen faucet is backed by a **Limited Lifetime Warranty**. For specific details regarding coverage and terms, please refer to the warranty documentation included with your product or visit the official Moen website.

## 11. SUPPORT

For further assistance, product information, or to contact customer service, please use the following resources:

- **Website:** [moen.com](http://moen.com)
- **Phone:** 1-800-BUY-MOEN (1-800-289-6636)

