

[manuals.plus](#) /› [PlayStation](#) /› [Sony PlayStation 3 Blu-ray Disc Remote Control User Manual](#)

PlayStation 98406

Sony PlayStation 3 Blu-ray Disc Remote Control User Manual

MODEL: 98406

Introduction

This manual provides essential instructions for setting up, operating, and maintaining your Sony PlayStation 3 Blu-ray Disc Remote Control (Model 98406). Designed for seamless media playback and navigation on your PlayStation 3 console, this Bluetooth-enabled remote enhances your entertainment experience by offering intuitive control from a distance.

Product Overview



An image showing the front view of the black Sony PlayStation 3 Blu-ray Disc Remote Control, highlighting its various media playback and navigation buttons.

The Sony PlayStation 3 Blu-ray Disc Remote Control is a dedicated accessory for your PS3 console, allowing you to control Blu-ray Disc movies, DVDs, and other media content with ease. Its Bluetooth connectivity eliminates the need for direct line-of-sight, providing flexible control from anywhere in your room. The remote features a comprehensive set of buttons for playback, menu navigation, and system control, making it an ideal companion for your PS3 multimedia hub.

Setup

Pairing the Remote Control

1. Ensure your PlayStation 3 console is powered on.
2. Insert two AA batteries into the remote control.
3. On the PS3 XMB (XrossMediaBar), navigate to **Settings > Accessory Settings > Register BD Remote Control**.
4. Follow the on-screen prompts. When instructed, press and hold the **START** and **ENTER** buttons on the remote control simultaneously for a few seconds until the PS3 detects the remote.
5. Once detected, select the remote control on the PS3 screen to complete the pairing process. A

confirmation message will appear.

Operating Instructions

Basic Navigation

- Use the directional pad (up, down, left, right) to navigate menus.
- Press **ENTER** (or **X** button equivalent) to select items.
- Press **BACK** (or **O** button equivalent) to return to the previous screen.

Media Playback Controls

- **PLAY**: Start playback.
- **PAUSE**: Pause playback.
- **STOP**: Stop playback.
- **SCAN** (left/right): Fast forward or rewind.
- **PREV/NEXT**: Skip to the previous or next chapter/track.
- **SLOW/STEP**: Control slow motion or frame-by-frame playback.

Blu-ray Disc Specific Functions

- **TOP MENU**: Access the main menu of a Blu-ray Disc.
- **POP UP MENU**: Access the pop-up menu during Blu-ray Disc playback.
- **DISPLAY**: Show on-screen information.
- **AUDIO, ANGLE, SUBTITLES**: Control respective Blu-ray Disc features.

System Control

- **PS Button**: Press to access the XMB or hold to bring up the power options menu (turn off system, turn off controller).
- Number Pad (0-9): For direct chapter selection or other numerical inputs.
- Colored Buttons (Red, Green, Blue, Yellow): Functionality varies by application or disc.

Maintenance

Battery Replacement

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery cover.
3. Remove the old AA batteries.
4. Insert two new AA batteries, ensuring correct polarity (+/-).
5. Close the battery cover securely.

Note: If the remote becomes unresponsive or the range decreases, replace the batteries.

Troubleshooting

Remote Not Responding

- Check battery levels and replace if necessary.
- Ensure the remote is paired with the PS3. If not, re-pair using the setup instructions.
- Verify there are no excessive interferences between the remote and the PS3 console.
- Restart the PS3 console.

Pairing Failure

- Ensure the PS3 is in pairing mode (**Register BD Remote Control** menu).
- Make sure no other Bluetooth devices are actively interfering with the pairing process.
- Try moving closer to the PS3 console during pairing.

Specific Buttons Not Working

- Clean the remote control surface and buttons with a soft, dry cloth.
- Ensure the remote is fully paired and batteries are fresh.

Specifications

Feature	Detail
Model Number	98406
Connectivity	Bluetooth
Power Source	2 x AA Batteries
Dimensions (L x W x H)	Approx. 11.25 x 5 x 2 inches (28.58 x 12.7 x 5.08 cm)
Weight	Approx. 8.6 ounces (244 grams)
Manufacturer	Sony Computer Entertainment
Release Date	January 9, 2007

Warranty and Support

For warranty information and technical support, please refer to the documentation included with your PlayStation 3 console or visit the official PlayStation support website. Keep your proof of purchase for warranty claims.