



Manuals.plus /

› Ingersoll Rand /

› Ingersoll Rand 3103K Grinder Kit Instruction Manual

## Ingersoll Rand 3103K

# Ingersoll Rand 3103K Grinder Kit Instruction Manual

## INTRODUCTION

Welcome to your new Ingersoll Rand 3103K Grinder Kit. This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your tool. Please read this manual thoroughly before using the product and retain it for future reference.

## IMPORTANT SAFETY INFORMATION

Always observe basic safety precautions to reduce the risk of personal injury and damage to the tool. Failure to follow these instructions may result in serious injury.

- **Eye Protection:** Always wear ANSI-approved safety glasses or goggles when operating this tool.
- **Hearing Protection:** Wear hearing protection during extended use to prevent hearing damage.
- **Respiratory Protection:** Use appropriate respiratory protection when grinding materials that produce dust or fumes.
- **Air Supply:** Ensure the air supply is clean, dry, and regulated to the specified pressure. Disconnect the air supply before changing accessories or performing maintenance.
- **Work Area:** Keep the work area clean, well-lit, and free from obstructions. Do not operate in explosive atmospheres.
- **Secure Workpiece:** Always secure the workpiece firmly to prevent movement during operation.
- **Proper Attire:** Do not wear loose clothing or jewelry that could get caught in moving parts.

## PACKAGE CONTENTS

The Ingersoll Rand 3103K Grinder Kit includes the following components:

- Ingersoll Rand Pneumatic Grinder Tool
- 2 Backing Pads (MED Quick Change Style)
- Surface Preparation Disks (Medium, Red) - Quantity 50
- Surface Preparation Disks (Coarse, Brown) - Quantity 50

- Surface Preparation Disks (Medium, Red) - Quantity 25
- Surface Preparation Disks (Coarse, Brown) - Quantity 25
- Sanding Disks (83 Grit, Coarse) - Quantity 100
- Funnel



This image displays the complete Ingersoll Rand 3103K Grinder Kit. It includes the pneumatic grinder tool, two backing pads for quick-change style disks, and a variety of surface preparation disks in different grits and colors (red, brown, blue) for various applications. The components are neatly organized within a black, fitted storage tray.

## SETUP

1. **Connect Air Supply:** Attach a suitable air hose (not included) to the grinder's air inlet. Ensure the air hose has an inline air filter/lubricator to maintain tool performance and longevity.
2. **Regulate Air Pressure:** Set your air compressor's regulator to the recommended operating pressure (refer to specifications).
3. **Install Backing Pad:** Thread the appropriate backing pad onto the grinder's spindle until secure.
4. **Attach Disk:** Select the desired surface preparation or sanding disk. These quick-change disks typically attach with a simple twist-on mechanism to the backing pad. Ensure the disk is firmly seated before operation.

## OPERATING INSTRUCTIONS

Follow these steps for safe and effective operation of your grinder:

1. **Pre-Operation Check:** Before each use, inspect the grinder, air hose, and accessories for any damage or wear. Replace worn or damaged parts immediately.

2. **Start the Tool:** With the air supply connected and regulated, depress the trigger to start the grinder. Allow it to reach full speed before contacting the workpiece.
3. **Apply to Workpiece:** Gently bring the rotating disk into contact with the surface to be worked. Apply light, even pressure. Avoid excessive force, which can reduce efficiency and damage the disk or workpiece.
4. **Maintain Control:** Always maintain a firm grip on the tool. Guide the grinder smoothly across the surface.
5. **Stop the Tool:** Release the trigger to stop the grinder. Wait for the disk to come to a complete stop before setting the tool down or disconnecting the air supply.
6. **Disconnect Air:** Always disconnect the air supply when not in use, before changing accessories, or performing any maintenance.

## MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your Ingersoll Rand 3103K Grinder Kit.

- **Lubrication:** Add a few drops of pneumatic tool oil into the air inlet before and after each use, or every few hours of continuous operation. Use the provided funnel for easy application.
- **Cleaning:** Keep the tool clean and free of debris. Wipe down the exterior with a clean cloth. Do not use harsh solvents that could damage the housing.
- **Air Filter:** Regularly check and clean or replace the air filter in your air supply system to prevent contaminants from entering the tool.
- **Accessory Inspection:** Inspect backing pads and disks for wear, cracks, or damage. Replace them as needed to ensure safe and effective operation.
- **Storage:** Store the grinder kit in a clean, dry place, away from extreme temperatures and moisture.

## TROUBLESHOOTING

If you encounter issues with your grinder, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Loss of power or slow speed	Low air pressure; clogged air filter; lack of lubrication; worn motor parts	Check air pressure and regulator setting; clean/replace air filter; lubricate tool; contact service for internal issues.
Excessive vibration	Damaged or unbalanced disk/backing pad; loose components	Inspect and replace damaged disks/pads; ensure all components are securely fastened.
Air leakage	Loose fittings; damaged O-rings/seals	Tighten all air fittings; inspect and replace worn seals or O-rings.
Tool not starting	No air supply; trigger mechanism jammed; internal damage	Verify air supply connection and pressure; check trigger for obstructions; contact service if internal damage is suspected.

## SPECIFICATIONS

Feature	Detail
Brand	Ingersoll Rand
Model Number	3103K
Power Source	Pneumatic-powered
Item Weight	2.7 Pounds
Product Dimensions	14.5 x 10.6 x 2.1 inches
Material	Metal
Horsepower	0.2 Horsepower
Special Features	Lightweight
UPC	663023021003

## WARRANTY AND SUPPORT

Ingersoll Rand products are manufactured to high-quality standards. For specific warranty details, please refer to the warranty card included with your product or visit the official Ingersoll Rand website.

For product or accessory orders, please contact:

**1-800-866-5457** (USA and Canada)

For service center locations and additional support, please visit: [www.irttools.com](http://www.irttools.com)