

Coby DP-882

Coby DP-882 8-Inch Digital Photo Frame User Manual

Model: DP-882

INTRODUCTION

The Coby DP-882 is an 8-inch digital photo frame designed to display your favorite photos, play music, and even short video clips. Featuring an 800 x 600 resolution TFT LCD, it supports various memory card formats and USB drives, offering a versatile way to enjoy your digital media. This manual provides detailed instructions for setting up, operating, and maintaining your device.

PACKAGE CONTENTS

Please check the package contents to ensure all items are present:

- Coby DP-882 Digital Photo Frame
- Remote Control
- Interchangeable Faceplates (Black and White)
- Detachable Stand
- AC Adapter
- AV Cable

PRODUCT OVERVIEW

The Coby DP-882 features an 8-inch TFT LCD screen, control buttons typically located on the side or back, and various ports for connectivity. It includes built-in stereo speakers for audio playback.



This image shows the Coby DP-882 digital photo frame, highlighting its 8-inch screen and the included black and white interchangeable faceplates. The frame is designed for tabletop display using its detachable stand.

Ports and Controls:

- **Memory Card Slots:** Supports SD, MMC, xD-Picture Card, and CompactFlash.
- **USB Port:** For connecting USB flash drives and for fast file transfers when connected to a computer.
- **AV Output:** For connecting to external display devices.
- **3.5mm Headphone Jack:** For private listening.
- **Power Input:** For connecting the AC adapter.
- **Control Buttons:** Menu, navigation, and selection buttons.
- **Brightness Control:** A wheel knob for adjusting screen brightness.

SETUP

1. **Attach the Stand:** Securely attach the detachable stand to the back of the photo frame for stable placement on a flat surface.
2. **Connect Power:** Plug the AC adapter into the power input port on the frame, then plug the adapter into a standard electrical outlet.

3. **Insert Memory Card/USB Drive:** Insert a compatible memory card (SD, MMC, xD, CF) into the appropriate slot or a USB flash drive into the USB port. Ensure it is inserted correctly.
4. **Power On:** Locate the power switch on the frame and turn it ON. The frame will power up and display the main menu or automatically start a slideshow if configured.

OPERATING INSTRUCTIONS

Basic Navigation

Use the remote control or the control buttons on the frame to navigate through menus. The directional buttons (up, down, left, right) are used to move selections, and the 'Enter' or 'OK' button confirms choices. The 'Menu' or 'Exit' button typically returns to the previous screen or the main menu.

Photo Playback (Slideshow)

1. **Select Source:** From the main menu, select the memory source (e.g., SD Card, USB Drive) where your photos are stored.
2. **Start Slideshow:** Choose the 'Slideshow' option. The frame will begin displaying photos from the selected source.
3. **Slideshow Settings:** Access the settings menu to customize slideshow options such as transition effects, display duration (from 5 seconds to 1 day), and playback order (sequential or random).
4. **Photo Orientation:** The frame can manually rotate photos during playback. For best results, it is recommended to orient photos correctly on your computer before transferring them to the memory card.

Music Playback

The frame supports MP3 and WMA audio files. You can play music independently or set it to accompany your photo slideshows. Navigate to the music section, select your desired audio files, and begin playback.

Video Playback

The frame supports MP4 and AVI video files. Navigate to the video section, select a video file, and press 'Play'. Note that specific video encodings may not be supported, potentially leading to playback issues or no sound. For optimal performance, ensure videos are in common, compatible formats.

File Management (Frame as Host)

The DP-882 allows you to copy files between different inserted memory cards or USB flash drives directly through the frame's menu system, without needing a computer. This is useful for consolidating media or transferring files on the go.

Connecting to a Computer (Frame as Card Reader)

The frame can function as a 5-in-1 memory card reader when connected to a computer. Use a mini USB cable to connect the frame to your computer. Your computer will recognize the inserted memory cards as separate removable mass storage drives. This allows you to easily transfer photos, music, and videos to your memory cards. **Note:** The frame itself does not have internal memory; you must have a memory card inserted for the computer to detect storage.

MAINTENANCE

- **Cleaning the Screen:** Use a soft, dry, lint-free cloth to gently wipe the screen. Avoid using liquid

cleaners or abrasive materials, which can damage the display.

- **Cleaning the Frame:** Wipe the exterior of the frame with a soft, slightly damp cloth.
- **Storage:** When not in use for extended periods, store the frame in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Power Off:** Always turn off the frame using the power switch when not in use to conserve energy and prolong its lifespan.

TROUBLESHOOTING

- **No Power:**
Solution: Ensure the AC adapter is securely connected to both the frame and a working power outlet. Check the power switch is in the 'ON' position.
- **No Image/Blank Screen:**
Solution: Verify the frame is powered on. Ensure a memory card or USB drive with compatible media is inserted correctly. Select the correct source from the menu.
- **Photos Not Displaying or Slow Slideshow:**
Solution: Ensure photos are in JPEG or BMP format. Large image files may cause slow performance; consider resizing them on a computer. Pre-rotate photos on your computer for correct orientation.
- **Video/Audio Playback Issues (No Sound, Choppy Video):**
Solution: Verify that video files are in MP4 or AVI format and audio files are in MP3 or WMA. Some specific video encodings may not be fully supported. Ensure the volume is turned up.
- **Frame Not Recognized by Computer:**
Solution: Ensure a memory card is inserted into the frame before connecting it to the computer via USB. The frame acts as a card reader, not a storage device itself.
- **Remote Control Not Working:**
Solution: Check the battery in the remote control and replace if necessary. Ensure there is a clear line of sight between the remote and the frame's IR receiver.

SPECIFICATIONS

Brand	Coby
Model	DP-882
Screen Size	8 Inches
Resolution	800 x 600 (SVGA)
Compatible Devices	Personal Computer
Connectivity Technology	USB
Power Source	Corded Electric
Control Method	Remote, Buttons
Supported Memory Cards	SD, MMC, xD-Picture Card, CompactFlash
Supported File Formats	JPEG, BMP, MP3, WMA, MP4, AVI
Built-in Features	Stereo Speakers, USB Port, AV Output, 3.5mm Headphone Jack

Item Weight	3.1 Pounds
-------------	------------

WARRANTY INFORMATION

This Coby DP-882 Digital Photo Frame comes with a **1-year limited warranty** from the date of purchase. Please retain your original purchase receipt or proof of purchase for any warranty claims. The warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

SUPPORT

For further assistance, technical support, or inquiries regarding your Coby DP-882 Digital Photo Frame, please refer to the official Coby website or contact their customer service department. You may find additional FAQs and support resources online.