

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Casio](#) /

> [Casio Cash Register Purple Ink Roller User Manual for Models 3200, 3215, 3405, 3415, 3500, 3530, 3404, 3408, 3508, 3530, 4404, 4420, 3535, 3630, 3640, 3680, 3700, 3750, 3815, 3830, SR6, TK100, 1000, 1100, 4430, CE100, 2104, 2208, 3100, 3115, 700, 710](#)

Casio cascasregpur1

Casio Cash Register Purple Ink Roller User Manual

For Models: 3200, 3215, 3405, 3415, 3500, 3530, 3404, 3408, 3508, 3530, 4404, 4420, 3535, 3630, 3640, 3680, 3700, 3750, 3815, 3830, SR6, TK100, 1000, 1100, 4430, CE100, 2104, 2208, 3100, 3115, 700, 710

INTRODUCTION

This manual provides instructions for the proper installation, operation, and maintenance of your Casio Purple Ink Roller. This ink roller is designed to provide clear and consistent printing for compatible Casio cash register models. Please read this manual thoroughly before use to ensure optimal performance and longevity of your product.

PRODUCT OVERVIEW



An image showing the Casio purple ink roller, a cylindrical component designed for cash register printing mechanisms.

The Casio Purple Ink Roller is a replacement consumable for various Casio cash register models. It ensures that transaction details, receipts, and reports are printed clearly and legibly in purple ink. Regular replacement of the ink roller is essential for maintaining print quality and the efficient operation of your cash register's printing unit.

COMPATIBLE CASIO CASH REGISTER MODELS

This purple ink roller is compatible with the following Casio cash register models:

- 3200, 3215, 3405, 3415, 3500, 3530
- 3404, 3408, 3508, 3530, 4404, 4420
- 3535, 3630, 3640, 3680, 3700, 3750
- 3815, 3830, SR6, TK100, 1000, 1100
- 4430, CE100, 2104, 2208, 3100, 3115, 700, 710

SETUP AND INSTALLATION

Installing the Ink Roller

Follow these steps to install the new purple ink roller into your Casio cash register:

1. **Power Off:** Ensure the cash register is turned off and unplugged from the power source before beginning installation.
2. **Open Printer Cover:** Locate and open the printer cover on your cash register. This is typically found on the top or front panel. Refer to your specific cash register model's manual if you have difficulty locating it.
3. **Remove Old Roller (if applicable):** If replacing an existing roller, gently lift and remove the old ink roller from its housing. Dispose of the old roller responsibly.
4. **Unpack New Roller:** Carefully remove the new Casio Purple Ink Roller from its packaging. Avoid touching the inked surface of the roller.
5. **Insert New Roller:** Align the new ink roller with the designated slots in the printer mechanism. Gently press it down until it clicks securely into place. Ensure it rotates freely.
6. **Close Printer Cover:** Close the printer cover firmly until it latches.
7. **Power On and Test:** Plug in and turn on the cash register. Perform a test print to confirm that the ink roller is installed correctly and printing clearly.

OPERATION

Once correctly installed, the Casio Purple Ink Roller operates automatically with your cash register's printing mechanism. No further user intervention is required for its operation. The roller will apply ink to the printer ribbon as needed to produce clear printouts.

MAINTENANCE

Replacing the Ink Roller

The ink roller is a consumable item and will require replacement when the print quality begins to fade or become inconsistent. The frequency of replacement depends on the volume of printing. It is recommended to keep a spare ink roller on hand to avoid interruptions in service.

- **Signs of Replacement:** Faded or light print, missing characters, or uneven ink distribution are indicators that the ink roller needs to be replaced.
- **Replacement Procedure:** Follow the steps outlined in the "Setup and Installation" section to replace the ink roller.

TROUBLESHOOTING

If you encounter issues with printing after installing the ink roller, consider the following:

- **Faded or No Print:**
 - Ensure the ink roller is seated correctly and fully engaged in its mechanism.
 - Verify that the ink roller is not depleted. Replace if necessary.
 - Check if the printer ribbon (if applicable to your model) is properly installed and not twisted.
- **Roller Not Moving:**
 - Confirm the roller is correctly aligned and not obstructed.
 - Ensure no foreign objects are preventing the roller's movement.
- **Paper Jams:**
 - While not directly related to the ink roller, ensure paper is loaded correctly and not interfering with the printer mechanism.

If problems persist, consult your specific cash register model's user manual or contact Casio customer support.

SPECIFICATIONS

Feature	Detail
Brand	Casio
Model Number (Ink Roller)	cascasregpur1
Item Weight	907.18 g
Ink Color	Purple
Date First Available	Oct. 31 2012
Discontinued by Manufacturer	No

WARRANTY AND SUPPORT

For information regarding warranty coverage for your Casio Purple Ink Roller, please refer to the documentation provided with your original cash register or visit the official Casio website. For technical support or further assistance, please contact Casio customer service directly.

Casio Official Website: www.casio.com