

[Manuals.plus](#) /

› [Wilton](#) /

› Wilton Scooby Doo Cake Pan Instruction Manual Model 2105-3227

Wilton 2105-3227

Wilton Scooby Doo Cake Pan Instruction Manual

Model: 2105-3227

INTRODUCTION

This manual provides instructions for the proper use and care of your Wilton Scooby Doo Cake Pan, Model 2105-3227. Following these guidelines will help ensure optimal baking results and extend the life of your cake pan.

PRODUCT OVERVIEW

The Wilton Scooby Doo Cake Pan is designed to create a fun, character-shaped cake. It is constructed from quality anodized aluminum, ensuring even heat distribution for consistent baking.

Key Features:

- Takes one standard cake mix.
- Quality anodized aluminum construction for durability.
- Measures approximately 10-1/2 by 12 by 2 inches.
- Designed for creating character-themed cakes.



Figure 1: The Wilton Scooby Doo Cake Pan, featuring the character Scooby Doo alongside a large burger design. The pan is made of silver-colored aluminum and has a hanging hole at the top.

SETUP AND PREPARATION

1. **Clean the Pan:** Before first use, wash the cake pan thoroughly with warm, soapy water. Rinse and dry completely.
2. **Grease and Flour:** For best results and to prevent sticking, generously grease the entire interior surface of the pan with solid vegetable shortening or a non-stick baking spray. Then, lightly flour the greased surface, tapping out any excess flour. This creates a non-stick barrier.
3. **Prepare Cake Mix:** Prepare your favorite cake batter according to package directions or recipe. The pan is designed to accommodate one standard cake mix.

OPERATING INSTRUCTIONS (BAKING)

1. **Fill the Pan:** Pour the prepared cake batter into the greased and floured pan. Distribute the batter evenly. Do not overfill; leave approximately 1/2 inch from the top edge to allow for rising.
2. **Bake:** Place the pan in a preheated oven. Follow the baking time and temperature specified by your cake mix or recipe. The pan is oven safe up to 450 degrees Fahrenheit (232 degrees Celsius).
3. **Check for Doneness:** To check if the cake is done, insert a wooden pick or thin knife into the center of the cake. If it comes out clean, the cake is ready.
4. **Cooling:** Once baked, remove the pan from the oven and place it on a wire rack to cool for 10-15 minutes. This allows the cake to firm up before removal.
5. **Remove Cake:** After cooling, carefully invert the pan onto a cooling rack. The cake should release easily. Allow the cake to cool completely before decorating.

***Tip:** Decorating suggestions may be included with the pan or can be found on the Wilton website for character cake designs.*

CARE AND MAINTENANCE

- **Hand Washing Recommended:** To preserve the finish and non-stick properties of your aluminum cake pan, hand washing is recommended. Wash with warm, soapy water using a soft sponge or cloth. Avoid abrasive cleaners or scouring pads, which can damage the surface.
- **Drying:** Dry the pan thoroughly immediately after washing to prevent water spots and maintain its appearance.
- **Storage:** Store the pan in a dry place.
- **Rust Resistance:** The aluminum construction provides rust resistance.

***Note:** While some specifications may indicate dishwasher safety, hand washing is generally preferred for specialty aluminum bakeware to maintain its quality over time.*

TROUBLESHOOTING

- **Cake Sticks to Pan:** Ensure the pan was thoroughly greased and floured before adding batter. Allow the cake to cool for the recommended time (10-15 minutes) before attempting to invert. If sticking persists, try using a baking spray specifically designed for intricate pans.
- **Uneven Baking:** Ensure your oven temperature is accurate. Aluminum pans conduct heat well, but uneven oven temperatures can affect results. Rotate the pan halfway through baking if necessary.

SPECIFICATIONS

Feature	Detail
Brand	Wilton
Model Number	2105-3227
Material	Aluminum

Shape	Cartoon (Scooby Doo)
Dimensions	10-1/2 inches (length) x 12 inches (width) x 2 inches (depth)
Item Weight	8 ounces
Oven Safe	Yes, up to 450°F (232°C)
Product Care	Hand Wash Recommended
UPC	070896897299

WARRANTY AND SUPPORT

For information regarding product warranty or customer support, please visit the official Wilton website or contact Wilton customer service directly. Keep your purchase receipt for any warranty claims.
Wilton Website: www.wilton.com

© 2025 Wilton. All rights reserved. Scooby Doo characters © Hanna-Barbera.
This manual is for informational purposes only. Product specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

