

Lexmark X2480

Lexmark X2480 All-in-One Printer User Manual

Model: X2480

INTRODUCTION

This manual provides comprehensive instructions for the Lexmark X2480 All-in-One Thermal Inkjet Printer, covering its print, copy, and scan functionalities. It will guide you through the setup process, daily operations, maintenance procedures, and troubleshooting common issues to ensure optimal performance of your device.



Image 1: The Lexmark X2480 All-in-One Printer, showing its compact design and paper trays. This device combines printing, copying, and scanning capabilities.

1. SETUP

1.1 Unpacking the Printer

Carefully remove the printer from its packaging. Ensure all protective tapes and packing materials are removed from the exterior and interior of the device. Retain the packaging for future transportation or service needs.

1.2 Connecting the Printer

1. **Power Connection:** Connect the power cord to the printer and then to a grounded electrical outlet.
2. **USB Connection:** Connect the USB cable from the printer to an available USB port on your computer. The Lexmark X2480 uses a wired connection for data transfer.

1.3 Software Installation

Insert the Lexmark installation CD into your computer's CD-ROM drive. Follow the on-screen instructions to install the printer drivers and Lexmark Imaging Studio Software. If you do not have the CD, drivers can typically be downloaded from the official Lexmark support website.

1.4 Ink Cartridge Installation

1. Open the printer access cover.
2. Wait for the print carriage to move to the center.
3. Unpack the new ink cartridges (black and color). Remove any protective tape or caps.
4. Insert the cartridges into their respective slots until they click into place.
5. Close the printer access cover. The printer will perform an alignment process.

2. OPERATING INSTRUCTIONS

2.1 Printing Documents

To print a document from your computer:

1. Open the document you wish to print.
2. Select **File > Print** from the application menu.
3. Choose the Lexmark X2480 from the list of available printers.
4. Adjust print settings such as paper size (e.g., A4, Letter), print quality, and color options. The printer supports color output and various print media, including glossy photo paper.
5. Click **Print**. The printer can achieve speeds of up to 17 pages per minute for monochrome documents.

2.2 Copying Documents

The Lexmark X2480 allows for quick copying:

1. Place the document face-down on the scanner glass, aligning it with the guide marks.
2. Close the scanner lid.
3. On the printer's control panel, press the **Copy** button.
4. You can adjust settings like number of copies or copy quality if available on the control panel.
5. Press **Start Copy**. The printer can copy at speeds up to 17 pages per minute for black and white documents.

2.3 Scanning Documents and Photos

To scan using the flatbed scanner:

1. Place the item face-down on the scanner glass.
2. Close the scanner lid.
3. From your computer, open the Lexmark Imaging Studio Software or your preferred scanning application.
4. Select the Lexmark X2480 as your scanner.
5. Choose scan settings such as resolution (up to 4800 dpi for photos), color mode, and destination (e.g., save to file, email).
6. Click **Scan**. You can share scanned photos via email or print them directly.

2.4 Photo Printing without a PC

The Lexmark X2480 supports direct photo printing from PictBridge-compatible digital cameras:

1. Connect your PictBridge-compatible digital camera directly to the printer's PictBridge port (if available, typically a

USB port on the front).

2. Use your camera's menu to select the photos you wish to print and adjust print settings.
3. Initiate printing from your camera. The printer supports borderless photos in various sizes including A4, A5, A6, Letter, Hagaki, 3.5" x 5", 10 x 15cm, 13 x 18cm, 4" x 6", 5" x 7", L, and 2L.

2.5 Using Lexmark Imaging Studio Software

The exclusive Lexmark Imaging Studio Software provides tools to enhance your photos. Features include 1-Touch scan and copy, 1-Touch red eye removal, and 1-Touch color fix. Refer to the software's help documentation for detailed usage instructions.

3. MAINTENANCE

3.1 Replacing Ink Cartridges

When print quality deteriorates or the printer indicates low ink, it's time to replace the cartridges. Follow the same steps as initial installation (Section 1.4). Always use genuine Lexmark ink cartridges for best results.

3.2 Cleaning the Printer

- **Exterior:** Wipe the exterior surfaces with a soft, damp, lint-free cloth. Avoid abrasive cleaners.
- **Scanner Glass:** Clean the scanner glass with a soft cloth lightly dampened with glass cleaner. Do not spray cleaner directly onto the glass.
- **Print Head Nozzles:** If print quality issues persist after replacing cartridges, use the printer's utility software on your computer to perform a print head cleaning cycle.

4. TROUBLESHOOTING

This section addresses common issues you might encounter with your Lexmark X2480 printer.

Problem	Possible Cause / Solution
Printer not responding	<ul style="list-style-type: none">• Ensure the printer is powered on and connected securely via USB.• Check if the printer is selected as the default printer on your computer.• Restart both the printer and your computer.
Poor print quality	<ul style="list-style-type: none">• Check ink levels and replace empty cartridges.• Perform a print head cleaning cycle through the printer software.• Ensure you are using the correct paper type and quality settings.
Paper jams	<ul style="list-style-type: none">• Remove any jammed paper carefully, following instructions in the printer's on-screen prompts or Lexmark support.• Ensure paper is loaded correctly and not overfilled in the input tray.• Use recommended paper types.
Scanner not working	<ul style="list-style-type: none">• Verify the USB connection.• Ensure scanner drivers are correctly installed.• Restart the scanning application or computer.

5. SPECIFICATIONS







Feature	Detail
Model Name	Lexmark X2480
Printing Technology	Thermal Inkjet
Connectivity Technology	Wired (USB)
Max Print Speed (Monochrome)	17 ppm
Max Copy Speed (Black & White)	17 ppm
Printer Output	Color
Scanner Type	Flatbed
Print Media Supported	Glossy photo paper, various standard paper sizes (A4, A5, A6, Letter, Hagaki, 3.5" x 5", 10 x 15cm, 13 x 18cm, 4" x 6", 5" x 7", L, 2L)
Compatible Devices	Camera (PictBridge), PC
Control Method	Push Button, Remote (via PC software)
Item Weight	10.7 pounds (4.85 kg)
Package Dimensions	17.5 x 13.8 x 7.6 inches (44.45 x 35.05 x 19.3 cm)
UPC	734646044899
Date First Available	January 26, 2007

6. SUPPORT AND WARRANTY INFORMATION

For further assistance, technical support, or warranty inquiries, please refer to the official Lexmark support website or contact Lexmark customer service. Specific warranty terms and conditions may vary by region and purchase date. Please retain your proof of purchase.

Online Support: Visit the official Lexmark support website for drivers, FAQs, and troubleshooting guides [Lexmark Support](#)



 <p>CX331, CX431, MC3224, MC3326, MC3426 MFPs</p> <p>User's Guide</p> <p>February 2021</p> <p>www.lexmark.com</p>	<p>Lexmark CX331, CX431, MC3224, MC3326, MC3426 MFPs User's Guide</p> <p>This comprehensive user's guide provides detailed instructions for Lexmark CX331, CX431, MC3224, MC3326, and MC3426 Multifunction Printers (MFPs). It covers setup, installation, configuration, operation, maintenance, and troubleshooting, offering essential guidance for users of these Lexmark devices.</p>
 <p>XM9100 Series</p> <p>User's Guide</p> <p>July 2017</p> <p>www.lexmark.com</p>	<p>Lexmark XM9100 Series User's Guide: Setup, Operation, and Maintenance</p> <p>This comprehensive user's guide provides essential information for operating and maintaining the Lexmark XM9100 Series multifunction printer. Discover detailed instructions on initial setup, daily usage, advanced features like printing, copying, scanning, and faxing, as well as troubleshooting tips and safety precautions.</p>
 <p>CX730, CX735, CX737, XC4342, XC4352 MFPs</p> <p>User's Guide</p> <p>July 2024</p> <p>www.lexmark.com</p>	<p>Lexmark CX730, CX735, CX737, XC4342, XC4352 MFPs User's Guide</p> <p>Comprehensive guide for Lexmark CX730, CX735, CX737, XC4342, XC4352 Multifunction Printers (MFPs). Covers setup, operation, paper handling, scanning, faxing, email, maintenance, and safety.</p>
 <p>4600 MFP Option</p> <p>Printer and Scanner Setup Guide for the T640, T642, and T644 series printers</p> <p>April 2011</p> <p>www.lexmark.com</p>	<p>Lexmark 4600 MFP Option Setup Guide for T640, T642, T644 Printers</p> <p>This setup guide provides comprehensive instructions for installing and configuring the Lexmark 4600 MFP Option, including printer and scanner setup for the T640, T642, and T644 series printers. It details various hardware configurations and initial setup procedures.</p>
 <p>W820</p> <p>User's Guide</p> <p>April 2011</p> <p>www.lexmark.com</p>	<p>Lexmark W820 User's Guide: Comprehensive Printing Instructions</p> <p>Explore the Lexmark W820 User's Guide for detailed instructions on printer operation, print job management, supply conservation, and troubleshooting. Learn to optimize your printing experience with this official Lexmark manual.</p>
 <p>B2236 Printer</p> <p>User's Guide</p> <p>January 2016</p> <p>www.lexmark.com</p>	<p>Lexmark B2236 Printer User's Guide</p> <p>Comprehensive user's guide for the Lexmark B2236 Printer, covering setup, operation, maintenance, and troubleshooting.</p>



[pdf] User Manual Guide

Lexmark Exit Single Sheet Manual Feed 250 Input Tray Paper Handling Optional 550 Drawer Only one drawer may be installed at a time lexmark eproduct guide also pub

Lexmark 13/10/2009 The greatest environmental impacts are generated when printing 1 print This ... T652dn/dtn/n, T654dn/dtn/n, T656dne, W840/dn/n, W850dn/n, X1250, X1270, X203n, X204n, X2450, X2470, **X2480**, X2500, X2510, X2530, X2550, X2580, X2600, X264dn, X2650, X2670, X340, X342n, X3470, X3480, X3...

lang:en score:35 filesize: 13.85 M page_count: 300 document date: 2009-11-12



[pdf] Guide

Lexmark ePG US April 15 lexmark en CA products e product guide |||

Lexmark April 2013 Table of contents Product overview Monochrome 4 Color 12 MONOCHROME LASE ... T650dn/dtn/n, T652dn/dtn/n, T654dn/dtn/n, T656dne, W840/dn/n, W850dn/n, X1250, X1270, X204n, X2470, **X2480**, X2500, X2530, X2550, X2580, X2600, X264dn, X2650, X2670, X2690, X340/n, X342n, X3430, X3470, ...

lang:en score:29 filesize: 60.23 M page_count: 322 document date: 2013-04-12




[pdf] Catalog Label

Lexmark™ 50F0ZA0 Imaging Unit 60000 s Yield Value Black Turtle Hughes Lexmark Catalog turtle ASSETS DOCUMENTS ITEMS EN |||

Lexmark Supplies Your Printer s Best Friend Supplies Compatibility Table October 2012 North Americ ... Z51, Z52, Z53, Z54, Z54se, Z82 Lexmark X1270 Lexmark X2350, X3470, Z730, Z735 Lexmark X2470 Lexmark **X2480**, X3480 Lexmark X2500, X2530, X2550, X5070, X5075, X5320, X5340, X5410, X5495 Lexmark X2580 Lex...

lang:es score:17 filesize: 1.38 M page_count: 9 document date: 2013-10-15

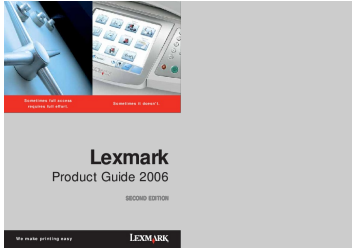

[pdf] Guide

untitled Lexmark X912e Color Laser MFP New 16C0440 E036 669 P036 printerscopiersandmore assets s

|||

Sometimes full access requires full effort. Sometimes it doesn't. Lexmark Product Guide 2006 SECON ... Lexmark Color Jetprinter Z730 Series, AIO X2300 Series, X2450, X2470, X3450, X3470 Lexmark AIO **X2480**, X3480 Lexmark AIO F4270, X4250 P910 Series, P6200 Series, P6300 Series, P4300 Series, X3300 S...

lang:en score:13 filesize: 5.33 M page_count: 77 document date: 2006-07-10

[pdf] Guide Label

untitled Lexmark A Matter of FaxPrinter stand w cab 0016C0379 Printer low 0016C0389 Envelope A4 7 3 4 Languages PCL® 6 Emulation DIGITAL P036 680amatteroffax assets s P036 680 srsId

AfmBOOp7fj4oBcD4AMCzS4cEwd9GpFoP30I VFnTnM78InoevN79H4cO FaxLexmark DIGITAL Lexmark offers multiple choices such as individual pick up with prepaid reply labels inserted in the cartridge boxes

or bulk programmes for large business users amatteroffax VFnTnM78InoevN79H4cOamatteroffax

AfmBOOp7fj4oBcD4AMCzS4cEwd9GpFoP30I VFnTnM78InoevN79H4cOamatteroffax users On your side you can do

part by activating Power Saver Mode on printer Thus win twice save energy and moneyamatteroffax

A3tEH9nYVskmatteroffax AfmBOOpJewWUDrKLU289neHR18p7UgdJ x8FrSaVtWMx42wr2rhNdH1


users INKJET PRINTER PHOTO SMALL MEDIUM AND LARGE WORKGROUP C524n dn dtn Linea™

Print Cartridges HP Canon Printers APPLE BROOn AfmBOOp3R0aGQ

fd7fvEgtjJzYDcc0QO0XBWWJDSVGnsetE6dKzn8Yamatteroffax |||

Sometimes full access requires full effort. Sometimes it doesn't. Lexmark Product Guide 2006 SECON ... Lexmark Color Jetprinter Z730 Series, AIO X2300 Series, X2450, X2470, X3450, X3470 Lexmark AIO **X2480**, X3480 Lexmark AIO F4270, X4250 P910 Series, P6200 Series, P6300 Series, P4300 Series, X3300 S...

lang:en score:11 filesize: 5.33 M page_count: 77 document date: 2006-07-10

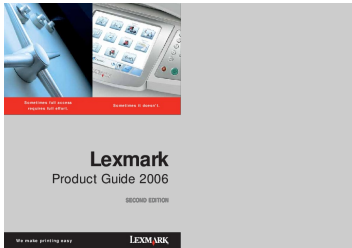

[pdf]

Lexmark A Matter of FaxOn your side you can do part by activating the Power Saver Mode on printer

Thus win twice save energy and saveP036 686amatteroffax assets s P036 686 srsId AfmBOOrCaHN1K6

awR2WS29AozTCW9TF9Tt0uY4IR8qaY3fDvErbf1dF FaxLexmark saveWireless Print Server 0014T0040

N4000e Fast Ethernet Mini Secure Digital SD Card with an adapter Sony Memory amatteroffax

awR2WS29AozTCW9TF9Tt0uY4IR8qaY3fDvErbf1dFamatteroffax AfmBOOpqRmFjseL4EgpXz

c5F0y9MAYWJKmRuuXa DO1vtakneueU7b6 DO1vtakneueU7b6amatteroffax AfmBOOpqRmFjseL4EgpXz

37BnXonV3YbEhOT5nhTnoyR5tYyYPHEGCaE |||

Sometimes full access requires full effort. Sometimes it doesn't. Lexmark 30/10/2006

Some people ... Lexmark Color Jetprinter Z730 Series, AIO X2300 Series, X2450,

X2470, X3450, X3470 Lexmark AIO **X2480**, X3480 Lexmark AIO F4270, X4250 P910

Series, P6200 Series, P6300 Series, P4300 Series, X3300 ...

lang:en score:10 filesize: 8.49 M page_count: 206 document date: 2006-10-25

