

## PlayGo 3615

# PlayGo My Home Fun 3615 Breakfast for Two Toy Set

## Instruction Manual

### INTRODUCTION

Thank you for choosing the PlayGo My Home Fun 3615 Breakfast for Two toy set. This set is designed to provide an engaging and imaginative play experience for children. Please read this manual carefully before use to ensure proper setup, operation, and maintenance of the toy set. Keep this manual for future reference.

### IMPORTANT SAFETY INFORMATION

- **Recommended Age:** This toy set is suitable for children aged 3 years and up.
- **Adult Supervision:** Adult supervision is recommended during play, especially for younger children.
- **Small Parts:** The set contains small parts which may pose a choking hazard for children under 3 years.
- **Battery Safety:** The kettle requires 2 AA batteries (not included). Ensure batteries are inserted with correct polarity (+/-). Do not mix old and new batteries, or different types of batteries. Remove exhausted batteries promptly. Do not recharge non-rechargeable batteries.
- **Material:** All components are made of plastic. Do not expose to extreme heat or open flames.
- **Cleaning:** Clean the toy set with a damp cloth only. Do not immerse electronic components (kettle) in water.

### PACKAGE CONTENTS

The PlayGo My Home Fun 3615 Breakfast for Two set includes approximately 20 pieces, designed for a complete pretend breakfast experience. Please verify all items are present upon unboxing:

- 1x Toy Toaster with Pop-up Function
- 1x Toy Kettle (battery-operated)
- 2x Toy Plates

- 2x Toy Cups
- 2x Sets of Toy Cutlery (forks, knives, spoons)
- Assorted Toy Breakfast Food Items (e.g., toast, pastries, etc.)

*Note: Specific food items may vary.*

## SETUP INSTRUCTIONS

1. **Unboxing:** Carefully remove all components from the packaging. Dispose of packaging materials responsibly.
2. **Battery Installation (Kettle):**
  - Locate the battery compartment on the underside of the toy kettle.
  - Using a small screwdriver (not included), open the battery compartment cover.
  - Insert 2 AA batteries (not included), ensuring correct polarity as indicated inside the compartment.
  - Replace the battery compartment cover and secure it with the screw.
3. **Assembly:** No complex assembly is required. The plates, cups, cutlery, and food items are ready for play.

## OPERATING INSTRUCTIONS

### Toy Toaster

- Place toy toast or other suitable play food items into the toaster slots.
- Press down the lever on the side of the toaster. The items will remain in the down position.
- After a short period, the toaster features a pop-up function, releasing the items from the slots.

### Toy Kettle

- Ensure batteries are correctly installed.
- Press the button or switch on the kettle (if present) to activate its battery-operated sounds, simulating boiling water.
- The kettle is designed for imaginative play and does not heat water.

### General Play

Encourage children to use their imagination to create various breakfast scenarios. The plates, cups, and cutlery are sized for small hands, promoting fine motor skills and role-playing.

## MAINTENANCE AND CARE

- **Cleaning:** Wipe all plastic parts with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Drying:** Ensure all parts are completely dry before storing.
- **Storage:** Store the toy set in a clean, dry place away from direct sunlight and extreme temperatures to prevent material degradation.

- **Battery Replacement:** If the kettle's sounds become faint or stop working, replace the AA batteries as described in the Setup section.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Toaster lever does not stay down or pop up.	Mechanism obstruction or damage.	Ensure no foreign objects are in the slots. If damaged, discontinue use.
Kettle sounds are not working.	Dead or incorrectly installed batteries.	Check battery polarity. Replace with fresh AA batteries.
Parts are dirty.	Normal play use.	Wipe with a damp cloth. Do not immerse electronic parts.

## SPECIFICATIONS

- **Model Number:** 3615
- **Brand:** PlayGo
- **Material:** Plastic
- **Number of Pieces:** Approximately 20
- **Recommended Age:** 3 years and up
- **Battery Requirements:** 2 x AA batteries (for kettle, not included)
- **Approximate Item Weight:** 1.47 pounds (0.67 kg)
- **Approximate Package Dimensions:** 18.98 x 15.12 x 4.09 inches (48.2 x 38.4 x 10.4 cm)

## WARRANTY AND SUPPORT

PlayGo products are manufactured to high-quality standards. For any questions, concerns, or issues regarding your PlayGo My Home Fun 3615 Breakfast for Two toy set, please contact the retailer where the product was purchased or refer to the official PlayGo website for customer support information. Please retain your proof of purchase for any warranty claims.