

## Timex Classic T2M429

# Timex T2M429 Watch User Manual

Model: Classic T2M429

## INTRODUCTION

This manual provides detailed instructions for the operation and care of your Timex T2M429 watch. Please read this manual thoroughly to ensure proper use and to maximize the lifespan of your timepiece.

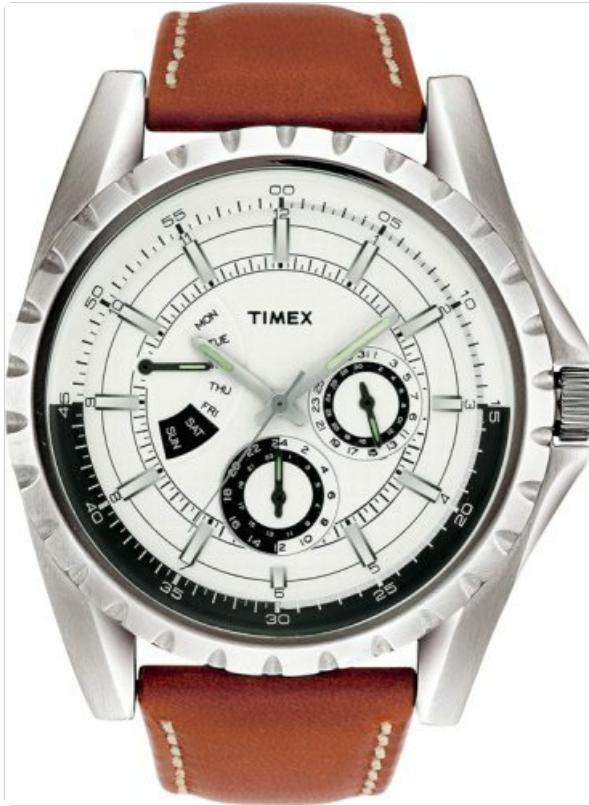


Image: Front view of the Timex T2M429 watch, showcasing its white dial, multiple sub-dials, and brown leather strap.

## KEY FEATURES

- Analog display for hours, minutes, and seconds.
- Date indicator.
- 24-hour display sub-dial.
- Day of the week retrograde display.
- Durable stainless steel case.

- Comfortable leather strap.
- Water resistance up to 5 ATM (50 meters).

## SETUP AND INITIAL ADJUSTMENT

---

### Setting the Time

1. Pull the crown (located on the right side of the watch case) out to position 2.
2. Turn the crown clockwise or counter-clockwise to set the hour and minute hands to the correct time. Ensure the 24-hour sub-dial also aligns correctly (e.g., if it's 3 PM, the 24-hour sub-dial should point to 15).
3. Push the crown back in to position 1 to start the watch.

### Setting the Date

1. Pull the crown out to position 1 (first click).
2. Turn the crown clockwise to advance the date.
3. Once the correct date is displayed, push the crown back in to secure the setting.
4. **Note:** Avoid setting the date between 9 PM and 3 AM, as this may interfere with the automatic date change mechanism.

### Setting the Day of the Week (Retrograde)

The day of the week retrograde display typically advances automatically with the time. If adjustment is needed, it is usually linked to the time setting mechanism. Advance the time through 24-hour cycles to change the day. For precise adjustment, consult a professional watchmaker if the day display is significantly off.

## OPERATING YOUR WATCH

---

### Timekeeping

Your Timex T2M429 watch is designed for accurate timekeeping. The main hands display hours, minutes, and seconds. The 24-hour sub-dial provides an AM/PM indication, crucial for setting the correct date change cycle.

### Date and Day Display

The date window displays the current day of the month. The retrograde sub-dial indicates the current day of the week. Both advance automatically at midnight, provided the time is set correctly.

### Water Resistance (5 ATM)

This watch is water resistant to 5 ATM (50 meters). This means it is suitable for everyday use and can withstand splashes, rain, and brief immersion in water. It is **not** suitable for swimming, diving, or showering, as prolonged exposure to water pressure or steam can damage the watch.

**Warning:** Do not operate the crown or pushers when the watch is wet or submerged.

## CARE AND MAINTENANCE

---

- **Cleaning:** Wipe the watch case and strap regularly with a soft, dry cloth. For the leather strap, avoid excessive moisture.
- **Avoid Extreme Temperatures:** Do not expose your watch to extreme temperatures (hot or cold) or sudden temperature changes, as this can affect its accuracy and lifespan.
- **Chemicals:** Avoid contact with solvents, detergents, perfumes, and cosmetics, as these can damage the case,

strap, or seals.

- Magnetic Fields:** Keep the watch away from strong magnetic fields (e.g., speakers, refrigerators, mobile phones), which can affect the movement's accuracy.
- Battery Replacement:** When the watch stops, the battery needs to be replaced. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and water resistance.
- Strap Care:** The leather strap may show signs of wear over time. Avoid prolonged exposure to direct sunlight or water to preserve its quality.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch stops or runs intermittently.	Low battery.	Replace the battery.
Date changes at noon instead of midnight.	AM/PM setting incorrect.	Advance the time by 12 hours.
Condensation inside the crystal.	Moisture ingress.	Seek professional service immediately to prevent damage.
Hands do not move smoothly.	Mechanical issue or dirt.	Consult a qualified watch technician.

## SPECIFICATIONS

<b>Model Number:</b>	Classic T2M429
<b>Brand:</b>	Timex
<b>Movement:</b>	Quartz
<b>Case Material:</b>	Stainless Steel
<b>Strap Material:</b>	Leather
<b>Water Resistance:</b>	5 ATM (50 meters)
<b>Functions:</b>	Hours, Minutes, Seconds, Date, 24-Hour Display, Day of Week Retrograde
<b>Product Dimensions:</b>	10 x 10 x 5 cm
<b>Product Weight:</b>	199.58 g

## WARRANTY AND SUPPORT

Information regarding specific warranty terms and conditions for your Timex T2M429 watch is not provided in this manual. Please refer to the warranty card included with your purchase or visit the official Timex website for detailed warranty information and customer support contacts.

For service or repairs, it is recommended to contact an authorized Timex service center to ensure genuine parts and qualified technicians.