

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [BLACK+DECKER](#) /

› [Black & Decker B2300 All-In-One Horizontal Deluxe Automatic Breadmaker for 2- to 3-Pound Loaves User Manual](#)

BLACK+DECKER B2300

Black & Decker B2300 All-In-One Horizontal Deluxe Automatic Breadmaker User Manual

Model: B2300

INTRODUCTION

The Black & Decker B2300 All-In-One Horizontal Deluxe Automatic Breadmaker is designed to simplify the bread-making process. Featuring built-in crust control, it ensures improved crust and bread texture. This appliance automatically manages proper temperature, kneading, and baking times, allowing you to enjoy freshly baked bread with minimal effort. It is capable of producing wonderfully flavorful loaves.



Figure 1: Black & Decker B2300 All-In-One Horizontal Deluxe Automatic Breadmaker.

SETUP AND FIRST USE

Before using your breadmaker for the first time, it is important to properly set it up and clean its components.

1. **Unpacking:** Carefully remove the breadmaker and all accessories from the packaging. Retain packaging for future storage or transport.
2. **Cleaning:** Wash the nonstick baking pan, kneading paddle, measuring cup, and spoon with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the breadmaker with a damp cloth.
3. **Placement:** Place the breadmaker on a stable, flat, heat-resistant surface, ensuring adequate ventilation around the unit. Do not place it near heat sources or in direct sunlight.
4. **Assembly:** Insert the kneading paddle onto the shaft inside the baking pan. Place the baking pan securely into the breadmaker's cavity.



Figure 2: Breadmaker with included nonstick baking pan, kneading paddle, measuring cup, and spoon.

OPERATING INSTRUCTIONS

The B2300 breadmaker features a user-friendly control panel with a digital display and 10 menu items, along with 3 crust shade options. It also includes a 13-hour delay timer and a 60-minute keep warm function.

Control Panel Overview



Figure 3: Close-up view of the breadmaker's control panel and digital display.

- **Digital Display:** Shows program selection, time remaining, and other relevant information.
- **Menu Button:** Cycles through the 10 available programs (e.g., Basic, Rapid-Bake, Sweet, Dough, French, Preserves).
- **Crust Color Button:** Selects desired crust shade (Light, Medium, Dark).
- **Loaf Size Button:** Adjusts for 2-pound or 3-pound loaves.
- **Delay Timer:** Allows you to set a delayed start time for up to 13 hours.
- **Start/Stop Button:** Initiates or cancels the selected program.

Baking Process

The breadmaker automates the kneading, rising, and baking cycles. Simply add ingredients according to your recipe, select the desired program, crust color, and loaf size, then press start. The machine will handle the rest, including a 60-minute keep warm cycle after baking is complete.



Figure 4: Example of loaves baked using the breadmaker.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and optimal performance of your breadmaker.

- **Cleaning the Baking Pan:** The nonstick baking pan is designed for easy cleaning. After each use, allow the pan to cool completely. Fill it with warm, soapy water and let it soak for a few minutes to loosen any residue. Gently clean with a soft sponge or cloth. Avoid abrasive cleaners or scouring pads that could damage the nonstick coating.
- **Cleaning the Kneading Paddle:** The kneading paddle can sometimes get stuck inside the baked loaf or have dough residue. Remove it from the pan and clean it thoroughly with warm, soapy water. If it's stuck in the loaf, allow the loaf to cool slightly, then carefully remove the paddle.
- **Exterior Cleaning:** Wipe the cool-touch housing with a damp cloth. Do not immerse the breadmaker's main unit in water.
- **Storage:** Ensure all parts are clean and dry before storing the breadmaker. Store in a cool, dry place.



Figure 5: The removable nonstick baking pan, designed for easy cleaning.

TROUBLESHOOTING

If you encounter issues with your Black & Decker B2300 breadmaker, refer to the common problems and solutions below.

Problem	Possible Cause	Solution
Loaf sticks to pan or kneading paddle is difficult to remove.	Dough baked onto the shaft; loaf not cooled sufficiently.	Allow loaf to cool for 10-15 minutes before attempting removal. Ensure the kneading paddle is clean before each use. If dough bakes onto the shaft, clean thoroughly after use.
Loaf rises too much and hits the lid.	Incorrect ingredient measurements, especially yeast or flour.	Ensure precise measurements of all ingredients. High humidity can also affect rise; adjust liquid slightly if needed.

Problem	Possible Cause	Solution
Machine does not start or program does not progress.	Not properly plugged in; program not selected; internal issue.	Check power connection. Ensure a program is selected and the Start button is pressed. If problem persists, contact customer support.
Motor labors or stops during kneading.	Dough is too heavy or dry; excessive loaf size selected.	Adjust liquid content slightly to ensure dough consistency is not too stiff. Ensure the selected loaf size matches the recipe.

SPECIFICATIONS

Feature	Detail
Model Number	B2300
Brand	BLACK+DECKER
Color	White
Capacity	2- to 3-Pound Loaves
Number of Programs	10
Product Dimensions	18.5 x 12.36 x 13.25 inches
Item Weight	14.83 pounds
Product Care Instructions	Wipe with Dry Cloth
UPC	050875530539

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the documentation included with your product or visit the official BLACK+DECKER website. Keep your purchase receipt as proof of purchase for any warranty claims.

For additional assistance, you may also contact the retailer where the product was purchased.

