

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [KODAK](#) /
- > [Kodak Easyshare C613 6.2 MP Digital Camera User Manual](#)

KODAK C613

Kodak Easyshare C613 6.2 MP Digital Camera User Manual

Model: C613

INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Kodak Easyshare C613 Digital Camera. The Kodak Easyshare C613 is a 6.2-megapixel digital camera featuring a 3x optical zoom lens, a 2.4-inch indoor/outdoor color LCD screen, and an on-camera Share Button for convenient picture transfer. It is designed for ease of use while capturing high-quality images.



This image displays the silver Kodak Easyshare C613 digital camera from a front-right angle. The lens is extended, showing the 'KODAK AF 3x Optical Aspheric Lens 36mm-108mm (Equivalent)' text. The camera features a built-in flash and the Kodak logo on the front.

SAFETY INFORMATION

- Do not expose the camera to water or moisture.
- Avoid dropping the camera or subjecting it to strong impacts.
- Use only recommended batteries and memory cards.
- Keep the camera away from extreme temperatures.
- Do not attempt to disassemble or repair the camera yourself. Refer to qualified service personnel.

PACKAGE CONTENTS

Verify that all items are present in your camera package:

- Kodak Easyshare C613 Digital Camera
- 2 AA Batteries (included)
- USB Cable
- Wrist Strap
- Software CD (may vary by region)
- Quick Start Guide (this manual provides detailed instructions)

SETUP

1. Battery Installation

1. Locate the battery compartment door on the bottom or side of the camera.
2. Slide the latch to open the compartment.
3. Insert two AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment door securely until it clicks into place.

2. Memory Card Installation

The camera supports SD/MMC memory cards. It also has 16 MB of internal memory.

1. Locate the memory card slot, usually near the battery compartment.
2. Insert the SD or MMC card with the label facing the correct direction (refer to the diagram near the slot).
3. Push the card gently until it clicks into place.
4. To remove, push the card in again until it springs out slightly, then pull it out.

3. Initial Power On

Press the **On/Off** button to power on the camera. The lens will extend, and the LCD screen will activate.

OPERATING

1. Basic Photography

- **Power On/Off:** Press the **On/Off** button.
- **Taking a Picture:** Frame your shot using the 2.4-inch LCD. Press the shutter button halfway to focus, then press it fully to capture the image.
- **Zoom:** Use the zoom lever (usually around the shutter button) to adjust the 3x optical zoom and 5x digital zoom.

2. Shooting Modes

The camera offers various shooting modes to optimize settings for different scenes. Use the mode dial or menu to select:

- **Auto Mode:** The camera automatically adjusts settings for general photography.
- **Scene Modes:** Specific modes like Portrait, Landscape, Night, Sport, etc., which pre-configure settings for optimal results in those conditions.

3. Flash Settings

The built-in flash can be adjusted:

- **Auto Flash:** The camera determines when to use the flash.
- **Fill Flash:** Forces the flash to fire, useful for brightening shadows.
- **Red-Eye Reduction:** Fires a pre-flash to reduce red-eye effect.
- **Flash Off:** Disables the flash.

4. Reviewing Photos

Press the **Review** button (often indicated by a play icon) to view captured images and videos on the LCD screen. Use the directional pad to navigate through your media.

5. Connecting to a Computer

To transfer photos and videos:

1. Ensure the camera is powered off.
2. Connect one end of the USB cable to the camera's USB port and the other end to your computer.
3. Power on the camera. Your computer should detect the camera as a removable storage device.
4. Follow the on-screen prompts or use the Kodak Easyshare software (if installed) to transfer files.

6. Using the Share Button

The dedicated Share Button simplifies sharing and printing. After taking a picture, press the Share Button to mark images for email, printing, or uploading to online services when connected to a computer with the Kodak Easyshare software.

MAINTENANCE

1. Cleaning the Camera

- Use a soft, lint-free cloth to clean the camera body.
- For the lens, use a lens brush or a specialized lens cleaning cloth and solution. Do not use abrasive materials.
- Clean the LCD screen gently with a soft, dry cloth.

2. Battery Care

- Remove batteries if the camera will not be used for an extended period.
- Use high-quality alkaline or rechargeable Ni-MH AA batteries for optimal performance.

3. Storage

Store the camera in a cool, dry place, away from direct sunlight and dust. Consider using a camera case for protection.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Camera does not power on.	Check battery installation and charge level. Replace or recharge batteries.
Pictures are blurry.	Ensure proper focus by pressing the shutter button halfway. Use a steady grip or tripod. Check for sufficient lighting.
Flash does not fire.	Check flash settings; ensure it's not set to 'Flash Off'.
Cannot transfer photos to computer.	Ensure USB cable is securely connected and camera is powered on. Try a different USB port. Install Kodak Easyshare software if necessary.
Memory card error.	Reinsert the memory card. Try a different, compatible memory card. Format the card (this will erase all data).

SPECIFICATIONS

Feature	Detail
Model Name	Kodak Easyshare C613
Photo Sensor Resolution	6.2 MP
Optical Zoom	3x
Digital Zoom	5x
Screen Size	2.4 Inches LCD
Internal Memory	16 MB
Memory Card Type	SD/MMC card
Battery Type	2 AA (Nickel Metal Hydride recommended)
Video Resolution	480p
Supported File Formats	JPEG, MPEG-4
Image Stabilization	Optical
Connectivity	Wired (USB)
Dimensions (approx.)	2.6 inches (height)

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or visit the official Kodak support website. For technical assistance or customer service, please contact Kodak customer support through their official channels.

Online resources may include:

- Kodak Support Website: www.kodak.com (Please note: URL is for general Kodak site and may not link

directly to C613 support.)