



Manuals.plus /

› Hama /

› Hama LCD Thermometer with Clock 075298 User Manual

## Hama 75298

# Hama LCD Thermometer with Clock 075298

Instruction Manual

## INTRODUCTION

---

This manual provides detailed instructions for the Hama LCD Thermometer with Clock, model 075298. This device is designed to display time, date, weekday, and indoor temperature. It also includes alarm, timer, music, and programmable birthday reminder functions. Please read this manual carefully before use to ensure proper operation and to maximize the product's lifespan.

## PRODUCT OVERVIEW

---



Figure 1: Hama LCD Thermometer with Clock 075298 in an office setting. The display shows 11:14, 4/28, FRI, and 24.1°C. Below the display are five control buttons.

The Hama LCD Thermometer with Clock features a clear digital display and intuitive controls. It is compact and designed for desktop use, providing essential information at a glance.

## SETUP

### 1. Battery Installation

1. Locate the battery compartment on the back of the device.
2. Open the battery compartment cover.
3. Insert two LR1130 button cells, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

**Note:** The device requires two LR1130 button cells for operation. Ensure batteries are inserted correctly to avoid damage.

## Control Buttons

The device features five control buttons located below the LCD display:

- **MODE:** Switches between display modes (Time, Alarm, Date, Timer).
- **ALARM:** Activates/deactivates the alarm.
- **SET:** Enters setting mode for time, date, alarm, etc.
- **DOWN (▼):** Decreases values during setting, switches temperature unit.
- **UP (▲):** Increases values during setting, activates music function.

## Setting Time and Date

1. Press the **MODE** button until the time display is active.
2. Press and hold the **SET** button until the hour digits begin to flash.
3. Use the **UP** or **DOWN** buttons to adjust the hour.
4. Press **SET** again to move to minutes, then use **UP** or **DOWN** to adjust.
5. Continue pressing **SET** to cycle through year, month, and day settings, adjusting each with **UP** or **DOWN**.
6. Press **SET** one last time to confirm all settings and exit setting mode.
7. To switch between 12-hour and 24-hour format, press the **UP** button while in time display mode (not setting mode).

## Setting the Alarm

1. Press the **MODE** button until the alarm time is displayed (indicated by an alarm icon).
2. Press and hold the **SET** button until the alarm hour digits flash.
3. Use the **UP** or **DOWN** buttons to set the desired alarm hour.
4. Press **SET** again to move to alarm minutes, then use **UP** or **DOWN** to adjust.
5. Press **SET** to confirm.
6. To activate or deactivate the alarm, press the **ALARM** button. An alarm icon will appear on the display when active.

## Snooze Function

When the alarm sounds, press any button (except **ALARM**) to activate the snooze function. The alarm will temporarily stop and sound again after approximately 5 minutes.

## Temperature Display

The device automatically displays the indoor temperature. To switch between Celsius (°C) and Fahrenheit (°F), press the **DOWN** button while in normal time display mode.

## Timer Function

1. Press the **MODE** button until the timer display is active.
2. Press and hold the **SET** button to enter timer setting mode.
3. Use **UP** or **DOWN** to set the desired countdown time (hours, minutes, seconds).
4. Press **SET** to confirm each segment.
5. Press **UP** to start the countdown. Press **UP** again to pause, and **DOWN** to reset.

## Music Function

The device features 7 different alarm sounds. To cycle through the available melodies, press the **UP** button while the alarm is sounding or when setting the alarm.

## Programmable Birthday Reminder

The device allows you to program one birthday reminder per day. To set a birthday reminder:

1. Press the **MODE** button until the birthday reminder display is active (usually indicated by a cake icon or similar).
2. Press and hold the **SET** button.
3. Use **UP** or **DOWN** to set the month and day for the birthday.
4. Press **SET** to confirm. The device will play a special melody on the set date.

## MAINTENANCE

---

### Cleaning

To clean the device, use a soft, dry cloth. Do not use abrasive cleaners or solvents, as these may damage the display or casing. For stubborn marks, a slightly damp cloth can be used, followed by a dry cloth.

### Battery Replacement

When the display becomes dim or the device functions erratically, it is time to replace the batteries. Follow the battery installation steps outlined in the Setup section. Dispose of old batteries responsibly according to local regulations.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Display is blank or dim.	Low or depleted batteries. Incorrect battery installation.	Replace batteries with new LR1130 button cells. Ensure correct polarity.
Incorrect time or date.	Time/date not set correctly after battery installation or power interruption.	Refer to the Setting Time and Date section to reset.
Alarm does not sound.	Alarm not activated. Alarm volume too low (if adjustable).	Ensure the alarm function is activated (alarm icon visible). Check alarm settings.
Temperature reading seems inaccurate.	Device exposed to direct sunlight, heat sources, or drafts.	Relocate the device to a stable indoor environment away from extreme temperature fluctuations. Allow time for the sensor to stabilize.

## SPECIFICATIONS

---

- **Model:** Hama LCD Thermometer with Clock 075298
- **Display Type:** Digital LCD
- **Functions:** Clock (12/24h), Calendar (Date, Weekday), Alarm, Snooze, Indoor Thermometer (°C/°F), Timer, Music Function (7 melodies), Programmable Birthday Reminder.
- **Temperature Measurement Range:** 0°C to +50°C (32°F to 122°F)
- **Power Source:** 2 x LR1130 Button Cells (included)

- **Dimensions (W x D x H):** 5.5 x 2.8 x 11.1 cm (approximately 2.17 x 1.10 x 4.37 inches)
- **Weight:** 100 g (approximately 3.53 oz)
- **Material:** Glass (outer material)
- **Color:** Silver

## WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the documentation provided with your purchase or contact Hama customer service. Contact details can typically be found on the official Hama website or on the product packaging.

