

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Conair](#) /
- › [Conair SU7 Soothing Sounds and Relaxation Clock Radio User Manual](#)

Conair SU7

Conair SU7 Soothing Sounds and Relaxation Clock Radio User Manual

INTRODUCTION

Thank you for purchasing the Conair SU7 Soothing Sounds and Relaxation Clock Radio. This device is designed to provide a calming environment with a selection of natural sounds, an AM/FM radio, and a dual alarm clock function. Please read this manual carefully to ensure proper use and maintenance.

Important Safety Instructions: Always follow basic safety precautions when using electrical appliances. Do not expose the unit to water or excessive moisture. Keep away from heat sources. Use only the provided AC adapter.



The Conair SU7 Soothing Sounds and Relaxation Clock Radio in a bedroom setting, providing a calming atmosphere.

PACKAGE CONTENTS

- Conair SU7 Soothing Sounds and Relaxation Clock Radio
- AC Power Adapter
- User Manual

PRODUCT OVERVIEW: CONTROLS AND DISPLAY

Familiarize yourself with the buttons and display of your Conair SU7 unit:



Top panel controls of the Conair SU7, including sound selection, snooze, and setting buttons.

- **SNOOZE Button:** Large button on top for temporary alarm silence.
- **POWER Button:** Turns the unit on/off for sounds or radio.
- **SET Button:** Used to enter time setting mode.
- **ALARM 1 / ALARM 2 Buttons:** Used to set and activate/deactivate individual alarms.
- **CONTRAST Button:** Adjusts the brightness of the display.
- **HOUR / MINUTE Buttons:** Adjusts time and alarm settings.
- **SLEEP Button:** Activates the sleep timer for sounds.
- **RADIO Button:** Activates the AM/FM radio.
- **Sound Therapy Buttons:** Individual buttons for 10 different soothing sounds (Tropical Forest, Thunderstorm, Summer Night, Ocean Waves, White Noise, Heartbeat, Songbirds, Waterfall, Running Stream, Rainfall).
- **Volume Dial:** Located on the side for adjusting sound and radio volume.
- **Tuning Dial:** Located on the side for selecting radio stations.



The digital display of the Conair SU7, showing time and function indicators.

The digital display shows the current time, AM/PM indicators, alarm status, and radio frequency when active.

SETUP

Power Connection

Connect the AC adapter to the DC 6V jack on the back of the unit and plug it into a standard wall outlet. For battery backup, insert 4 AA batteries (not included) into the battery compartment on the bottom of the unit. Batteries preserve time and alarm settings during power outages but do not power the unit for normal operation.

Initial Time Setting

1. Press and hold the **SET** button. The time display will flash.
2. Use the **HOUR** button to adjust the hour. Pay attention to the AM/PM indicator.
3. Use the **MINUTE** button to adjust the minutes.
4. Release the **SET** button to save the time.

OPERATING INSTRUCTIONS

Setting the Time

1. Press and hold the **SET** button. The time display will flash.
2. Press the **HOUR** button repeatedly to adjust the hour. Observe the AM/PM indicator for correct time setting.
3. Press the **MINUTE** button repeatedly to adjust the minutes.
4. Release the **SET** button to save the current time.

Setting Alarms (Alarm 1 & Alarm 2)

1. Press and hold the **ALARM 1** button. The alarm time will flash.
2. Use the **HOUR** and **MINUTE** buttons to set the desired alarm time.
3. Press **ALARM 1** again to cycle through alarm source options: Sound, Radio, or Buzzer. The

corresponding indicator will light up.

4. Release the **ALARM 1** button to save the setting.
5. Repeat steps 1-4 for **ALARM 2** using the **ALARM 2** button.

Activating/Deactivating Alarms

Press the **ALARM 1** or **ALARM 2** button briefly to toggle the alarm on or off. An indicator light on the display will show when an alarm is active.

Soothing Sounds

1. Press any of the dedicated sound therapy buttons (e.g., **OCEAN WAVES**, **RAINFOREST**) to start playing a sound.
2. Adjust the volume using the volume dial located on the side of the unit.
3. To turn off the sound, press the **POWER** button.

The unit features 10 soothing sounds: Ocean waves, Heartbeat, Summer night, Rain forest, Rainfall, Running stream, Songbirds, White noise, Tropical forest, and Thunderstorm.

Sleep Timer

While a soothing sound is playing, press the **SLEEP** button repeatedly to cycle through available sleep timer durations (e.g., 15, 30, 60 minutes, or OFF). The selected sound will automatically turn off after the chosen duration.

AM/FM Radio

1. Press the **RADIO** button to turn on the AM/FM radio.
2. Use the tuning dial on the side of the unit to select your desired station.
3. Adjust the volume using the volume dial.

Snooze Function

When an alarm sounds, press the large **SNOOZE** button on the top of the unit to temporarily silence the alarm for approximately 9 minutes. The alarm will sound again after this period.

Display Contrast

Press the **CONTRAST** button to adjust the brightness level of the digital display to your preference.

MAINTENANCE

Cleaning

Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these may damage the surface.

Battery Replacement

If the battery backup indicator appears on the display, or if time and alarm settings are lost during a power outage, it is time to replace the backup batteries. Open the battery compartment on the bottom of the unit and insert 4 new AA batteries (not included), ensuring correct polarity.

TROUBLESHOOTING

No Power

Ensure the AC adapter is securely plugged into the DC 6V jack on the back of the unit and into a working wall outlet. Check if the outlet itself is functional. For battery backup, ensure batteries are correctly installed and not depleted.

Alarm Not Sounding

Verify that the alarm (Alarm 1 or Alarm 2) is activated; its indicator light should be on. Check that the alarm time is set correctly and that the alarm volume is not set to minimum.

Display Too Bright/Dim

Use the **CONTRAST** button to adjust the brightness level of the display to your preference.

Poor Radio Reception

Adjust the unit's position to improve reception. If there is an external antenna wire, try extending or repositioning it.

Soothing Sound Loops Are Repetitive

The soothing sounds are designed with continuous loops. If you find a particular sound's loop noticeable, try selecting a different sound from the 10 available options.

SPECIFICATIONS

Model:	SU7
Brand:	Conair
Power Source:	AC Adapter (included), 4 AA batteries (not included) for backup
Display Type:	Digital
Special Features:	Alarm, Radio, 10 Soothing Sounds, Dual Alarm, Snooze, Sleep Timer
Product Dimensions:	Approximately 5"W x 2"H (main unit); 1 Pound (weight)
Sounds Included:	Ocean waves, Heartbeat, Summer night, Rain forest, Rainfall, Running stream, Songbirds, White noise, Tropical forest, Thunderstorm

WARRANTY AND SUPPORT

For detailed warranty information, product registration, or technical support, please refer to the documentation included in your product packaging. You may also visit the official Conair website for further assistance and contact information.