

[Manuals.plus](#) /

› [ROLLY TOYS](#) /

› ROLLY TOYS Schneider rollyKid Steyr 01 251 0 Tractor with Roll-Over Bar and Trailer User Manual

ROLLY TOYS 01 251 0

ROLLY TOYS Schneider rollyKid Steyr 01 251 0 Tractor with Roll-Over Bar and Trailer User Manual

INTRODUCTION

This manual provides essential information for the safe assembly, operation, and maintenance of your ROLLY TOYS Schneider rollyKid Steyr 01 251 0 Tractor with Roll-Over Bar and Trailer. Please read these instructions carefully before use and retain them for future reference.



Image: The ROLLY TOYS Schneider rollyKid Steyr 01 251 0 Tractor in metallic silver with its attached red trailer, viewed from the front-left angle.

SAFETY INFORMATION

Important: Adult supervision is required at all times. This product is designed for children aged 30 months and up. Ensure

all components are securely fastened before use.

- Do not use near roads, motor vehicles, steep inclines, or swimming pools.
- Only one rider at a time.
- Wear appropriate footwear.
- Regularly check for loose parts or damage.

SETUP AND ASSEMBLY

The ROLLY TOYS rollyKid Steyr Tractor and Trailer require assembly. Follow these general steps. Refer to the included diagrammatic instructions for detailed component identification and fastening.

1. **Unpack Components:** Carefully remove all parts from the packaging. Verify all components are present against the parts list (not provided in this manual, refer to original packaging).
2. **Assemble Tractor Chassis:** Attach the front axle and steering column to the main tractor body. Secure with provided fasteners.
3. **Install Wheels:** Mount the wheels onto the axles, ensuring they are properly aligned and secured with retaining caps or pins.
4. **Attach Pedals and Drive Chain:** Connect the pedal mechanism to the drive chain and rear axle. Ensure smooth operation.
5. **Mount Seat and Roll-Over Bar:** Secure the seat and the roll-over bar to the tractor chassis.
6. **Assemble Trailer:** Construct the trailer body and attach its wheels.
7. **Attach Trailer to Tractor:** Connect the trailer to the tractor using the provided hitch mechanism. Ensure the hitch pin is fully inserted and secured.



Image: A close-up view of the black hitch mechanism connecting the red tractor body to the red trailer, showing the securing pin.

OPERATING INSTRUCTIONS

The rolyKid Steyr Tractor is pedal-powered, designed for intuitive use by young children.

- **Riding:** The child sits on the seat and uses the pedals to propel the tractor forward or backward. The steering wheel controls direction.
- **Trailer Use:** The attached trailer can be used to transport lightweight items. Do not overload the trailer.
- **Steering:** The steering wheel operates the front wheels. Teach the child to steer gradually to avoid sudden turns.



Image: A detailed view of the black steering wheel and pedal area of the tractor, showing the dashboard details and foot pedal.



Image: Rear-right view of the ROLLY TOYS tractor, highlighting the red seat, white roll-over bar, and the attached red trailer.

MAINTENANCE

- **Cleaning:** Wipe down the tractor and trailer with a damp cloth. Avoid harsh chemicals.
- **Lubrication:** Periodically check and lubricate moving parts such as the pedal mechanism and chain drive with a suitable, child-safe lubricant.
- **Storage:** Store the product in a dry, sheltered area away from direct sunlight and extreme temperatures to prevent material degradation.
- **Inspection:** Regularly inspect all nuts, bolts, and fasteners to ensure they are tight. Check for any signs of wear or damage to the wheels, pedals, steering, and trailer hitch.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Pedals are stiff or not moving	Chain is too tight/loose, or needs lubrication. Debris in mechanism.	Adjust chain tension. Clean and lubricate pedal and chain mechanism.
Steering is loose or unresponsive	Loose steering column or front axle connection.	Check and tighten all fasteners related to the steering mechanism and front axle.
Trailer detaches easily	Hitch pin not fully inserted or damaged.	Ensure hitch pin is securely in place. Inspect hitch for damage and replace if necessary.

SPECIFICATIONS

- **Model Number:** 01 251 0
- **Brand:** ROLLY TOYS
- **Product Dimensions:** 17.72 x 16.73 x 32.09 inches (45 x 42.5 x 81.5 cm)
- **Item Weight:** 20.7 pounds (9.4 kg)
- **Recommended Age:** 30 months and up
- **Color:** Metallic silver (tractor), Red (trailer)



Image: A side profile of the tractor next to a human figure, illustrating its approximate size. The tractor is approximately 20 inches (49 cm) tall.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact ROLLY TOYS customer service directly. Contact details are typically available on the manufacturer's official website or product packaging.



© 2025 ROLLY TOYS. All rights reserved.

This manual is for informational purposes only. ROLLY TOYS is not responsible for any damages or injuries resulting from improper assembly or use.