

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Remington](#) /

› [Remington MB320C Beard Trimmer 'Barba' Instruction Manual](#)

Remington MB320NA

Remington MB320C Beard Trimmer 'Barba' Instruction Manual

Brand: Remington | Model: MB320NA

OVERVIEW

The Remington Barba Beard Trimmer delivers a professional finish with its advanced ceramic coated blades for a strong cutting performance. An adjustable comb with 9 length settings offers versatile styling, while the pop-up trimmer ensures precision detailing. With up to 40 minutes of cordless usage, it's the perfect tool for when you're on the go.

PRODUCT FEATURES

- ADVANCED CERAMIC COATED BLADES:** Engineered for strength and durability, the high-performance blades deliver a professional finish and long-lasting cutting precision with every trim.
- 9 LENGTH SETTINGS:** The adjustable comb and dial wheel let you choose from 9 precise length settings, perfect for everything from short stubble to a fuller beard.
- USAGE TIME:** Enjoy up to 40 minutes of cordless use for flexible grooming at home or on the go—no cords, no hassle. Charging adaptor included.
- POP-UP TRIMMER:** Shape sideburns, define edges, and tidy up hard-to-reach areas with the built-in pop-up trimmer for a clean, polished look.
- EASY MAINTENANCE AND SMART FEATURES:** Washable blades for quick cleaning, LED indicators for battery status, and an easy-view window to track your length setting—all designed for effortless grooming.

SETUP

Charging the Device

Ensure the device is fully charged before first use. The LED indicator will show the battery status. A full charge provides up to 40 minutes of cordless usage.



Image: Remington MB320C Beard Trimmer on a wooden table with grooming accessories.

Power On/Off

To power on the trimmer, slide the power button upwards. To power off, slide the button downwards.

Adjusting Trimming Comb

The adjustable comb and dial wheel allow you to select from 9 precise length settings. Turn the zoom wheel to choose your desired length, ranging from 1.5 mm to 18 mm. An easy-view window helps track your selected length setting.



Image: Hands holding the Remington MB320C Beard Trimmer, showing the adjustable comb dial.

Video: A tutorial demonstrating how to charge, power on/off, and adjust the trimming comb on a beard trimmer. This video is provided by Manscaped.

OPERATING INSTRUCTIONS

How to Trim Your Beard

For a comfortable and even trim, place the flat side of the trimming head against your skin. Move the trimmer slowly against the direction of hair growth. Make multiple passes if necessary to achieve your desired beard length and style.



Image: Man trimming his beard with the Remington MB320C Beard Trimmer.

Contouring and Detailing

For precise contouring and detailing, remove the trimming comb. Hold the trimmer perpendicular to the skin and use gentle pressure to define edges, shape sideburns, and tidy up the neckline. The built-in pop-up trimmer can be activated for extra precision in hard-to-reach areas.



Image: Hands demonstrating the pop-up trimmer feature on the Remington MB320C Beard Trimmer.

Video: A tutorial demonstrating how to trim and contour a beard using a trimmer. This video is provided by Manscaped.

MAINTENANCE AND CLEANING

Cleaning the Trimmer

After each use, ensure the trimmer is powered off. Remove the trimming comb. The blades are washable and can be rinsed under running water for quick and hygienic cleaning. Allow all parts to air dry completely before reassembling or storing.



Image: Hands removing the trimming comb from the Remington MB320C Beard Trimmer for cleaning.

Removing and Reinstalling Blades

To remove the blade for thorough cleaning, press against the top of the blade and push forward until it snaps out. Rinse the blade and other removable parts under the faucet. Let them air dry completely. To reinstall, align the blade into the device and press it firmly into place until you hear a click.



Image: Remington MB320C Beard Trimmer with comb and cleaning brush.

Video: A tutorial demonstrating how to remove the comb, rinse the trimmer, remove and reinstall the blade for cleaning. This video is provided by Manscaped.

TROUBLESHOOTING

If the trimmer is not turning on, ensure it is fully charged. If the trimming performance is reduced, clean the blades and ensure no hair is obstructing the cutting mechanism. If issues persist, refer to the warranty information or contact customer support.

PRODUCT SPECIFICATIONS

Brand	Remington
Model Number	MB320NA
Power Source	Battery Powered

Usage Time	Up to 40 minutes cordless
Blades	Advanced Ceramic Coated
Length Settings	9 (1.5mm to 18mm)
Item Weight	152 Grams
Product Dimensions	4.92 x 3.15 x 8.27 inches
Batteries	1 AA batteries required (included)
UPC	074590552614

SAFETY INFORMATION

Avoid contact with eyes, skin, and water. Keep away from heat sources. Unplug and allow to cool before cleaning. Do not use on infants or children. Follow recommended cleaning and maintenance procedures. Always unplug before changing blades or attachments. Do not use if cord is damaged. Always use in accordance with the instructions provided.

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the documentation included in your product packaging or visit the official Remington website.