

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Rival](#) /

› [Rival 2 Qt Crock Pot Slow Cooker Instruction Manual](#)

Rival 3122CHNP

Rival 2 Qt Crock Pot Slow Cooker Instruction Manual

MODEL: 3122CHNP

Brand: Rival

Introduction

This manual provides essential instructions for the safe and efficient use of your Rival 2 Qt Crock Pot Slow Cooker, model 3122CHNP. Please read all instructions carefully before operating the appliance and retain this manual for future reference.



Front view of the Rival 2 Qt Crock Pot Slow Cooker, featuring a white exterior, a clear glass lid, and a decorative band with chili pepper motifs. The control knob is visible at the front.

Important Safeguards

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or heating unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off

parts.

- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to "OFF", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

Setup

1. **Unpack:** Carefully remove all packaging materials and any promotional labels from the slow cooker.
2. **Initial Cleaning:** Before first use, wash the glass lid with warm, soapy water. Rinse thoroughly and dry. The interior stoneware pot, which is *not removable*, should also be cleaned with warm, soapy water and a non-abrasive sponge. Rinse carefully, avoiding contact with electrical components, and dry completely. The exterior heating unit can be wiped with a damp cloth.
3. **Placement:** Place the slow cooker on a flat, stable, heat-resistant surface, away from walls or cabinets to allow for proper ventilation. Ensure the power cord is not obstructed or near water.

Operating Instructions

The Rival 2 Qt Crock Pot Slow Cooker is designed for simple, single-setting operation, ideal for smaller meals, dips, or keeping food warm.

1. **Prepare Food:** Place your ingredients into the stoneware pot.
2. **Secure Lid:** Place the glass lid securely on top of the stoneware pot.
3. **Connect Power:** Plug the slow cooker into a standard 220-volt electrical outlet.
4. **Turn On:** Rotate the control knob to the "ON" position. This model operates at a single, consistent heat setting. There are no separate "LOW" or "HIGH" settings.
5. **Cooking:** Allow food to cook for the recommended time. Due to the single heat setting, it is advisable to monitor cooking progress, especially when adapting recipes designed for multi-setting slow cookers.
6. **Serving:** Once cooking is complete, carefully remove the lid using oven mitts to avoid steam burns. Serve food directly from the stoneware pot.
7. **Turn Off:** Rotate the control knob to the "OFF" position and unplug the appliance from the wall outlet.

Important Note: This slow cooker features a non-removable stoneware pot. For easier cleaning and to protect the stoneware, consider using slow cooker liners, especially for sticky or hard-to-clean recipes.

Maintenance and Cleaning

- **Always unplug** the slow cooker and allow it to cool completely before cleaning.
- **Stoneware Pot:** The stoneware pot is *not removable* from the heating unit. Clean it with warm, soapy water and a non-abrasive sponge or cloth. Rinse thoroughly, being careful not to get water into the

electrical components. Dry completely before storage. *Do not immerse the entire unit in water.*

- **Glass Lid:** The glass lid is removable and can be washed by hand with warm, soapy water or placed in the dishwasher.
- **Exterior:** Wipe the exterior of the heating unit with a damp cloth. Do not use harsh abrasive cleaners or scouring pads, as they may damage the finish.
- **Storage:** Store the slow cooker with the lid in place in a dry, safe location.

Troubleshooting

- **Appliance does not turn on:**
 - Ensure the power cord is securely plugged into a functional 220-volt outlet.
 - Check if the control knob is set to the "ON" position.
- **Food cooks too fast or burns:**
 - This model operates at a single heat setting, which may cook faster than some multi-setting slow cookers. Adjust cooking times accordingly.
 - Consider using slow cooker liners to prevent food from sticking and burning to the bottom of the pot.
 - Ensure sufficient liquid is present in your recipe to prevent drying out.
- **Food is not cooking thoroughly:**
 - Ensure the lid is properly seated to retain heat.
 - Avoid frequently lifting the lid, as this releases heat and extends cooking time.

Specifications

Brand	Rival
Model Number	3122CHNP
Capacity	2 Quarts
Material	Stoneware
Voltage	220 Volts
Control Method	Touch (Knob)
Product Dimensions	9.6 x 7.4 x 9.8 inches
Item Weight	4.55 pounds
UPC	048894556067
Dishwasher Safe	Yes (Lid only)

