

Hasbro 77182100

Hasbro FurReal Friends 77182100 Parrot Instruction Manual

Your guide to setting up, operating, and maintaining your interactive electronic pet.

1. INTRODUCTION

Welcome to the world of FurReal Friends! Your new Hasbro FurReal Friends 77182100 Parrot is an interactive electronic pet designed to provide companionship and engaging play. This manual will guide you through the setup, operation, and care of your parrot to ensure a delightful experience.

2. SAFETY INFORMATION

Please read all safety warnings before using this product. Keep these instructions for future reference.

- **WARNING:** Not suitable for children under 36 months due to small parts. Choking hazard.
- Recommended age for use is 6 years and older.
- Before giving the toy to a child, remove all tags, fasteners, and packaging materials.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Insert batteries with correct polarity (+ and -).
- Remove exhausted batteries promptly.
- Do not short-circuit the battery terminals.
- Remove batteries if the toy is not used for a long period.

3. PACKAGE CONTENTS

Ensure all items are present in the package:

- 1 x Hasbro FurReal Friends 77182100 Parrot electronic pet
- Instruction Manual (this document)

4. SETUP

4.1 Battery Installation

Your FurReal Friends Parrot requires 6 AAA batteries (not included) for operation. These batteries are typically of type LR03.

1. Locate the battery compartment on the underside of the parrot.
2. Using a Phillips head screwdriver (not included), unscrew the battery compartment cover.
3. Insert 6 AAA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.



Figure 4.1: The Hasbro FurReal Friends 77182100 Parrot, a plush electronic toy with blue and yellow feathers, standing on a brown perch. This image shows the overall appearance of the interactive parrot.

4.2 Powering On

Once batteries are installed, locate the ON/OFF switch, usually near the battery compartment or on the parrot's body. Slide the switch to the "ON" position to activate your parrot.

5. OPERATING YOUR PARROT

Your FurReal Friends Parrot is designed to be highly interactive and responsive to touch. Here's how to engage with your new pet:

- **Touch Response:** The parrot reacts to touch and enjoys being petted. Gently stroke its back or head to elicit responses.
- **Interactive Movements:** When petted, the parrot may stretch forward, make pleasant cooing sounds, tilt its head, or seek more attention.
- **Affectionate Gestures:** In a particularly good mood, your parrot may even make sounds resembling a kiss, indicating its affection.
- **Exploration:** Experiment with different types of touch and interaction to discover all the unique reactions and sounds your parrot can make.

6. MAINTENANCE

6.1 Cleaning

To keep your FurReal Friends Parrot clean, gently wipe its surface with a soft, damp cloth. Do not immerse the toy in water or use harsh cleaning agents, as this may damage the electronic components.

6.2 Battery Replacement

When the parrot's responses become weak or inconsistent, it's time to replace the batteries. Follow the battery installation steps in Section 4.1.

6.3 Storage

Store the parrot in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, remove the batteries to prevent leakage.

7. TROUBLESHOOTING

If your FurReal Friends Parrot is not functioning as expected, refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Parrot does not respond or turn on.	Batteries are low, incorrectly installed, or missing.	Check battery polarity. Replace with fresh batteries. Ensure the ON/OFF switch is in the "ON" position.
Responses are weak or inconsistent.	Batteries are running low.	Replace all batteries with new ones.
Parrot makes unexpected sounds or movements.	Temporary electronic glitch.	Turn the parrot OFF, wait a few seconds, then turn it back ON. If the issue persists, replace batteries.

8. SPECIFICATIONS

Feature	Detail
Model Number	77182100

Feature	Detail
Brand	Hasbro
Product Dimensions (L x W x H)	40.8 x 27.8 x 24.1 cm
Product Weight	1.76 kg
Material Type	Plush
Battery Requirements	6 x AAA batteries (not included)
Recommended Age	6 years and older

9. WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support, please contact Hasbro customer service directly. Contact details can typically be found on the product packaging or on the official Hasbro website. You can visit the official Hasbro website for more information:www.hasbro.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

