

[Manuals.plus](#) /

› [Weighmax](#) /

› Weighmax 2810-2KG Electronic Kitchen Scale User Manual

## Weighmax 2810-2KG

# Weighmax 2810-2KG Electronic Kitchen Scale User Manual

Brand: Weighmax | Model: 2810-2KG

## INTRODUCTION

The Weighmax 2810-2KG Electronic Kitchen Scale is designed for precise measurement of ingredients. It offers accurate readings up to 2000 grams (5 pounds) with 1 gram (0.1 ounce) increments, making it suitable for various culinary tasks. This manual provides essential information for setting up, operating, and maintaining your scale.

## PACKAGE CONTENTS

- Weighmax 2810-2KG Digital Scale
- Removable Bowl
- User Manual
- 2 AA Batteries

## SETUP

### Battery Installation

1. Locate the battery compartment on the underside of the scale.
2. Open the battery compartment cover.
3. Insert the 2 AA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

### Placing the Bowl

Place the removable bowl securely onto the weighing platform of the scale. The scale is designed to function with or without the bowl. If using the Tare function, place the bowl on the scale before powering on or taring.



Image: Weighmax 2810-2KG Electronic Kitchen Scale with its removable clear bowl in place.

## OPERATING INSTRUCTIONS

### Power On/Off

- To power on the scale, press the **ON/OFF** button. The display will show '8888' and then '0'.
- To power off the scale, press and hold the **ON/OFF** button for a few seconds until the display turns off. The scale also features an automatic shut-off function to conserve battery life.

### Changing Units

Press the **MODE** button to cycle through the available measurement units: grams (g), pounds (lb), and ounces (oz).

### Tare Function

The Tare function allows you to subtract the weight of a container, ensuring only the weight of the ingredients is measured.

1. Place an empty container (e.g., the removable bowl or your own dish) on the scale.
2. Press the **TARE** button. The display will reset to '0'.

3. Add your ingredients to the container. The display will show only the net weight of the ingredients.

## CARE AND MAINTENANCE

### Cleaning

- Wipe the scale body with a soft, damp cloth. Do not immerse the scale in water or use abrasive cleaners.
- The removable bowl can be washed with warm, soapy water or placed in the dishwasher for easy cleaning.

### Storage

Store the scale in a cool, dry place. The removable bowl can be inverted and placed over the scale for compact storage, protecting the weighing platform.



Image: Side view of the scale, illustrating its compact design and dimensions (7.2 x 7.2 x 4 inches).

## TROUBLESHOOTING

### Common Issues and Solutions

- **Display shows 'Lo' or 'Err':** This usually indicates low battery. Replace the batteries with new ones.
- **Inaccurate readings:** Ensure the scale is placed on a flat, stable surface. Avoid placing it near strong electromagnetic fields or vibrations. Recalibrate if necessary (refer to specific calibration instructions if provided in a separate document or on the device).
- **Scale does not turn on:** Check battery installation and ensure batteries are not depleted.

## SPECIFICATIONS

Feature	Detail
Model Number	2810-2KG

Maximum Weight Capacity	2000g / 5lb
Measurement Sensitivity	1 gram or 0.1oz
Display Type	Back-Lit LCD
Measuring Units	Pounds / Ounces, Grams
Power Source	2 AA Batteries (included)
Product Dimensions	7.2 x 7.2 x 4 inches
Item Weight	1.45 Pounds

## **WARRANTY AND SUPPORT**

For warranty information or technical support, please refer to the contact details provided on the product packaging or the official Weighmax website. Keep your purchase receipt as proof of purchase for any warranty claims.