

Aiwa XP 205

Aiwa XP 205 Portable CD Player User Manual

Model: XP 205

IMPORTANT SAFETY INSTRUCTIONS

Please read and understand all safety instructions before using this product. Keep this manual for future reference.

- Do not expose the device to rain, moisture, or extreme temperatures.
- Avoid placing the device near heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not open the casing. There are no user-serviceable parts inside. Refer all servicing to qualified service personnel.
- Use only attachments/accessories specified by the manufacturer.
- Clean only with a dry cloth.
- Dispose of batteries properly, following local regulations.

PRODUCT OVERVIEW

The Aiwa XP 205 is a portable CD player designed for on-the-go audio enjoyment. It supports standard audio CDs and MP3 CD-R/RW discs, offering a compact and reliable music playback solution.



Figure 1: Front view of the Aiwa XP 205 Portable CD Player, showing the CD lid, control buttons, and display.

PACKAGE CONTENTS

Verify that all items are present in the package:

- Aiwa XP 205 Portable CD Player
- AC Power Adapter (if included)
- Stereo Headphones (if included)
- User Manual (this document)

SETUP

1. Powering the Device

Battery Installation (Not specified, general instruction)

Locate the battery compartment on the underside of the player. Insert the required batteries (e.g., 2 x AA batteries, not included) according to the polarity indicators (+/-). Close the battery compartment cover securely.

AC Power Connection

Insert the small plug of the AC power adapter into the DC IN 4.5V jack on the side of the CD player. Plug the other end of the adapter into a standard wall outlet. The player will automatically switch to AC power when connected.

2. Connecting Headphones

Plug your stereo headphones into the **PHONES** jack (3.5mm) on the side of the CD player. Ensure the plug is fully inserted for proper audio output.

OPERATING INSTRUCTIONS

1. Loading a CD

1. Gently slide the **OPEN** switch or press the **OPEN** button to open the CD compartment lid.
2. Place a CD with the label side facing up onto the center spindle. Ensure the CD is seated correctly.
3. Close the CD compartment lid firmly until it clicks into place.

2. Basic Playback Controls

- **PLAY/PAUSE** (▶/||): Press to start playback. Press again to pause. Press a third time to resume.
- **STOP** (■): Press to stop playback.
- **SKIP FORWARD** (▶▶): Press once to skip to the next track. Press and hold to fast-forward within a track.
- **SKIP BACKWARD** (◀◀): Press once to skip to the beginning of the current track. Press twice to skip to the previous track. Press and hold to fast-rewind within a track.
- **VOLUME** (+/-): Adjust the volume level using the dedicated volume control dial or buttons.

3. MP3 Playback

The Aiwa XP 205 supports MP3 audio files on CD-R/RW discs. When an MP3 disc is inserted, the player will automatically detect the format. Navigation through folders and tracks may vary depending on the disc's structure. Refer to the display for folder and track numbers.

MAINTENANCE

1. Cleaning the CD Player

- Wipe the exterior of the player with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- To clean the lens, use a commercially available CD lens cleaner disc. Do not touch the lens directly.

2. Battery Care

- Remove batteries if the player will not be used for an extended period to prevent leakage.
- Do not mix old and new batteries, or different types of batteries.

3. Storage

Store the player in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Player does not turn on.	No power / Dead batteries / AC adapter not connected.	Check battery installation or replace batteries. Ensure AC adapter is securely connected to player and outlet.
No sound.	Headphones not connected / Volume too low / Faulty headphones.	Ensure headphones are fully plugged in. Increase volume. Test with different headphones.
CD skips or stops.	Dirty or scratched CD / Player moved excessively / Dirty lens.	Clean CD. Avoid strong vibrations during playback. Use a CD lens cleaner.
MP3 disc not playing.	Disc not properly formatted / Corrupt files.	Ensure MP3 files are correctly encoded and the disc is finalized. Try a different MP3 disc.

SPECIFICATIONS

Feature	Specification
Model	XP 205
Brand	Aiwa
Special Feature	Portable
Number of Discs	1
Supported Audio Format	MP3
Number of Channels	2
Compatible Devices	Speaker (via headphone out)
MP3 Player Included	Yes
Global Trade Item Number (GTIN)	04905524085587
Width	130 mm
Integrated Radio	No
CD Player/Recorder	CD Player
Digital Audio Broadcasting (DAB)	No
Multi-CD Player	No
Shockproof	No

Feature	Specification
Super Audio CD Playback	No

WARRANTY AND SUPPORT

This product is covered by a standard manufacturer's warranty. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or contact Aiwa customer support. Keep your proof of purchase for warranty claims.

For technical assistance or further inquiries, please visit the official Aiwa website or contact their customer service department.