

Kidde 001170

Kidde AccessPoint 001170 KeySafe Slimline Push Button Combination Key Lock Box User Manual

Model: 001170

Brand: Kidde

1. INTRODUCTION

This manual provides instructions for the Kidde AccessPoint 001170 KeySafe Original Slimline Push Button Combination Permanent Key Lock Box. This compact and durable lock box is designed for secure storage of up to two keys, offering convenient keyless access through a customizable push-button combination. It is suitable for both indoor and outdoor use, providing a reliable solution for spare key management.

2. PRODUCT OVERVIEW

The Kidde AccessPoint KeySafe features a robust design with a push-button keypad for setting and entering a combination. The unit is designed for permanent wall-mount installation and includes all necessary hardware. Its interlocking faceplate enhances security by deterring tampering.



Image 1: Front view of the Kidde AccessPoint 001170 KeySafe lock box, showing the push-button keypad and the 'OPEN' and 'CLEAR' buttons. The lock box is titanium gray.

3. SETUP AND INSTALLATION

3.1 Mounting the KeySafe

The KeySafe is designed for permanent wall-mount installation. Mounting hardware is included with the product. Choose a secure and discreet location for installation, either indoors or outdoors.



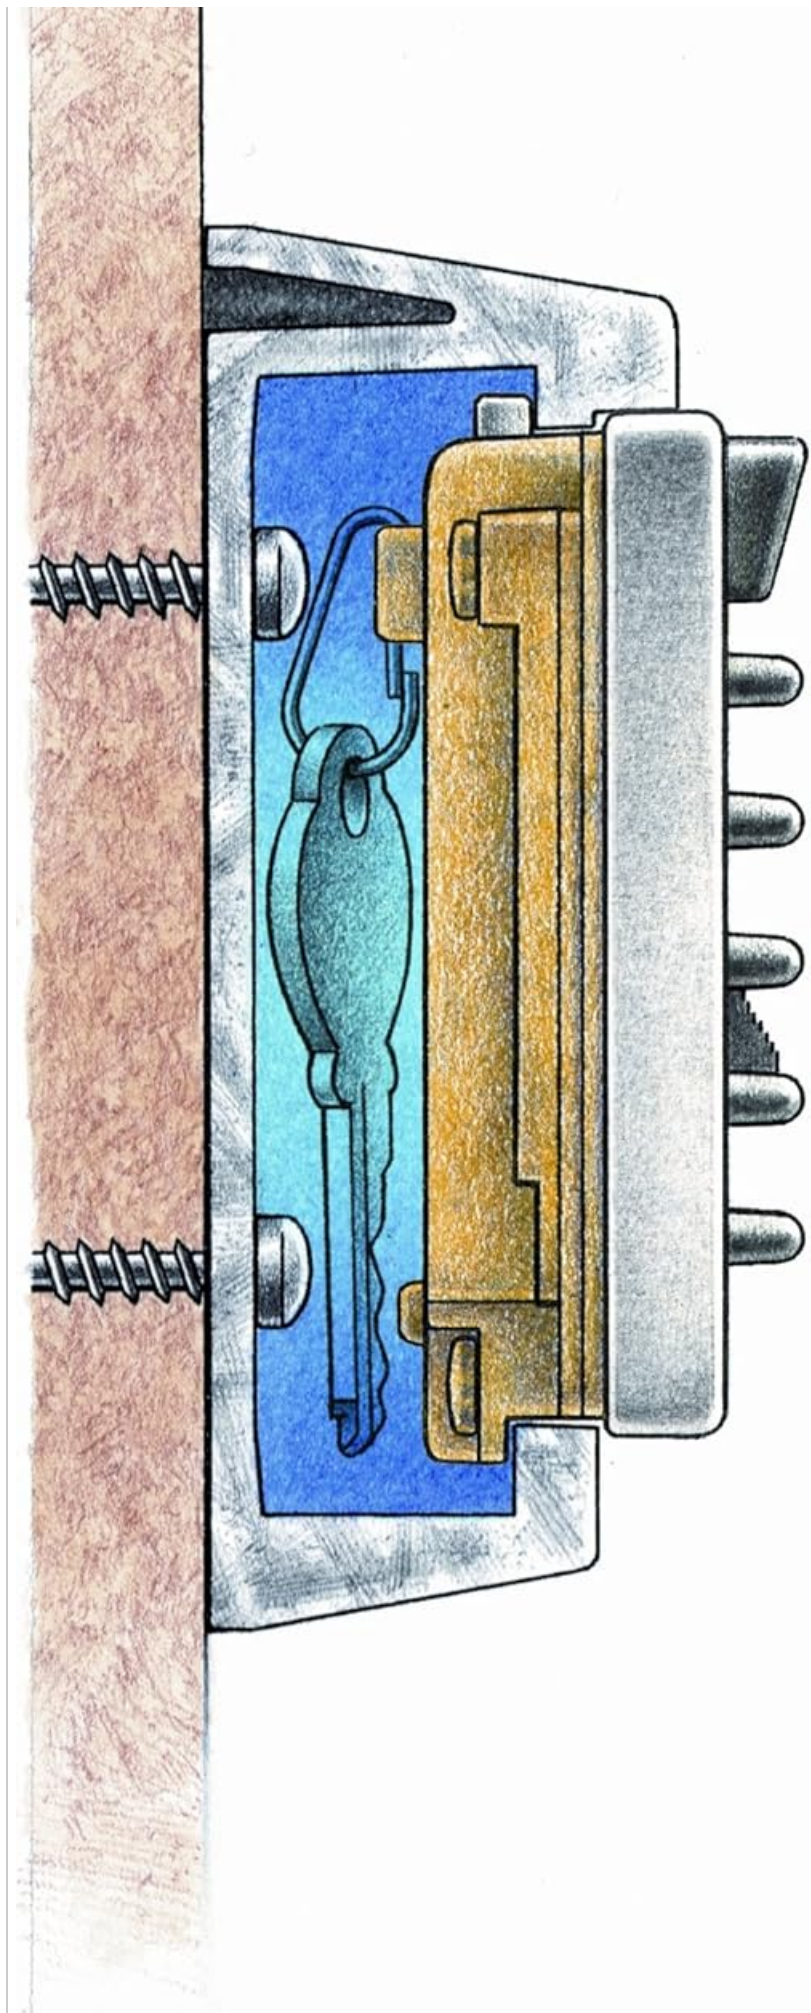


Image 2: An illustration depicting the internal structure of the KeySafe lock box, highlighting the mounting screws and the

key hook inside the compartment. The diagram shows how the unit is secured to a wall.

3.2 Setting the Combination

The KeySafe uses a push-button combination system with over 1,000 personalized combinations available. The combination can be changed at any time for enhanced security. Instructions for setting the new combination are typically found on a card located inside the lock box lid, which also functions as a screwdriver for adjusting the internal pins.

Video 1: A demonstration of how to easily change the combination on the Kidde KeySafe lock box. The video highlights the internal mechanism for setting a new code using a small tool or the provided card.

4. OPERATION

4.1 Opening the KeySafe

1. Enter your personalized push-button combination.
2. Press the 'OPEN' button or slide the release mechanism (depending on model) to open the front cover.

4.2 Storing Keys

The Slimline KeySafe can hold up to two standard keys. Place the keys securely on the internal hook or within the compartment.



Image 3: An image showing two keys placed inside the open compartment of the Kidde AccessPoint KeySafe lock box, demonstrating its storage capacity.

4.3 Closing the KeySafe

1. Ensure keys are properly placed inside the compartment.
2. Close the front cover firmly.
3. To re-lock, you may need to re-enter the combination and slide the 'CLEAR' button or reset mechanism to secure the cover.

Video 2: A user demonstrating the opening and closing procedure of the Kidde KeySafe, including how to retrieve and store keys. This video provides a practical guide to daily operation.

Video 3: A hands-on review of the Kidde KeySafe lock box, showing its installation and basic functionality, including how to open and close the unit.

5. MAINTENANCE

The KeySafe is constructed from durable alloy steel and is designed to withstand various environmental conditions. While it is weather-resistant, regular inspection for debris or wear is recommended, especially if installed outdoors. Keep the push-buttons clean and free from obstructions to ensure smooth operation.

Video 4: A long-term review of the Kidde lock box, highlighting its durability and performance after five years of outdoor use, demonstrating its robust construction.

6. TROUBLESHOOTING

6.1 Forgotten Combination

If the combination is forgotten, opening the lock box without the correct code can be challenging. It is crucial to remember your chosen combination. The mounting screws are installed from the inside, making removal difficult if the box cannot be opened.

6.2 Difficulty Opening/Closing

Ensure all combination buttons are correctly pressed and the 'CLEAR' button is engaged before attempting to open or close. Check for any debris obstructing the buttons or the cover mechanism.

7. SPECIFICATIONS

Feature	Detail
Brand	Kidde
Model Number	001170
Product Dimensions	3.3"D x 7.4"W x 2.7"H
Lock Type	Combination, Key
Color	Titanium Gray
Capacity	2 keys
Material	Alloy Steel
Mounting Type	Wall Mount
Item Weight	1 Pound
Water Resistance Level	Not Water Resistant
UPC	090928011707

8. WARRANTY AND SUPPORT

The Kidde AccessPoint 001170 KeySafe comes with a **1 Year Limited Warranty**. For further support, product information, or to explore other Kidde products, please visit the official Kidde Store: [Kidde Store on Amazon](#).

